

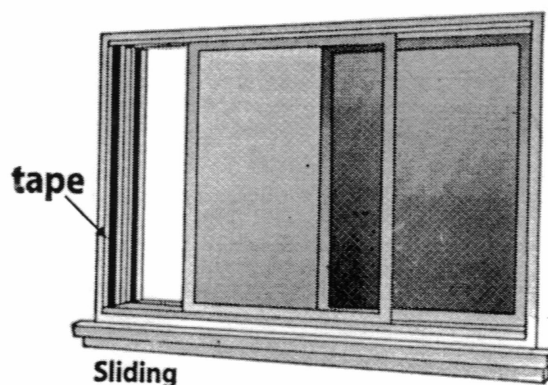
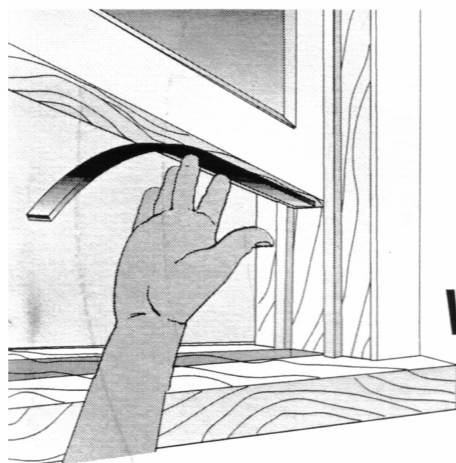
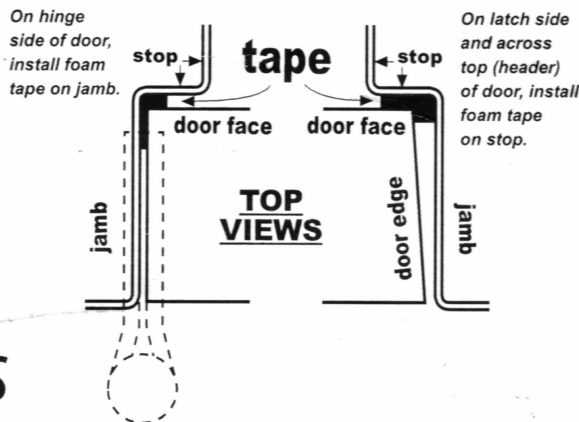
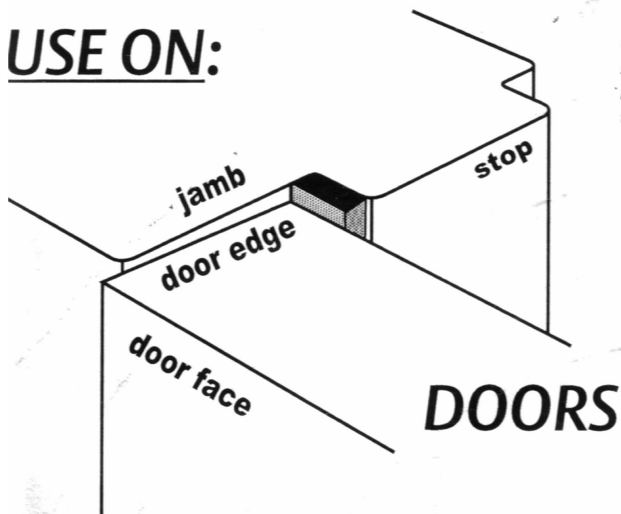


USE ON:

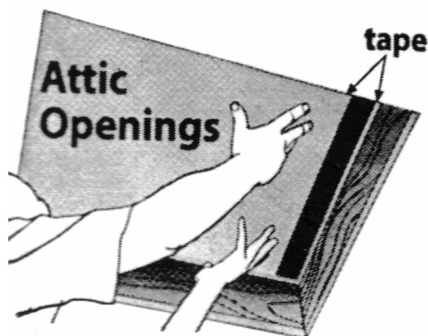


WINDOWS

CAR TRUNKS

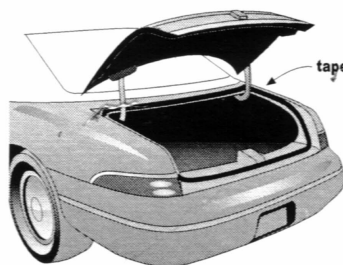

CAR DOORS

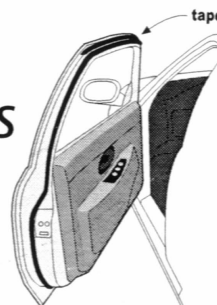

Installation Instructions:

1. Apply to clean, dry surface.
2. Peel protective backing from starting end of roll.
3. Locate and press end of tape in place.
4. Working the length of tape, press in place as you continue to remove protective backing.
5. As you approach desired length, cut to fit before removing all the protective backing.



PEMKO
ASSA ABLOY

ASSA ABLOY, the global leader in door opening solutions

UNITED STATES:

MEMPHIS, TN
Ph: 800.824.3018
Fax: 800.243.3656

VENTURA, CA
Ph: 800.283.9988
Fax: 800.283.4050

CANADA:

VANCOUVER, BC
Ph: 877.535.7888
Fax: 877.535.7444

TORONTO, ON
Ph: 866.243.9816
Fax: 866.243.9817