


Installation Instructions:

1. Pre-cut the hinge jamb, strike jamb and header pieces to fit before installing. Do not install as one continuous piece - cut adhesive gasketing at a 45° angle at the corners where the top and sides meet.
2. Remove approximately 24" (61 cm) of backing from the adhesive gasketing strip. Be careful not to touch adhesive or drag the adhesive on ground.
3. Position the adhesive gasketing as illustrated on the lower left. DO NOT STRETCH MATERIAL. The use of a hand roller is highly recommended.
4. Remove the next 24" (61 cm) of paper backing and repeat (2.) until the entire length for a top or side is installed. If a pre-cut length overruns a top or side, stretching has occurred. Immediately remove and reset.
5. Once installed, apply firm pressure along the entire surface of the product to ensure proper adhesion to the frame!

AM44

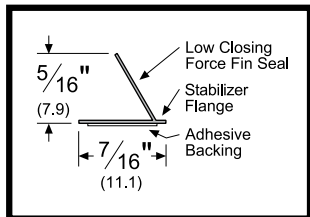

Actual Size



ASSA ABLOY

ASSA ABLOY, the global leader
in door opening solutions

UNITED STATES:

MEMPHIS, TN
Ph: 800.824.3018
Fax: 800.243.3656

VENTURA, CA
Ph: 800.283.9988
Fax: 800.283.4050

CANADA:


VANCOUVER, BC
Ph: 877.535.7888
Fax: 877.535.7444

TORONTO, ON
Ph: 877.535.7888
Fax: 877.535.7444

© 2011 Pemko Manufacturing Co.
AM44D17_INS
Rev 1 - 08.08.11



AM44

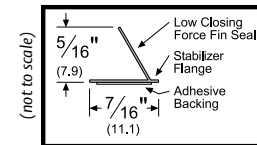

ANTIMICROBIAL SILICONSEAL

Tested and Classified for Fire and Smoke



Adhesive Gasketing

Use on Door Frames to Seal Top and Sides of Door


- Adhesive backed.
- High temperature silicone.
- Seals against smoke, fire, air, sound and weather.
- Longest-lasting commercial grade door seal.
- Self-extinguishing and non-toxic.
- Unaffected by sunlight, ozone and ultraviolet rays.
- Impervious to fungus and mildew.
- Excellent compression; door latches easily.



Gasketing material for fire doors intended for application to listed steel frames and/or classified steel covered composite, hollow metal doors rated up to and including 3 hours; wood and plastic covered composite doors rated up to and including 1-1/2 hours; and wood core doors rated for 20 minutes.



AM44D17
Dark

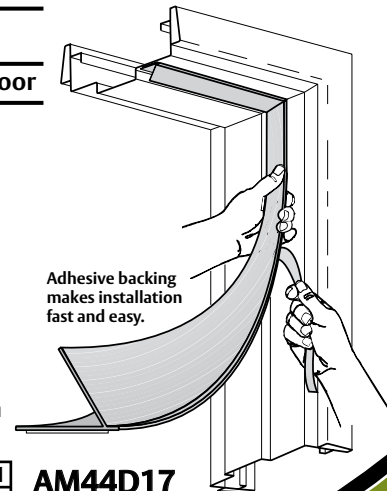



Read before installation! **Failure to do so may result in improper adhesion.**

Storage and shelf life: All adhesive gaskets have a limited shelf life. This product must be used within 6 months of purchase and must be stored between 50°F and 100°F.

Before installing: Thoroughly clean the frame with the enclosed cleansing towelette to remove grease, dust or cleanser build-up. Before installation, wait for frame surface to completely dry (evaporate). Some hospital environments have wax or anti-bacterial cleanser build-up. As an alternative or substitute cleanser, use isopropyl (rubbing) alcohol. Note: Mineral spirits or other petroleum based cleaning products should NOT be used.

Application temperature: If frames are too cold (below 50°F) or too hot (above 100°F) adhesion may be impaired.

When to install:

- Installation should take place after construction is completed, flooring is installed and final cleaning is completed.
- Paint on frame must be cured for at least 5-7 days. Paint cannot be wet under dry surface when gaskets are pressed on. Avoid quick-dry primers, which leave a powdery surface preventing sufficient adhesion. When applying to a wood frame, the surface must be non-porous and sealed. Follow standard industry guidelines on sealed wood frames and/or rough surface before applying. Note: Anti-bacterial, anti-fungal or silicone additives in paint may inhibit adhesion.

Application tips and warnings:


- Do NOT stretch material. Product can retract or shrink if stretched.
- Use very firm, perpendicular pressure when applying. Use wallpaper seam roller to reinforce adhesion after applying.
- Do not stretch material when using seam roller. Run roller with up and down motions.
- Double check adhesion after 2-3 hours before leaving job overnight.
- If gasket separates from frame, press again with firm pressure in place. If adhesive strip is exposed, airborne dust may impede adhesion. Replacement may be necessary.
- Application at header can be awkward due to overhead condition. Be sure to apply enough pressure.

NOTE: Adhesion takes delayed set. Immediate removal and resetting can be done if error occurs in initial placement. Do NOT reset after one hour. Full set is reached in 24 hours.

WHERE TO INSTALL:

HINGE JAMB

Application is acceptable anywhere along jamb face (door must be able to operate properly).

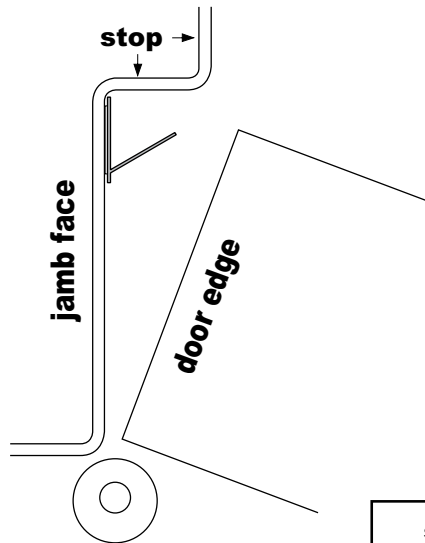


HEADER

Application is acceptable anywhere along jamb face (door must be able to operate properly).



STRIKE JAMB

Application is acceptable anywhere along jamb face (door must be able to operate properly).

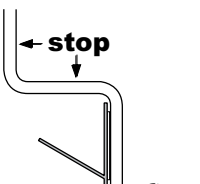

door face

jamb face

