

WEATHERIZATION PRODUCTS

Applies to the following products: P240, P241, P241-30, P242, P243, P244, P260, P261, P262, P263, P264, P265, P266, P380, P381, P384, P385, P386, P387, P388, P390, P391, P392, P393, P394, P396, P397, P398, P484, P490, P491, P493, P497

Effective Temperatures:


Products effective between -20°F & 200°F (-29°C & 93° C): **P260, P261, P262, P263, P264, P265, P266, P385, P386, P240, P241, P241-30, P242, P243, P244**


Products effective between -20°F & 150°F (-29°C & 65° C): **P380, P381, P384, P387, P388, P484**Products effective between 0°F & 200°F (-17°C & 93° C): **P390, P391, P392, P393, P394, P396, P397, P398**


Tools Required:



Installation Instructions:

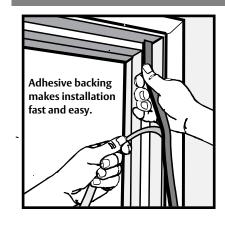

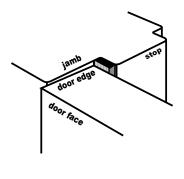

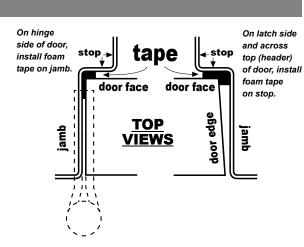

- 1. Apply to clean, dry surface.
- 2. Peel protective backing from starting end of roll.
- 3. Locate and press end of tape in place.
- 4. Working the length of tape, press in place as you continue to remove protective backing.
- 5. As you approach desired length, cut to fit before removing all the protective backing.

www.pemko.com