


# RESIDENTIAL THRESHOLD

Applies to the following thresholds:


**146, 147, 136, 2813**

## Tools Required:



## Installation Instructions:

Top (plan) view of door opening (out-swing type)

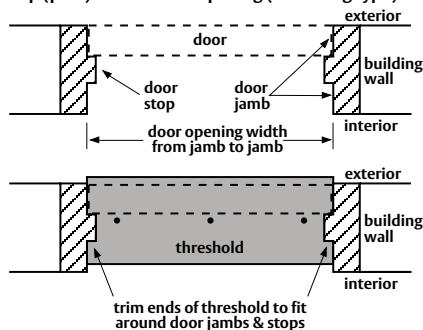

1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops. Position flat (or top) portion of threshold directly under door. Lower slope should point to the exterior. Follow steps 1 and 2 to install the pan.
3. Drill pilot holes in floor through pre-drilled holes in threshold.
4. Caulk ends of threshold (important for effective sealing and moisture control).
5. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)
6. Caulk around mounting screws as needed.