


COMMERCIAL THRESHOLD

Applies to the following threshold: **174, 1951**


Testing/Ratings:



Tools Required:



Installation Instructions:

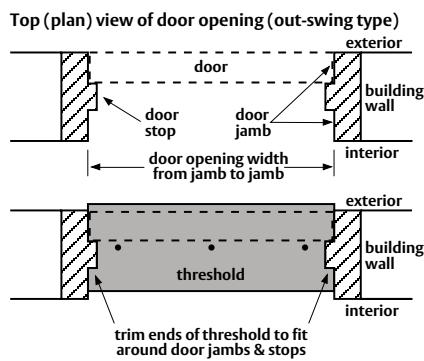

1. Carefully cope to fit within the frame opening.
2. Use a sealant or compound at all edges and joints.
3. Fasten with screws provided.