

VINYL THRESHOLDS

Applies to the following thresholds:


ADJ232V8, ADJ232V14

Testing/Ratings:




Category J gaskets for use with Classified swinging type fire doors of the hollow metal type or steel covered composite type fire doors, rated up to and including 1-1/2 hours or wood core fire doors rated up to 3/4 hour.

Tools Required:

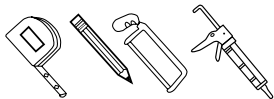

Installation Instructions:

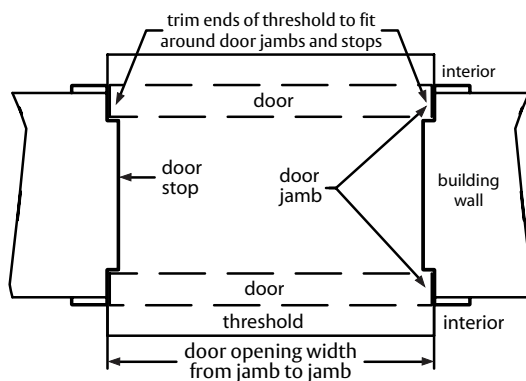

1. Measure door opening at the sill with a tape measure by measuring frame rabbet to frame rabbet.
2. Transfer measurement to vinyl threshold and safely cut the threshold to length. Notch corners of threshold to fit around the stop on the door frame as necessary.
3. Cut center section to width if needed.
4. Trial fit the threshold to verify proper fit. Re-cut as necessary.
5. Apply glue to concrete or plywood sub floors using readily available construction adhesives such as Liquid Nails®. These adhesives can be purchased by the installer at local hardware stores.

NOTE: Adhesives should be suitable for use with vinyl. Adhesives underneath the threshold could add as much as 1/32" to 1/16" of height and should be considered when calculating the needed clearance for the door undercut. If threshold is to be used with carpeting, insert carpet into the threshold openings before fitting the threshold into place at the sill. Clean up any excess glue prior to drying.