

Architectural Door Accessories

ASSA ABLOY

Pemko Residential Threshold

The global leader in
door opening solutions

Applies to the following products:


149_T, 205_T, 2051_T

Installation Instructions:


1. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
2. Trim ends of threshold to fit around door jambs and stops. Position threshold so that vinyl seal contacts face of door along entire width when door is closed (see above illustration).

NOTE: Trim seal 1/16" longer than threshold at each end.

3. Drill pilot holes in floor through pre-drilled holes in threshold.
4. Caulk ends of threshold, and under full length of legs (important for effective sealing and moisture control).
5. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)

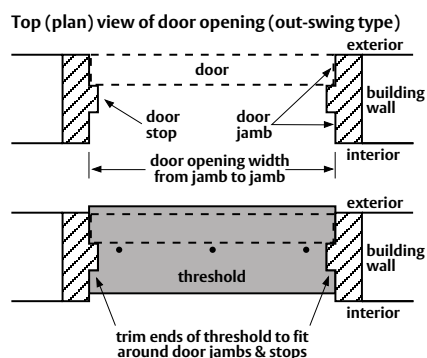


Tools Required:



Testing/Ratings:

Gasketing material for fire doors intended for application to listed steel frames and/or classified steel covered composite type, and hollow metal type fire doors rated up to 3 hours; wood and plastic covered composite type fire doors rated up to 1-1/2 hours; and wood core type fire doors rated up to 20 minutes. (Thresholds may or may not contain gasketing material).

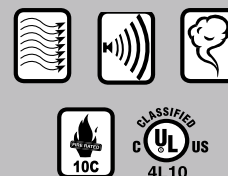

www.pemko.com

MEMPHIS, TN USA VENTURA, CA USA VANCOUVER, BC CA TORONTO, ON CA
P: 800 824-3018 P: 800 283-9988 P: 877 535-7888 P: 877 535-7888
F: 800 243-3656 F: 800 283-4050 F: 877 535-7444 F: 877 535-7444

Copyright © 2017 Pemko Manufacturing Co., an ASSA ABLOY Group company. All rights reserved.
Reproduction in whole or in part without the express written permission of Pemko Manufacturing Company is prohibited.

RT15_WEBINS
Rev 3 - 01.25.17
Page 1 of 1