

Installation Instructions:

1. Decide where you are going to install the Lock. Consider security, convenience, and possible glass breakage and door construction when making your installation location selection.
2. Close Sliding Door tight.
3. With the locking bolt in the unlocked position, place the lock in the desired installation location with a clearance between the end of the bolt and the location that the bolt hole will be drilled.
4. Mark the screw holes and drill 1/8" holes to install the screws.
5. Close the door tight and extend the lock bolt, mark the bolt hole location. Carefully drill a pilot hole and follow with a 1/2" hole for the lock bolt. Note: A small dab of lip stick can be placed on the end of the bolt to mark the center of your bolt hole location.
6. Check locking and unlocking operation.
7. Install plugs to cover screw holes and strike plate if desired.

CAUTION: Be careful not to drill into embedded glass or create enough vibration to cause glass to break. Consider security, convenience, possible glass breakage and door construction in making your lock and installation selection.

TIP: You may add another hole with the door open a few inches for ventilation.

Instrucciones de Instalación:

1. Decida en donde va a instalar la cerradura. Tenga en consideración algunas medidas de seguridad como, la posibilidad que el vidrio se quiebre, y la construcción de la puerta, cuando decida donde instalar.
2. Cierre la puerta cerradiza firmemente.
3. Ponga la cerradura en posición abierta y colóquela en la posición do de se va a instalar con un poco de distancia entre la punta del perno y la posición donde va a taladrar el agujero del perno.
4. Marque los agujeros para los tornillos y taladre agujeros de 3mm para instalar los tornillos.
5. Cierre la puerta y abra el perno para marcar la posición del agujero donde va localizarse el perno. Cuidadosamente taladre un agujero pequeño y continúe con un agujero de 13mm para el perno. Nota: un poco de lápiz labial puede ser usado para marcar el centro de donde va a taladrar el agujero para el perno.
6. Inspeccione que la cerradura abra y cierre.
7. Instale tapones para cubrir los agujeros si así lo desea.

Precaución: Tenga cuidado de no taladrar dentro del cristal incrustado o de crear mucha vibración que pueda causar que el vidrio se quiebre. Tenga en consideración algunas medidas de seguridad como, la posibilidad que el vidrio se quiebre, y la construcción de la puerta, cuando decida donde instalar.

Recomendación: Puede taladrar otro agujero con la puerta un poco abierta para ventilación.

Pro-Lok® And Entry Armor™ Are Trademarks Of Weinraub Enterprises, Inc. © 2009. www.ENTRYARMOR.com

Item # EPL-106-W



EPL-106-AL

UPC: 638246310951



EPL-106-W

UPC: 638246310968


Made in China

Installation Instructions


- 1** Unlock and remove bolt.
Note: Bolt may be inserted from opposite end to accomodate installation.




- 2** Mark and drill
2, 1/8" holes.

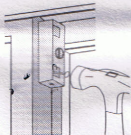


- 3** Mark location
for bolt and
drill 1/2" hole.

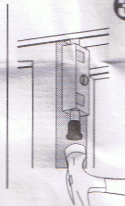


- 4** Attach lock to
frame and insert
plastic plugs.

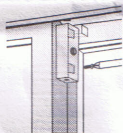


- 5** For ventilation,
open door 4" and
repeat step #3.

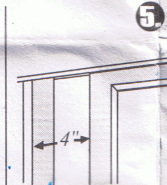


- 6** Install strike
as shown.

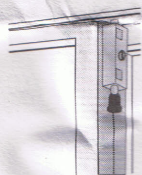

Install as shown
for inside
sliding doors



Install as shown
for outside
sliding doors.

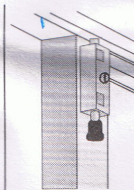

Large Strike

