



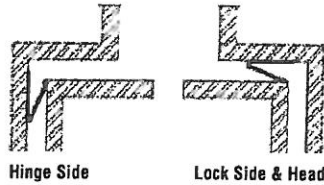

Box 459 - Rosemount, MN 55068
Phone 800-328-0953
Fax 800-334-8823



Perfec Seal Weather Strip

Part # 796

Important: All Self-Adhesive weatherstrip must be installed on clean, dry frames. Temperature should be above 50 degrees F.

1. Measure door head (frame width at top). Cut the gasketing material to this length. Remove release paper and install on door stop so flexible leaf compresses against stop, as shown. Install on lock jamb in same manner.

2. Cut hinge jamb to size and mount on frame so leaf compresses against the frame, as shown.

3. Operate the door several times to ensure the gasketing material is adjusted properly so as not to inhibit the door from self-closing and latching.



Positive Pressure Tested Gasketing Materials for Fire Doors. Intended for Application to/with listed steel frames and/or classified steel covered composite, hollow metal type fire doors rated up to 3 hours, wood and plastic covered composite type fire doors rated up to 1-1/2 hours, and wood core type fire doors rated up to 20 minutes.

Meets UL10B, UL10C
Meets CAN4-S104-2010
Category J. 17L5