



594 Roller Latch

ASSA ABLOY

ROCKWOOD®

The global leader in
door opening solutions

NOT TO SCALE

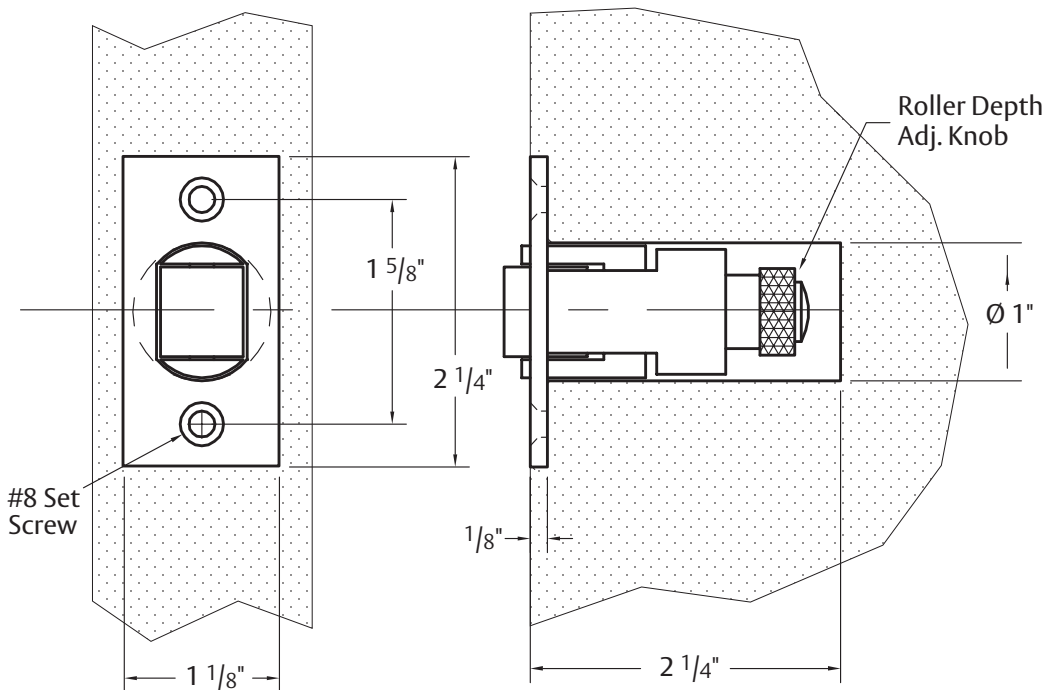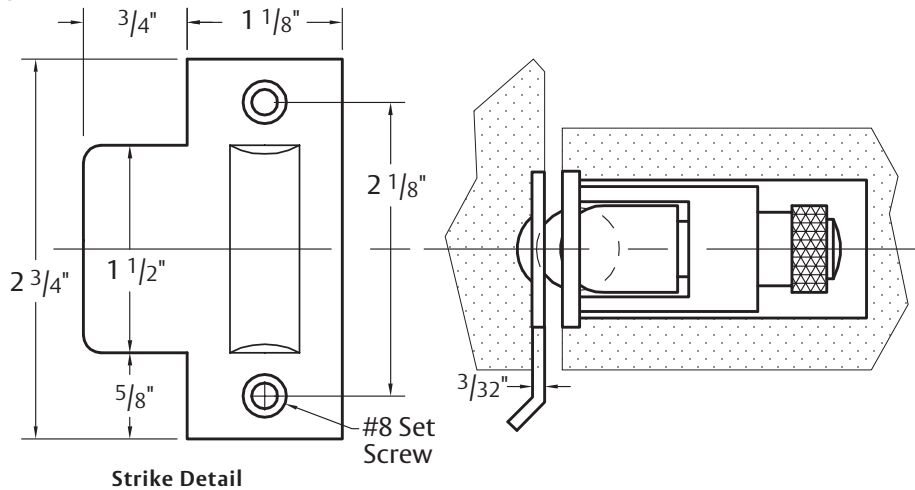

The roller latch can be mounted into the door and the strike into the frame or the strike can be mounted into the door and the roller latch into the frame depending on individual choice. Side jamb or header mounted.

Drill $\varnothing 1"$ hole x dp. $2\frac{1}{4}"$ for roller latch and mortise W $1\frac{1}{8}"$ x H $2\frac{1}{4}"$ x dp. $\frac{1}{8}"$ for face plate.

Mortise strike W $1\frac{1}{8}"$ x H $2\frac{3}{4}"$ x dp. $\frac{3}{32}"$ mortise W $\frac{1}{2}"$ x H $1\frac{3}{4}"$ x dp. $\frac{7}{32}"$ center section for roller groove.

Template T-594

Effective date: July 23, 2015
Supersedes: All Previous

NOTE: Rockwood reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.rockwoodmfg.com or call us at 800-458-2424