



## 900/901 Magnetic Catches

**Model 900**  
**Dual Double Plate**

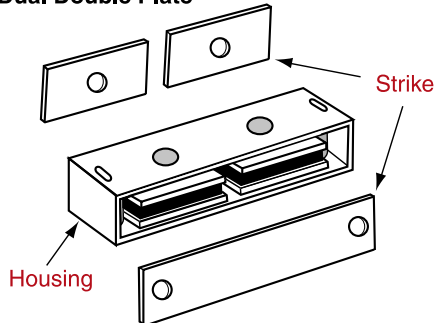


#900 (full strike) 6.6 lbs. avg. load  
#900 (single small strike) 2 lb avg. load

**Model 901**  
**Dual Triple Plate**

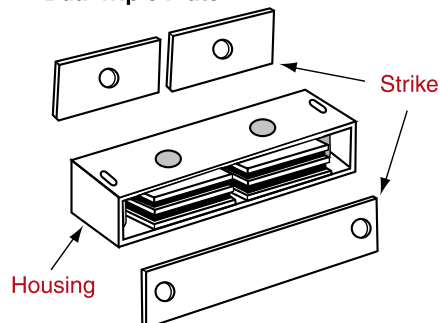


#901 (full strike) 10.4 lb. avg. load  
#901 (single small strike) 3 lb. avg. load

### Housing Installation

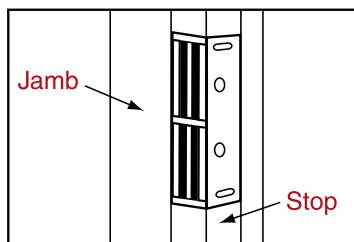


Locate housing approximately 1/8" in from the outside edge of door stop. Housing can be surface mounted or mortised into stop. If no door stop, locate the housing on the jamb approximately 1/8" in from the inside of the door in its closed position. Be sure the floating screw holes are centered in the adjustment slots. Apply the two long mounting screws to hold the housing (**DO NOT TIGHTEN COMPLETELY**).

### Strike Installation

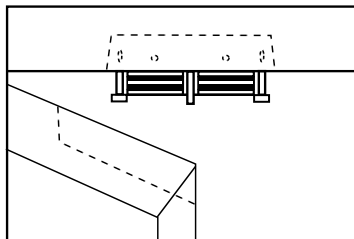

**Figure A**

Place strike(s) on the magnets with prongs facing the door. Close the door to mark the strike location with the prongs. Use long strike on single doors (**Figure A**), or use two small strikes on light pairs of doors with the housing centered on the jamb (**Figure B**). **NOTE:** Heavy pairs of doors require one catch for each door.

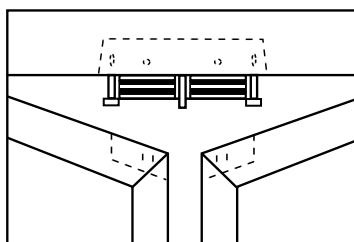

**Figure B**

Mount strikes and adjust housing for full contact to the magnets. Tighten screws.

**Template No.**  
**T-900/901**  
**Rev. 10/08**

**NOTE:** Rockwood reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at [www.rockwoodmfg.com](http://www.rockwoodmfg.com) or call us at 800-458-2424.