

18BFB Bottom Fire Bolt



INSTALLATION INSTRUCTIONS

Inactive Door

1. Measure 4" to 6" from bottom of the Inactive Door.
2. Drill a 9/16" dia. hole for 18BFB.
3. Install 18BFB by striking squarely with a hammer.

Active Door

1. Drill a 1-3/32" dia. hole for Plug at the same height as the 18BFB.
2. Install plug in door by striking with a hammer.

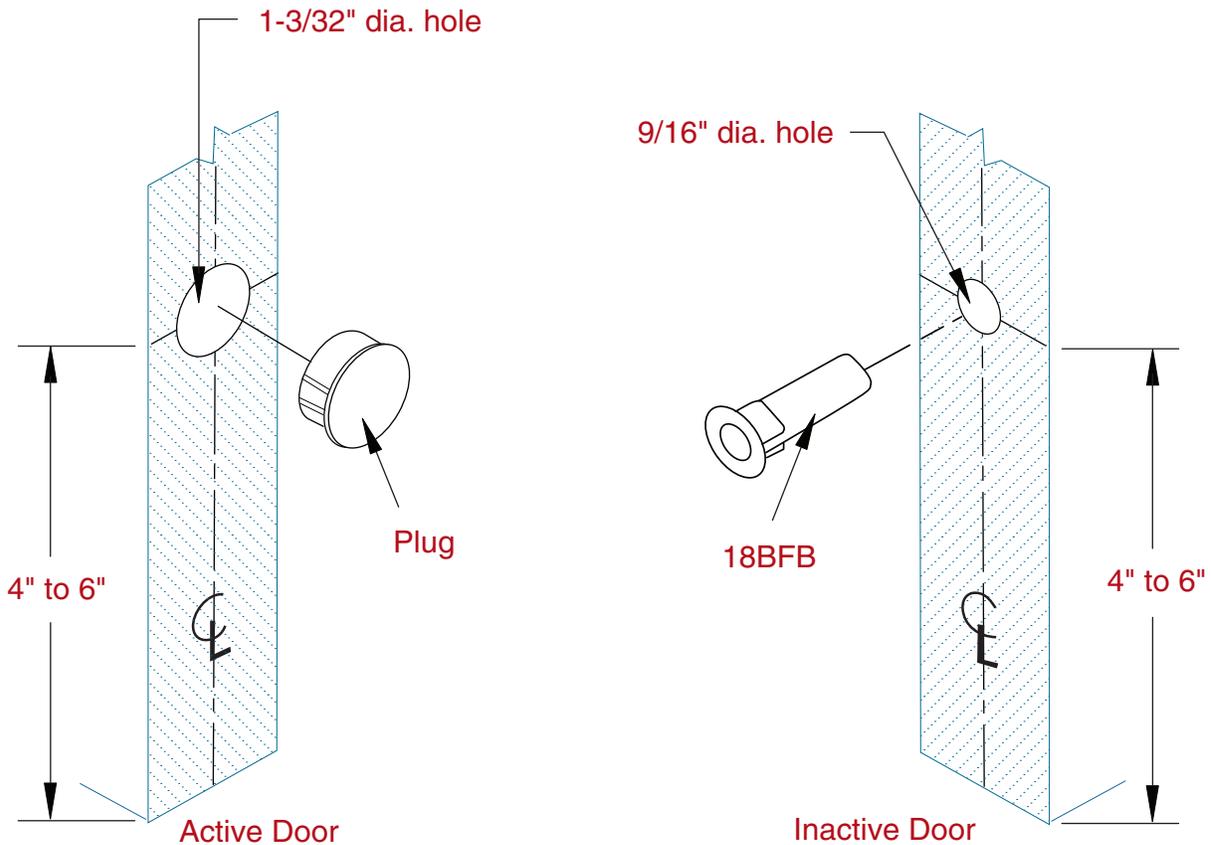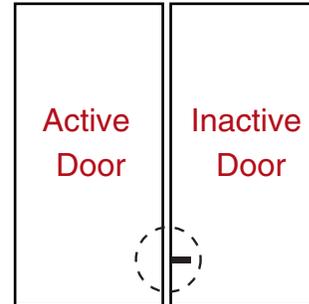

IMPORTANT: The 18BFB will project during a fire. Do not cover with any edge mounted door hardware.

Not To Scale

Template No.
T-18BFB
Rev. 10/31/03

NOTE: Rockwood reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.rockwoodmfg.com or call us at 800-458-2424.