






B571 / B581 / B581F




P515-748

B571 Thumbturn Deadbolt with Vacancy Indicator
B581/F Thumbturn Deadbolt with Blank Cover
Cerrojo de Pasador con Cubierta Llaná
Cerrojo de Pasador con Cilindro de Indicador
Pêne Dormant avec Couverture Plaine
Pêne Dormant avec Cylindre d'Indicateur

Installation Instructions
Instrucciones de instalación
Notice d'installation

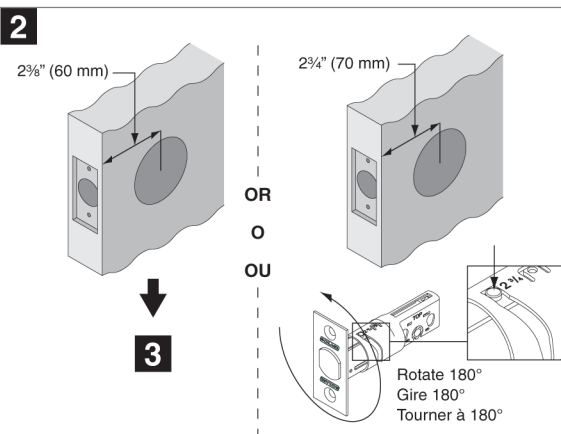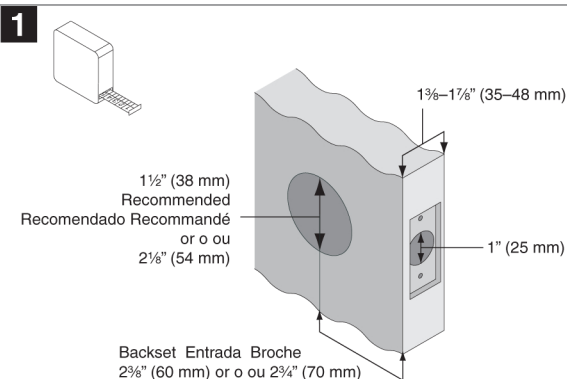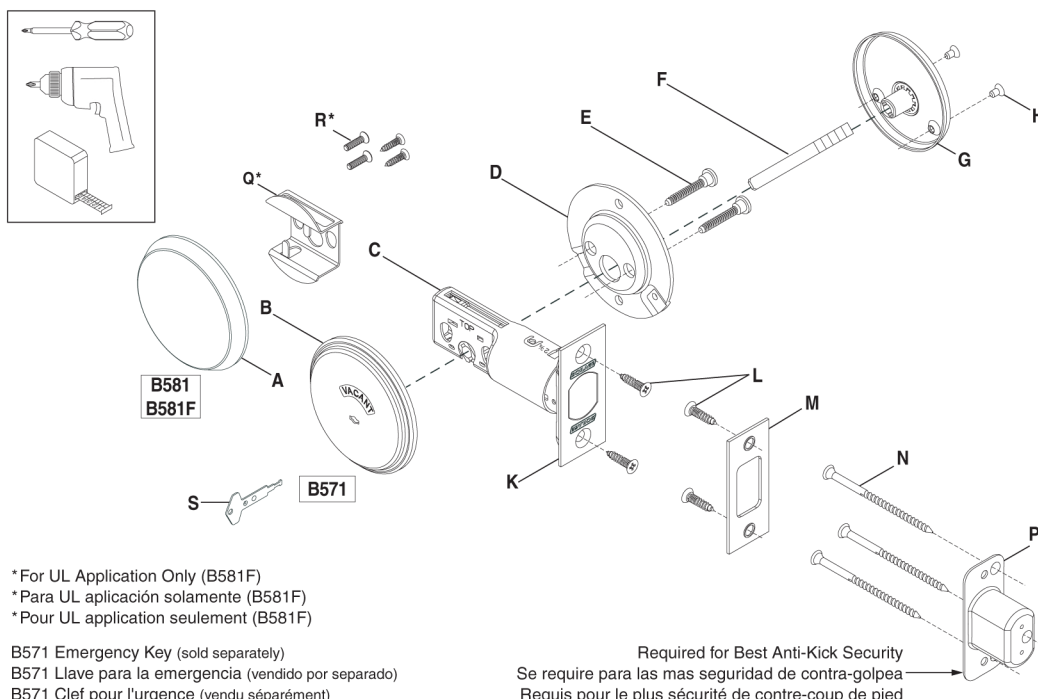

3 Choose Faceplate (K) to Match Door
Escoja la placa delantera (K) para emparejar la puerta
Choisir la têtère (K) pour égaler la porte



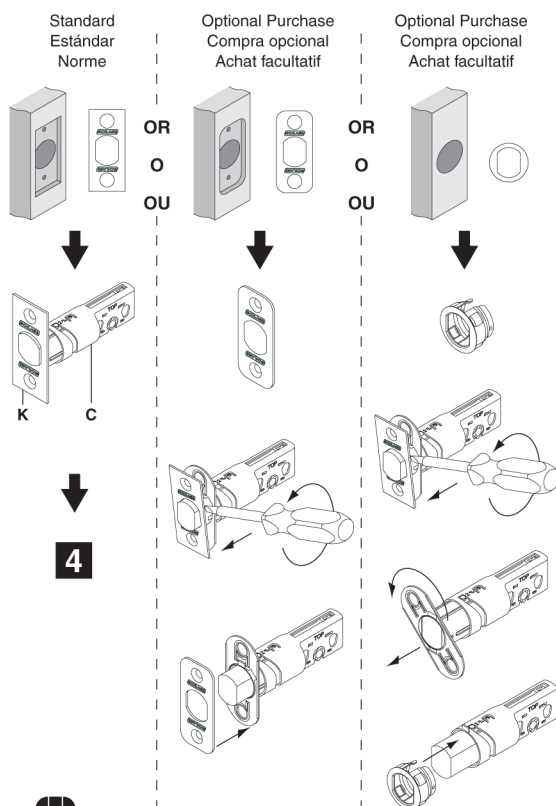


Customer Service Servicio al cliente Service à la clientèle
1-877-671-7011 www.allegion.com/us




© Allegion 2014
Printed in U.S.A.
P515-748 Rev. 01/14-e

- 4 B581F:**
2½" Hole Only: Insert UL Fire Cup (Q) Before Deadbolt
Agujero de 54 mm: inserte la taza de UL (Q) antes del pasador
Trou de 54 mm: insérer le tasse d'UL (Q) avant le pêne dormant

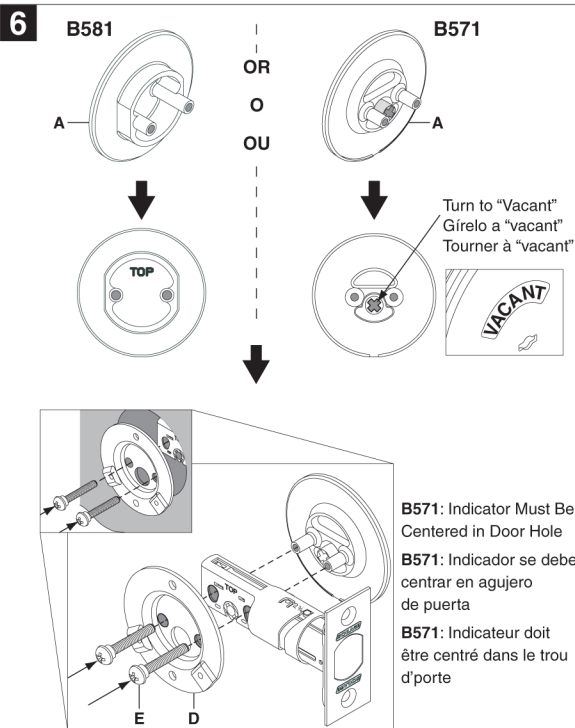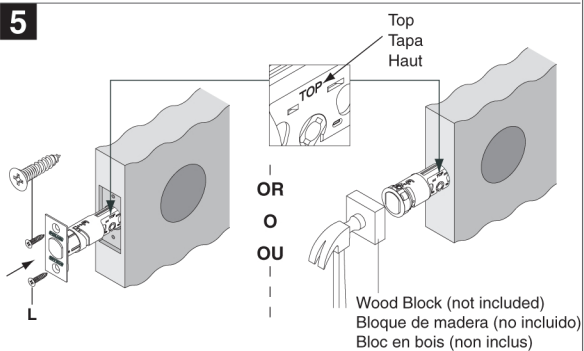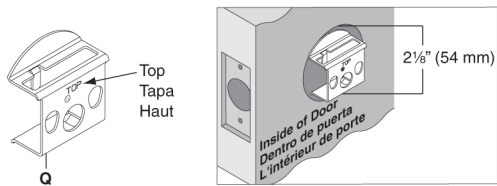

- 7 B581F: 1½" (38 mm) Hole Only**
Note: Screws (R) are required for UL/CUL Application
B581F: Agujero de 38 mm solamente
Nota: Los tornillos (R) son requerido para la aplicación de UL/CUL
B581F: Trou de 38 mm seulement
Note: Les vis (R) sont requis pour le application d'UL/CUL

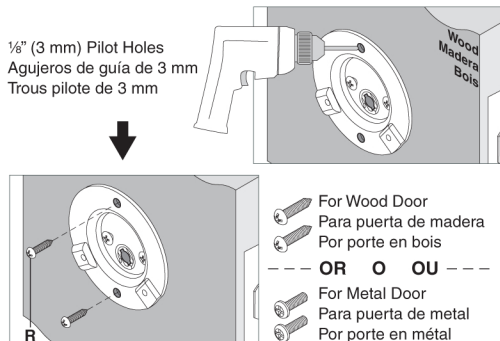

- 7 Determine Driver Bar (F) Length**
Determine el tamaño de la barra impulsora (F)
Determiner la longueur de la barre de transmission (F)

