




- These Instructions apply to AD-200/250-993-M, AD-300-993-M, AD-400-993-M, CO-100-993-M, CO-200-993-M and CO-200/250-993-M.
- Only applies for locks built after May 29, 2018.

Step: 1

Remove Screws as shown. Remove the Back Plate, Hub and Spring from the Outside Assembly, these are no longer needed.


Make sure Triangular symbols are aligned as shown in the image before performing the Step-2.

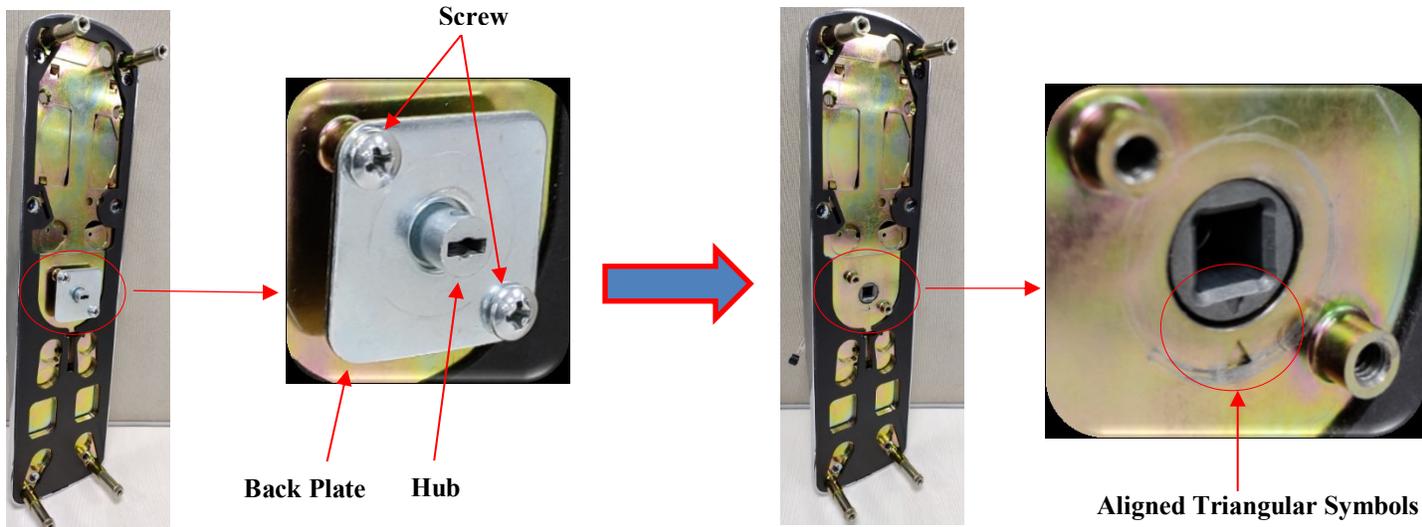

Step: 2

Install Spindle into Outside Assembly.

Make sure retaining ring orientation is as shown in the image.

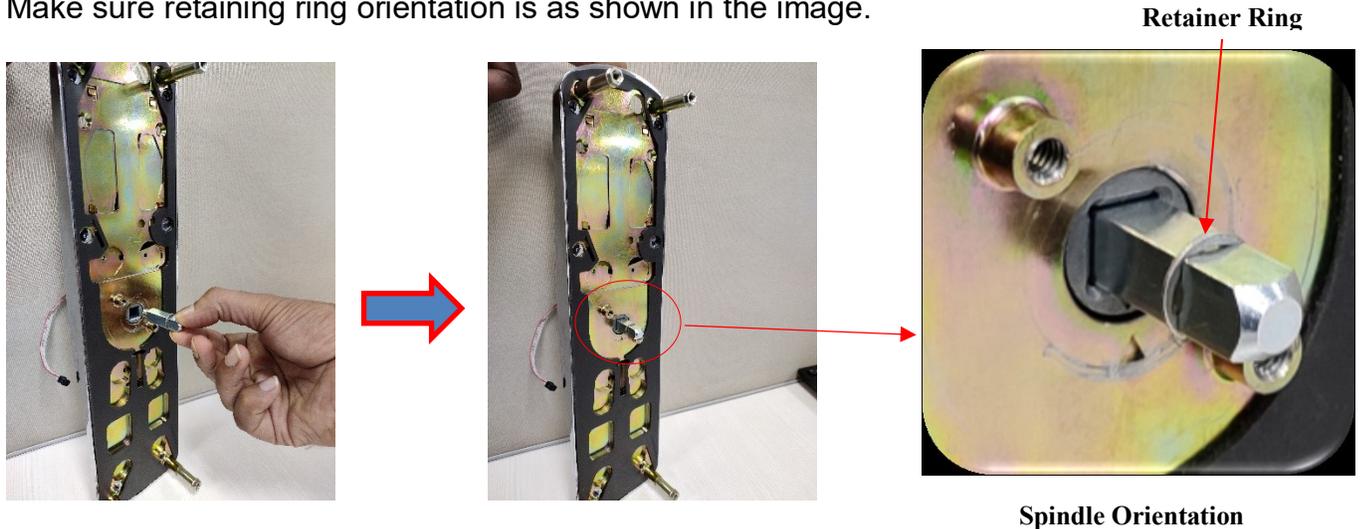

Step:3

Install Outside Assembly on the Door.

