


Latches


All ND-Series latches have one-inch diameter housing and adjustable faceplates for flat or beveled doors.

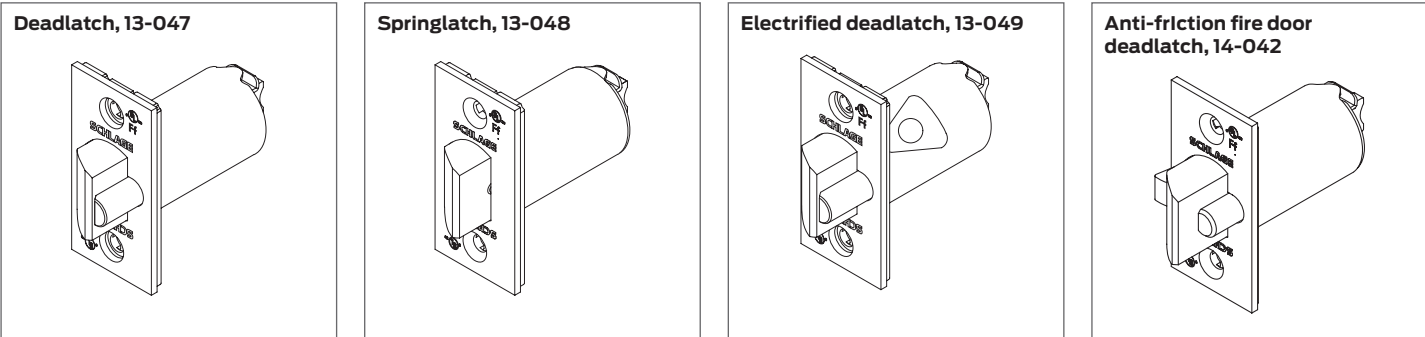

Backset	Description	Springlatch	Deadlatch
2 ³ / ₈ "	Square corner, 1 ¹ / ₈ " x 2 ¹ / ₄ "	—	14-047
	Square corner, 1" x 2 ¹ / ₄ "	—	14-048
2 ³ / ₄ "	Square corner, 1 ¹ / ₈ " x 2 ¹ / ₄ ", standard	13-048	13-047
2 ³ / ₄ "	Square corner, electrified latch, 1 ¹ / ₈ " x 2 ¹ / ₄ "	—	13-049
2 ³ / ₄ "	Anti-friction fire door latch, square corner, 1 ¹ / ₈ " x 2 ¹ / ₄ ", 3/4" throw	—	14-042
3 ³ / ₄ "	Square corner, 1 ¹ / ₈ " x 2 ¹ / ₄ "	14-010	14-028
5"	Backset extension link	—	43-005**
—	Rabbeted latch and strike kit, 605, 626 only	39-030*	


* Adapts square corner latch and 2 3/4" high square corner strike to 1/2" rabbeted door and frame preparations.

** Can only be used with 2 3/4" backset latch.

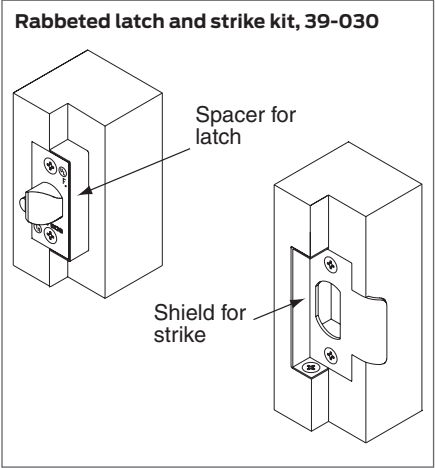

Installation tools and kits

Boring jigs and tools are designed to provide fast and accurate lock installation. Complete kits or individual tools can be ordered for preparing doors and jambs for Schlage products.

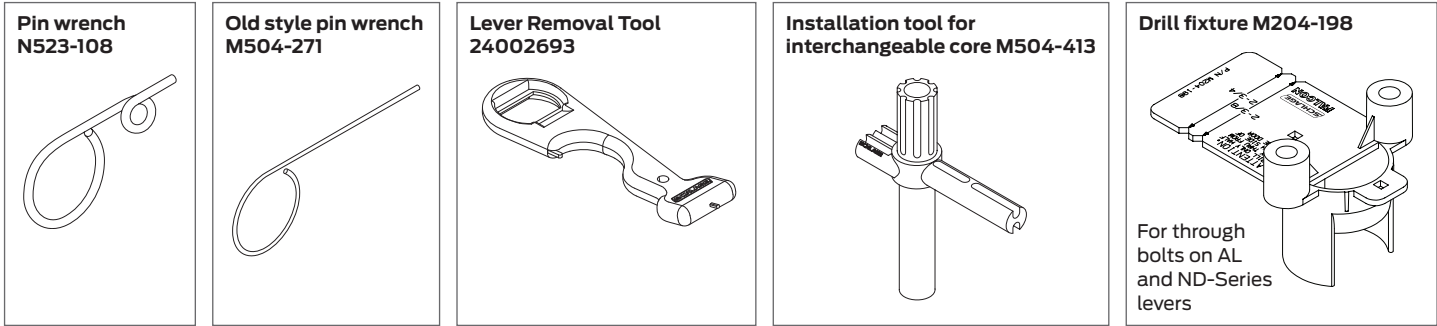

Reinforcement kit 37-001

Reinforcement kit 37-001 is used to reinforce and prevent the collapse of hollow metal doors when locksets are mounted. This kit should be used for installation in hollow metal doors to prevent lateral movement of the latch bolt. Extension link is included for long backset installations. Specify door thickness 1 3/8" or 1 3/4" when ordering.

