


# TEMPLATE FOR 34F SERIES MAGNALOCK (FACE MOUNT) !!! WARNING: DO NOT DRILL INTO MAGNET OR STRIKE FOR ANY REASON !!!

1. See installation instructions and Z-Bracket instructions for full information and troubleshooting.
2. The relationship between the two magnet mounting holes is critical. Do not let your markings or drilling wander.
3. Do not overdrill the diameter of the 3/8" [9.5mm] magnet mounting holes or the blind nuts will not seat.
4. Make sure the blind nuts are collapsed.
5. Do not over tighten the magnet mounting screws.
6. Be careful not to scrape the magnet cable when pushing it back into the frame.
7. The two rubber washers stack one on top of the other and mount in between the strike and the door around the center strike mounting screw. Do not place the washers on the roll pins.
8. Do not over tighten the strike mounting screw.
9. Make sure that the strike plate floats and pivots around the center mounting screw. This compensates for door misalignment. If the strike is mounted rigidly, the Magnalock will not hold.
10. Roll pin plastic bushings may be omitted if the lock is not a Senstat ("SC") version. If the bushings are not used, drill 3/8" [9.5mm] holes for the strike roll pins.
11. DO NOT PHOTOCOPY TEMPLATE (dimensions will change).

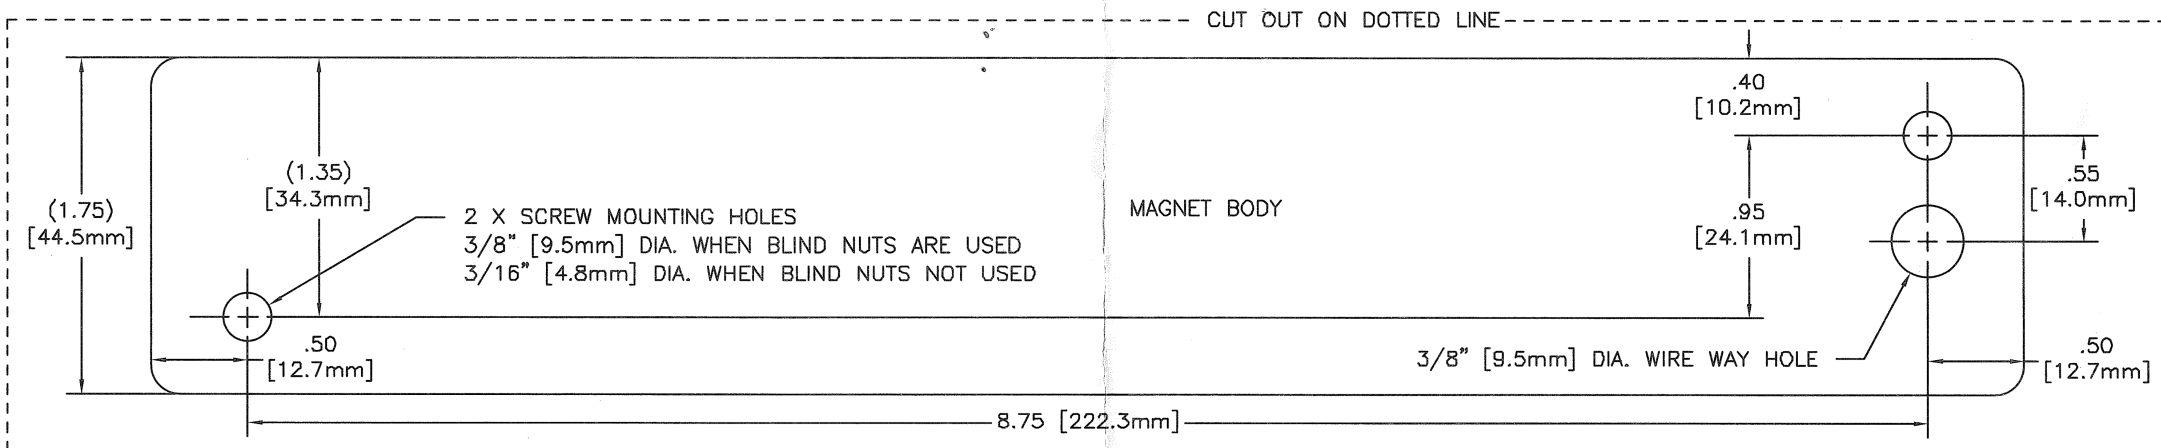

NOTE: THE MAGNET BODY TEMPLATE MAY BE REVERSED WITH THE CABLE EXIT MOUNTED TO THE RIGHT OR LEFT BY FLIPPING THE TEMPLATE AROUND IN THE UPSIDE DOWN POSITION.

