


Notes:

- Backset is measured from centerline of bevel which is centerpoint of door thickness.
- (*) When preparing doors for lead wrapped locks, add 1/8 (3.2) to dimensions marked (*) to allow proper clearance.
- 1-1/8 (28.6) strike lip suits frame for 1-3/4 (44.5) thick door, lip will vary for other door thicknesses.
- For preparation of trim, refer to separate template.
- For open back strike, refer to template T30606.
- Dimensions given in inches and (mm).

(11)

CAUTION: DOOR & FRAME MANUFACTURERS

When door gasketing or silencers are used, proper allowances must be made for strike location to maintain a common centerline with lock and door as shown so that bolt will freely enter strike.

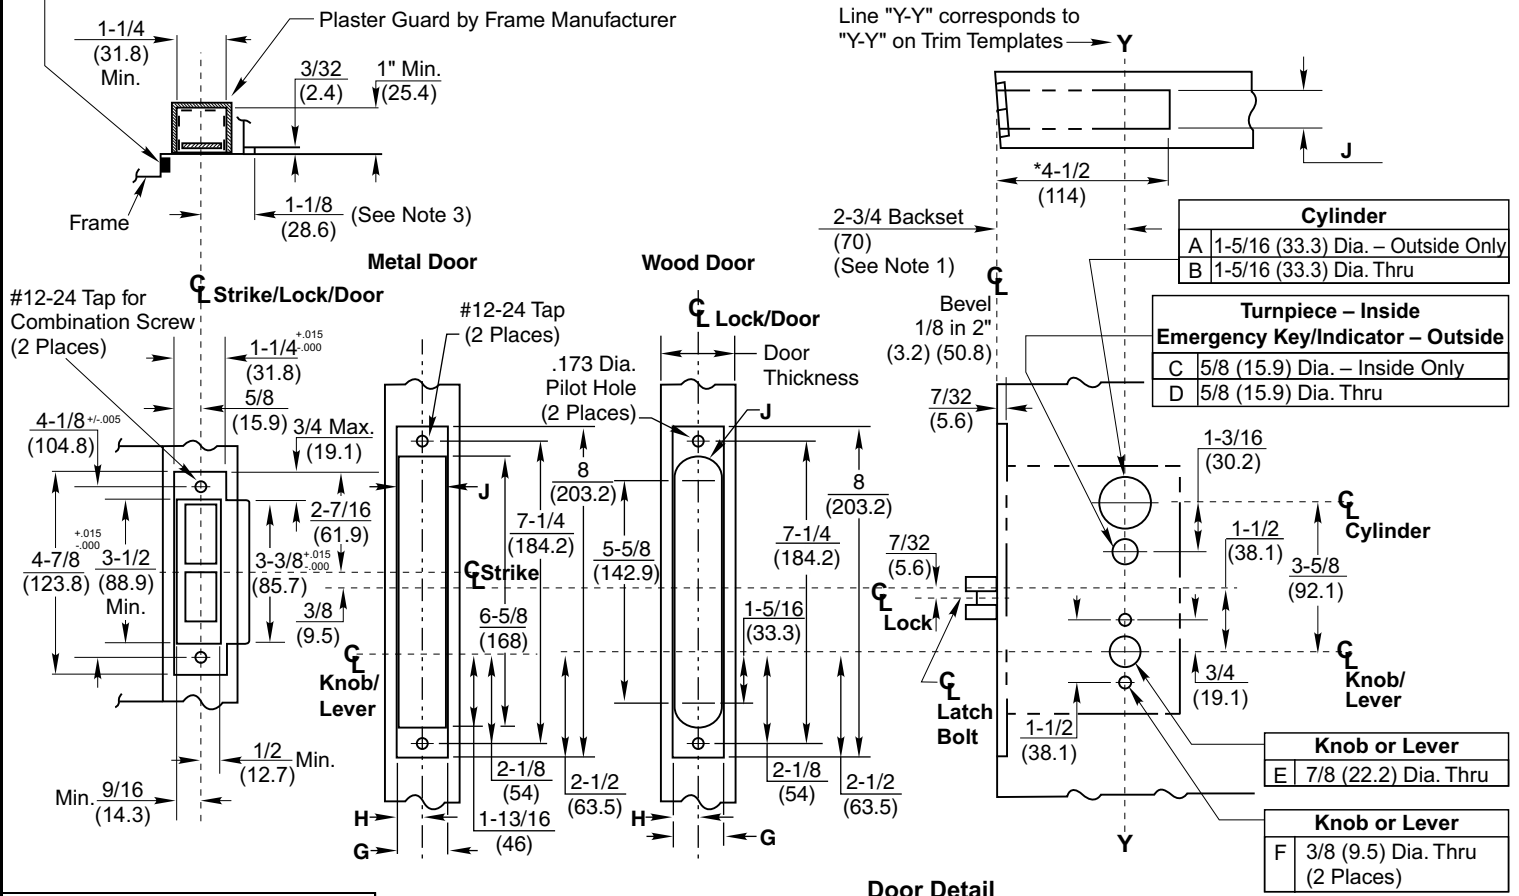

RESPONSIBILITY

DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

ML2000 Series Mortise Lock

**Corbin
Russwin**
ASSA ABLOY

www.corbinrusswin.com

SUPERSEDES T30600-10 DO NOT SCALE DRAWING
TEMPLATE NUMBER T30600-11 DATE 12-18