


345 TOP PIVOT
 PIVOT SHOWN ENGAGED

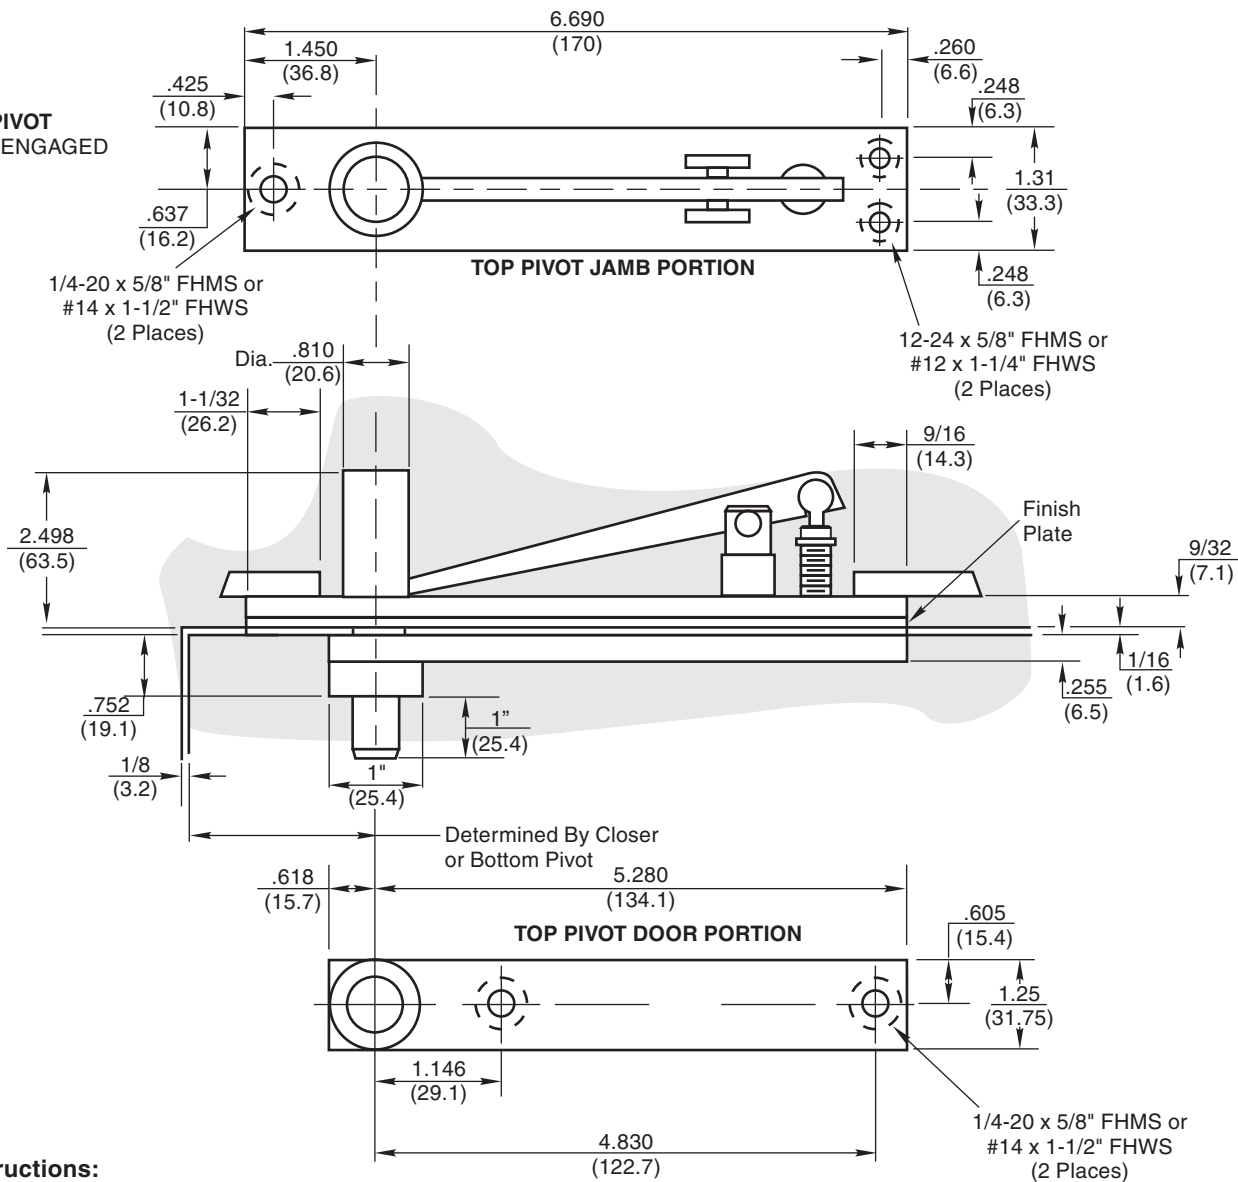

Installation Instructions:

1. Prepare door and frame per details shown.
Do not scale drawing.
2. To insure proper operation of door, the centerline of
the top pivot pin must be straight and plumb with
bottom spindle.
3. Install jamb portion with pin retracted.
4. Install door portion.
5. Place door on bottom pivot and raise door to vertical
position.
6. Engage top pivot pin by turning adjusting screw
clockwise when door portion is in alignment with the
jamb portion.

Do not scale drawing.
 All dimensions are in inches (mm).

345 Top Pivot
Center Hung Extended Pin
Non-Handed

RIXSON®
ASSA ABLOY

www.rixson.com

TEMPLATE NUMBER

IS-345

DATE

11-09