

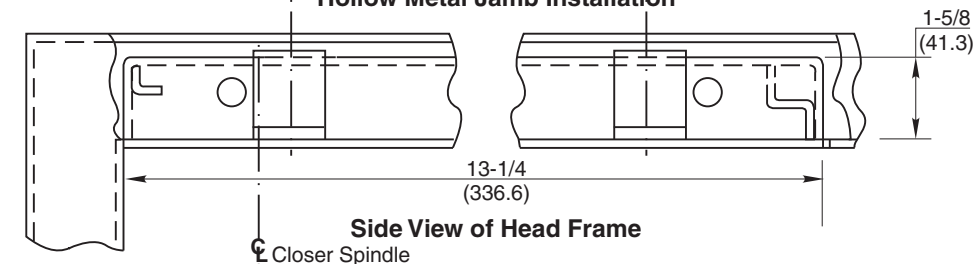


Hollow Metal Jamb Installation

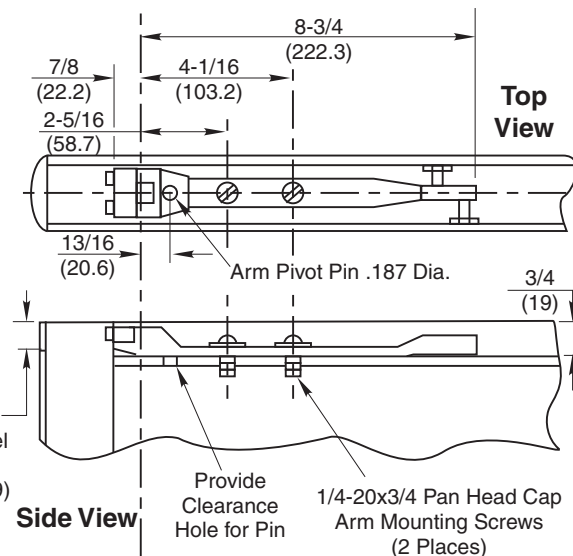

Side View of Head Frame

Close Spindle

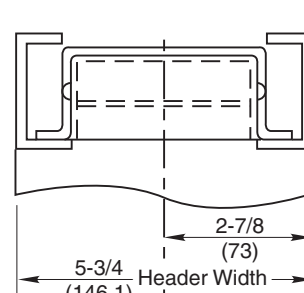


Top View

Side View

Step No. 3 Head Frame Installation


Under Side of Head Frame

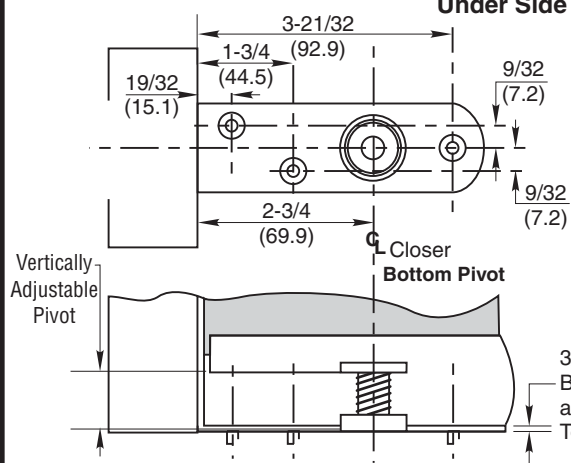


NOTES:

1. Do not scale drawing.
2. 2" (50.8) x 5-1/2" (139.7) minimum width head frame.
3. Single acting operation requires a door stop on the underside of frame.
4. Door radius recommended is 2-5/8" (66.7).
5. All dimensions given in inches (mm).

Step No. 1 Bracket (2 Req. by Others)

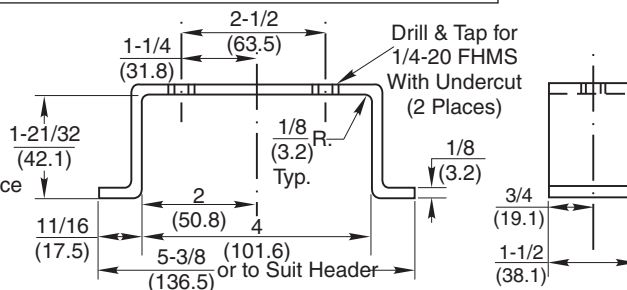

Step No. 2 Mounting Channel Assembly

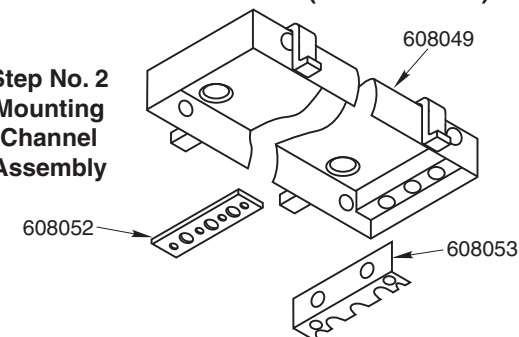

Side View (Bottom Pivot)

M608 Series Overhead Concealed Door Closer Center Pivoted for Metal Doors and Frames

RIXSON®
ASSA ABLOY

www.rixson.com

TEMPLATE NUMBER

OC60435

DATE

05-09