



## For **FLUSH** or **1/8"** **OFFSET DOORS**

## ONE DELUXE HINGE KIT

FOR 1/8" OFFSET DOOR INSTALLATION

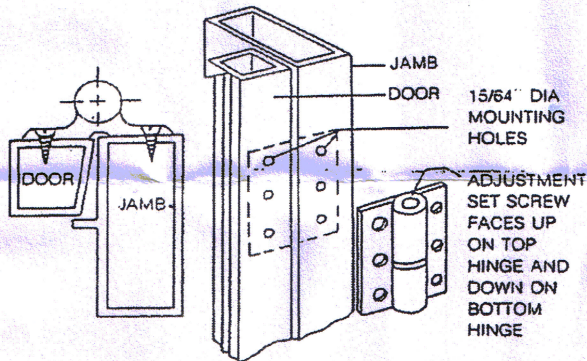

FOR FLUSH DOOR INSTALLATION

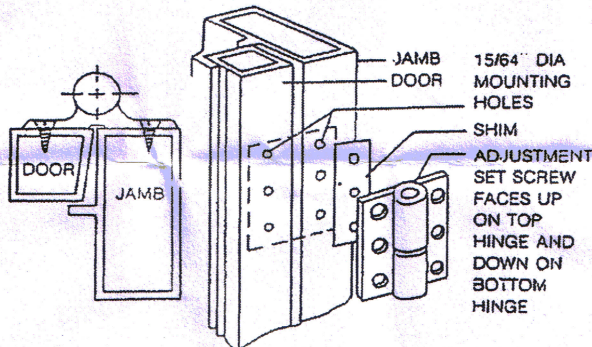

### CONTAINS

- 2 Roto Pin Hinges**
- 12 One-Way Screws**
- 4 Cover Strips**

CAN BE SUCCESSFULLY USED ON ALL TYPES OF COMMERCIAL DOORS & FRAMES UP TO 500 POUNDS.

### Quick and Easy to Install

- A. Remove old hinges
- B. Place Door into opening. Be sure to allow for proper clearance all around the door.
- C. -FOR 1/8" OFFSET DOOR INSTALLATION:  
Do NOT use Shim. There is a 1/8" offset built into these hinges. Lay one hinge into place so hinge adjustment screw MUST face UP on TOP hinge and DOWN on BOTTOM hinge
- FOR FLUSH DOOR INSTALLATION:  
Please use Shim. Lay one hinge into place with shim placed underneath the 1/8" offset leaf - but ALWAYS - on JAMB. Position of adjustment screw MUST face UP on TOP hinge and DOWN ON BOTTOM hinge.
- D. Use the hinge set as a template (do not take apart) and align center of barrel over center of gap, mark only center hole on each leaf
- E. Drill 15/64" diameter hole through jamb on each mark
- F. Use special burglar-proof self tapping screws
- G. Once hinges are set, drill the remaining 15/64" holes in each hinge leaf
- H. Peel away the backing from the Cover Strips and press into place

### Very Important - Please Note

When hinges are properly installed, the top hinge has the adjustment screw on the top and the bottom hinge has the adjustment screw on the bottom