


FOLD AND ALIGN TEMPLATE ON EDGE OF DOOR

TEMPLATE FOR WOOD OR METAL DOOR

Drill two 5/16" (8 mm) holes on
vertical center line
from outside of door.

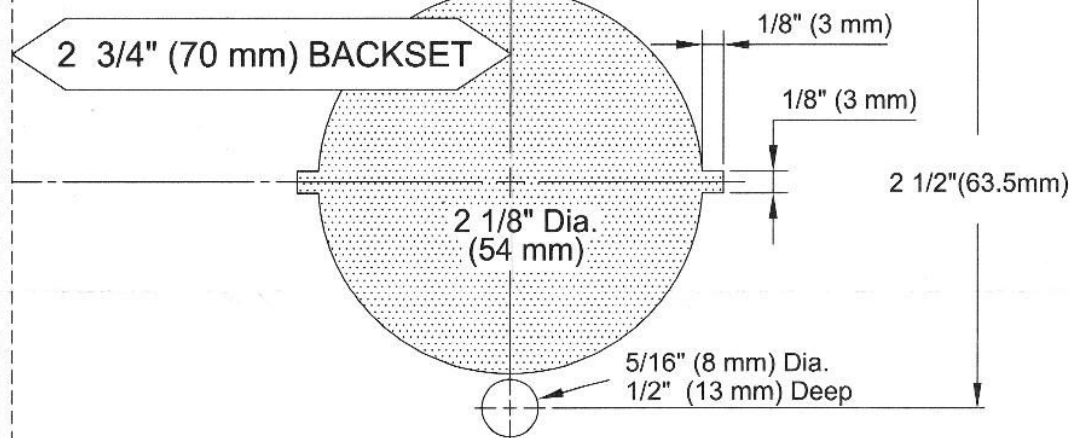

**PLACE TEMPLATE ON
HIGH EDGE OF BEVEL**

WD-OD002(400)