


6-3/4" Slide Action Bolt Installation Instructions

For gates and doors for sheds, patios and gardens
Heavy gauge steel construction
For left or right hand flush application
Can be used for out or in-swinging applications
Padlock eye for extra security (padlock not included)

Tools Needed:

- A. Pencil
- B. Adjustable Wrench
- C. Phillips Screwdriver
- D. Drill
- E. 1/4" and 1/8" Drill Bits
- F. Safety Goggles

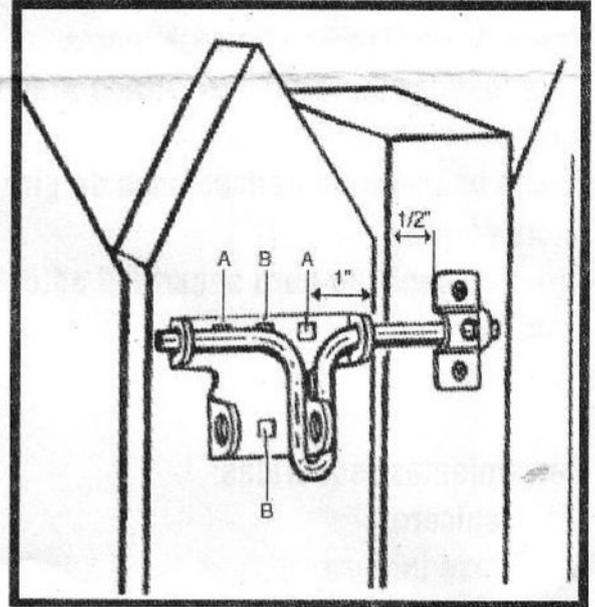

Installation

1. Place base unit 1" from edge of gate and mark bolt locations (A) for flat surface application or (B) for round surface application.
2. Drill 1/4" holes through gate.
3. Fasten base unit on gate with carriage bolts, washers and nuts.
4. Place strike 1/2" from edge of post and align with bolt. Mark screw locations.
5. Drill 1/8" pilot holes.
6. Fasten strike with sheet metal screws.