




Clear holes of debris, then drop in anchors (slotted end first)

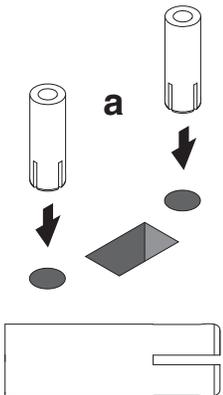

Secure the anchors using a hammer and punch

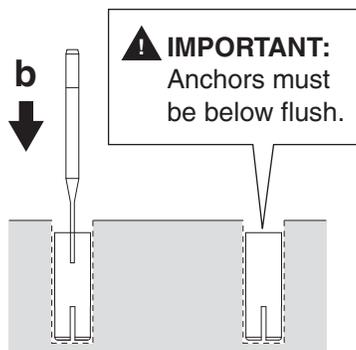

Install strike plate and secure with 2 screws

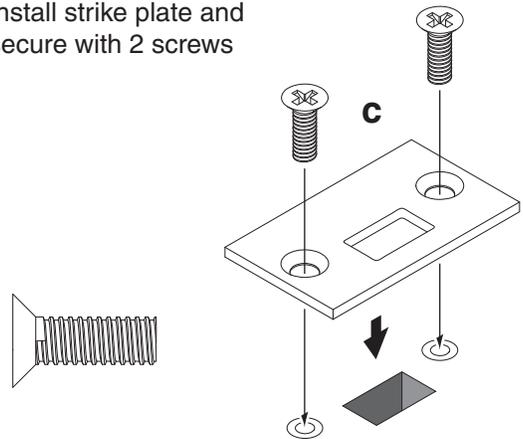

DEVICE APPLICATION SCHEDULE

33/3549A & 33/3549A-F SERIES DEVICE

98/9949 & 98/9949-F SERIES DEVICE

98/9949WDC & 98/9949WDC-F SERIES DEVICE

349 STRIKE



TEMPLATE NUMBER: 24101529_b

DATE: 8-24-12