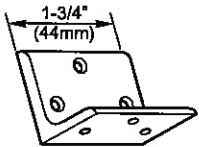
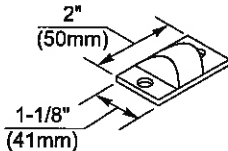
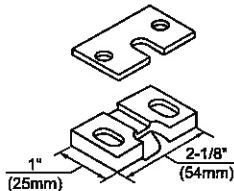


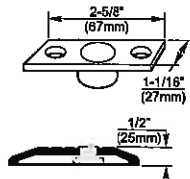


strikes

Rim Devices

757F Standard 7100(F), 7150(F), 7200M(F), 7250M(F)	793 Optional 7100, 7150, 7200M, 7250M	759 Standard 7200 Rim

Vertical Rod Devices

			
791 Standard 7110, 7120 Top	797 Bracket for SVR Top Strike in Flush Transom Opening	761 Standard 7160 Top	726 Standard 7170 Top
			
702 Floor Strike for Bottom Pullman Latch Option	790 Standard All Vertical Rod Devices	794 Floor Strike for fire openings using saddle threshold, or flush floor mount	

Mortise Devices

798 Standard All Mortise (Non-Handed)	202 Standard Box for ANSI Prep	718 Open Back Strike for Door Pair When Code Allows Use