



#11 Rain Drip INSTALLATION INSTRUCTIONS

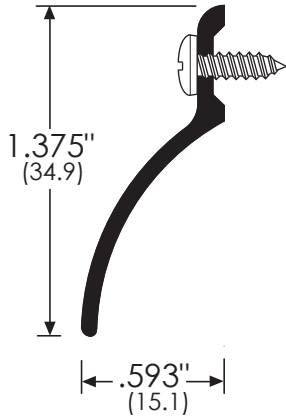

- 1 Cut the rain drip length to fit. (see below)
- 2 Mark hole locations for screws. Drill holes for screws if necessary.
- 3 Fasten screws.
- 4 Caulk the top edge of rain drip to prevent water penetration.


TYPICAL INSTALLATION:

- Installation on exterior face of frame header.

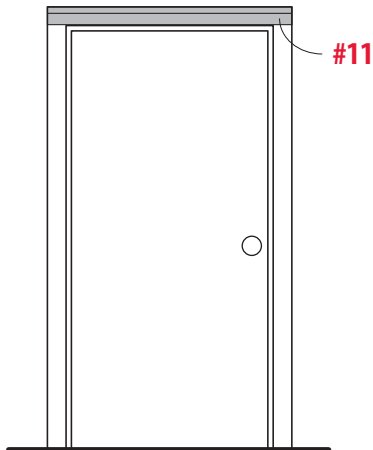


Length of rain drip should be the full width of the door frame.

- Installation on exterior face of door.

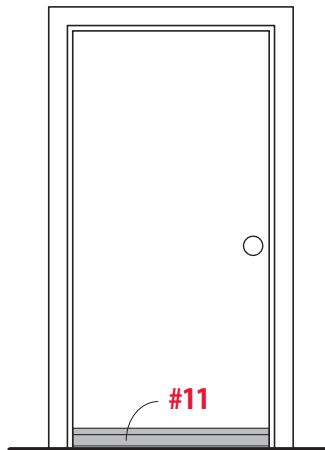

Inswing Door :
Length of rain drip should be fit within the door jamb.

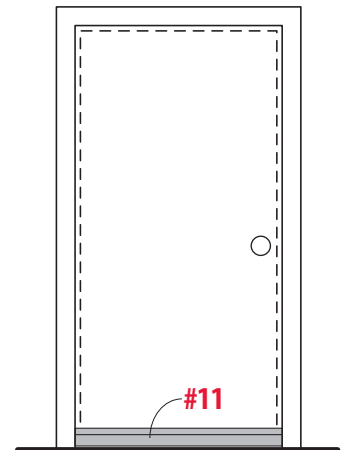

Outswing Door :
Length of rain drip should be the width of the door.



ZERO INTERNATIONAL, INC.

415 Concord Avenue, Bronx, NY 10455-1004

Tel : 718-585-3230 • Fax : 718-292-2243

E-mail : zero@zerointernational.com

www.zerointernational.com