


#3708 Head and Jamb Protection INSTALLATION INSTRUCTIONS

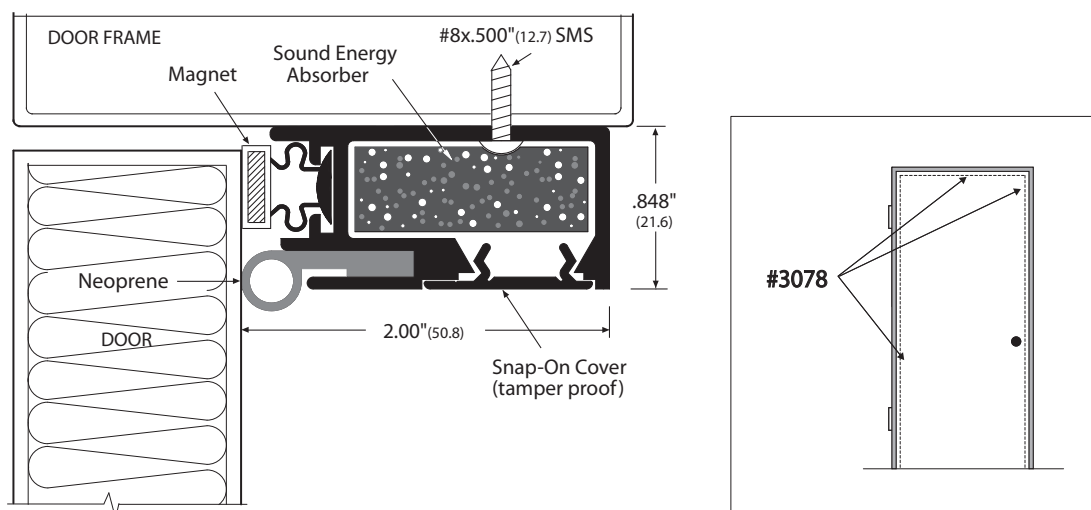

- 1 Close the door and measure the frame opening.
- 2 Install the gasketing (trim as necessary), head piece first. Place the piece against the face of door, making GENTLE contact between the rubber extrusion seal / magnet and the door. Fasten in place with screws provided. (Sound energy absorber should be taken out)
- 3 Place hinge side piece against the face of door, making GENTLE contact between the rubber extrusion seal / magnet and the door. Fasten in place.
Repeat the same procedure with the lock side.
- 4 After all the screws are installed, insert the sound energy absorber back, then snap on the cover.



ZERO INTERNATIONAL, INC.

415 Concord Avenue, Bronx, NY 10455-1004
Tel : 718-585-3230 • Fax : 718-292-2243
E-mail : zero@zerointernational.com
www.zerointernational.com