


INSTALLATION INSTRUCTIONS

Automatic Door Bottom #320, 350, 351, 352, 360, 361, 362, 364, 365, 366, 367, 368, 369






ZERO INTERNATIONAL, INC.
415 Concord Avenue, Bronx, NY 10455-4801
Tel: 718-585-3230 • Fax: 718-292-2243
www.zerointernational.com







Typical Mounting of Automatic Door Bottoms

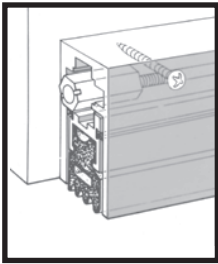





● Surface-Mounted

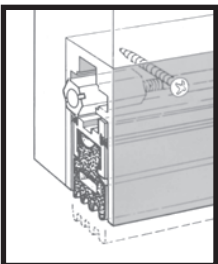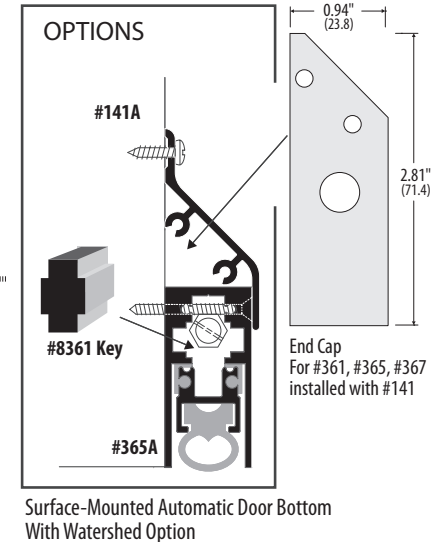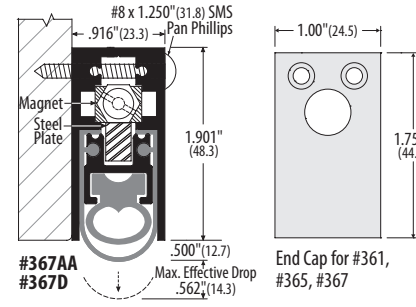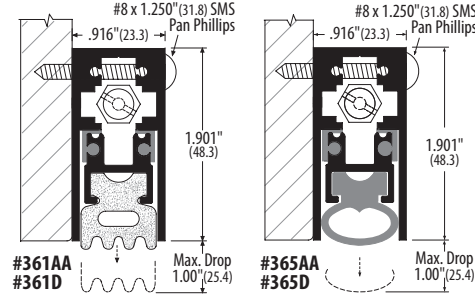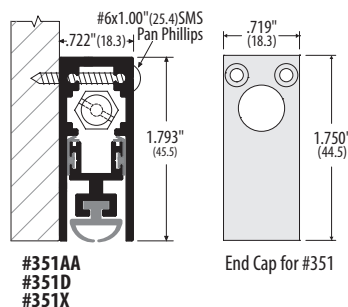

● Semi-Mortised

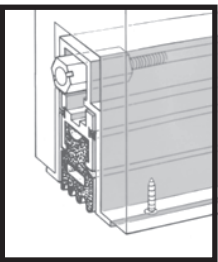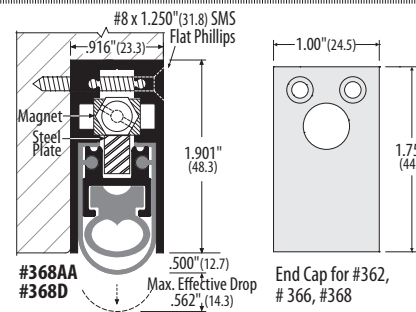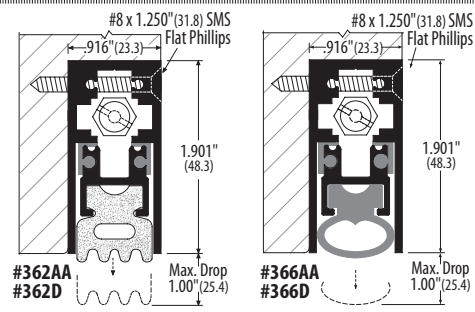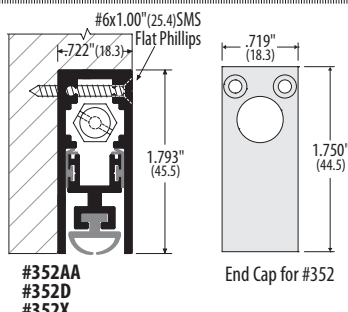


● Mortised

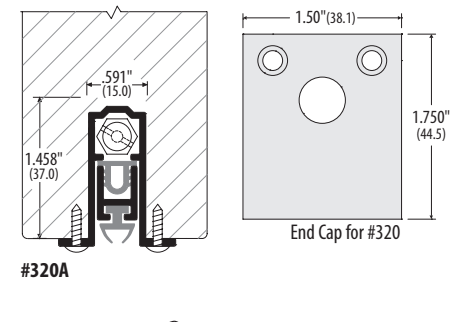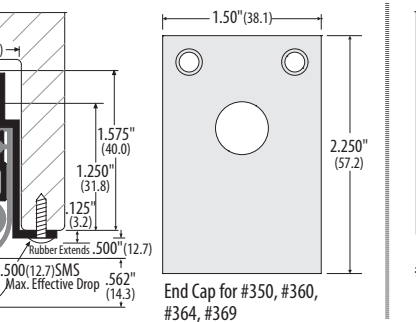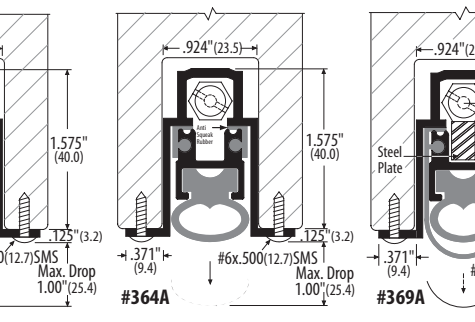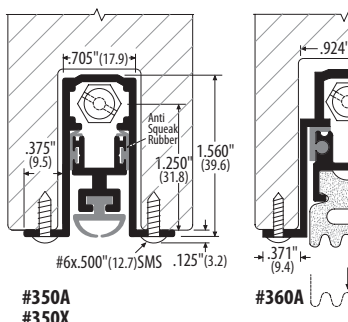

How To Install:

- 1 All surface and semi-mortised units must be mounted on the push side of the door stop (side where the door stop is).
- 2 The brass adjusting nut must be on the hinge side and should not be adjusted until the unit has been mounted.
- 3 Leave 1/16" (1.6) clearance on each end.
- 4 Optimum clearance between door bottom unit and floor or sill is 3/8" (9.5).

TRIMMING

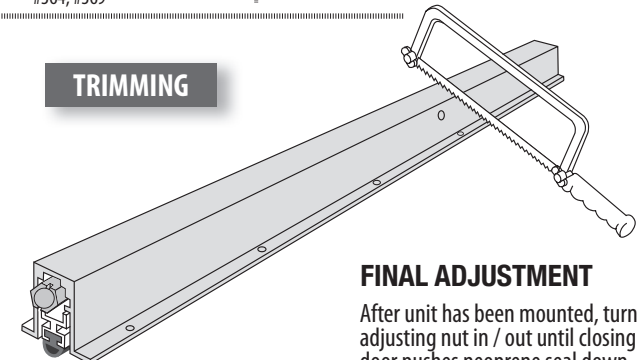

FINAL ADJUSTMENT

After unit has been mounted, turn adjusting nut in / out until closing door pushes neoprene seal down to make contact with floor/sill.

(length in inches unless specified other)