


#339FS Sill Protection Sweep INSTALLATION INSTRUCTIONS

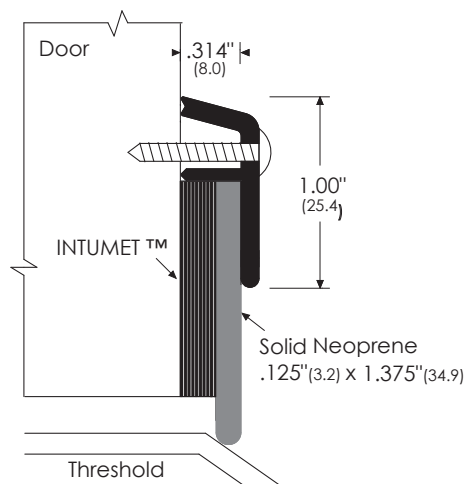

- 1 Measure and cut sweep to fit.
- 2 Close door. Hold sweep making gentle contact with the threshold.
- 3 Mark screw holes. Drill holes using a 2.5mm drill bit.
- 4 Install with screws provided.
- 5 Adjust sweep position to make proper contact with the threshold, allowing smooth operation of the door.

Note: *Product must be installed with Fire Label attached.
Do not cover Fire Label with paint. Fire Label must be exposed at all times.*



ZERO INTERNATIONAL, INC.

415 Concord Avenue, Bronx, NY 10455-1004
Tel : 718-585-3230 • Fax : 718-292-2243
E-mail : zero@zerointernational.com
www.zerointernational.com