


Weatherstripping - Wood Doors and Wood Frames




Note: B = Bronze S = Stainless Steel
Z = Zinc

Series 10F (In-swing, Out-swing) Specify series 10F & door size

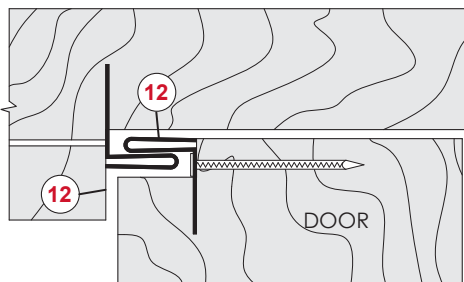


HEAD & LOCK-SIDE JAMB

11 Gauge Zinc or
25 B.&S. Gauge Bronze

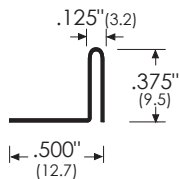


#12

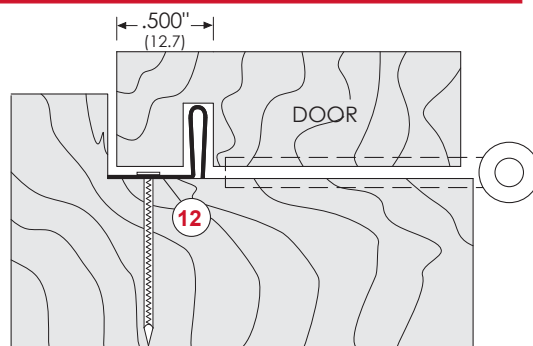



HINGE-SIDE JAMB

Series 132 (In-swing) Specify series 132 & door size

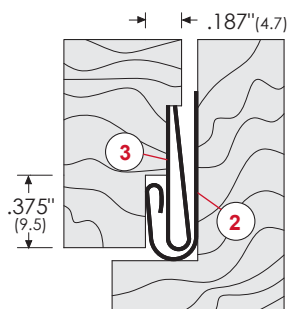


HEAD & LOCK-SIDE JAMB
#16 x 7/8" nails 2" O.C.


9 Gauge Zinc or 25 B.&S. Gauge Bronze

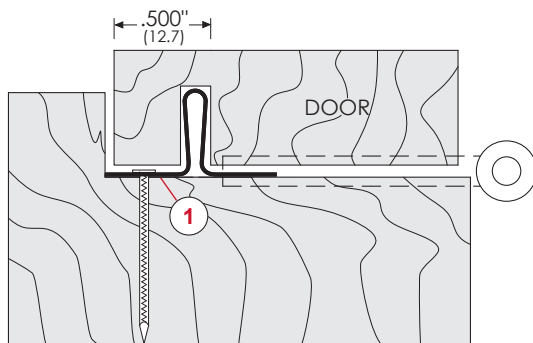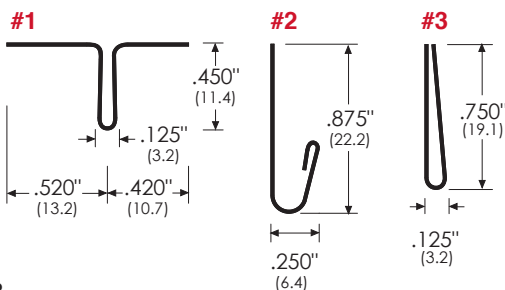


HINGE-SIDE JAMB

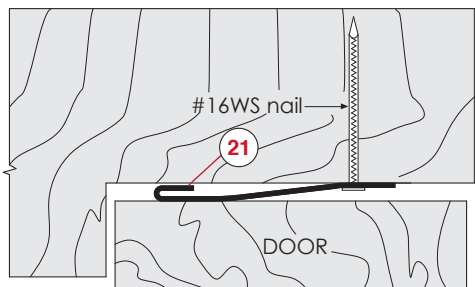


HEAD & LOCK-SIDE JAMB



#21B
31 B.&S. Gauge Spring Bronze

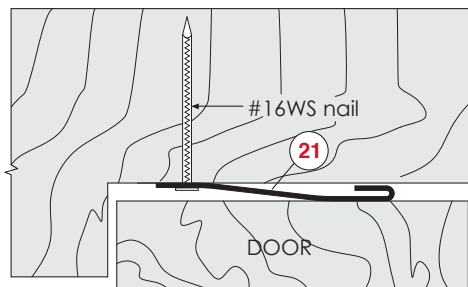

HINGE-SIDE JAMB

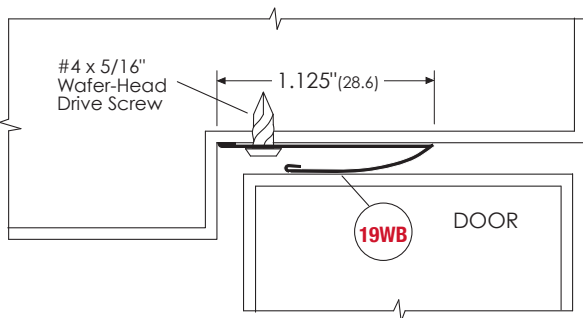

FOR HOLLOW METAL DOORS

#4 x 5/16" wafer-head drive screws
used for installation on metal doors




FOR WOOD DOORS


#16 x 7/8" weatherstrip nails
used for installation on wood doors




34 B.&S. Gauge Bronze Spring or
35 B.&S. Gauge Stainless Steel



#18B
#18S




#19B (Bronze Only)



#19WB
#19WS

Available with self-adhesive tape (PSA)

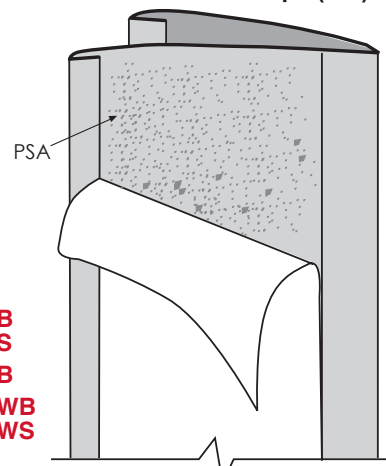

See pg. 31 for detail.