

How to assemble your Contrology Ped-O-Pul

PARTS INCLUDED:

ITEM	PART NO.	QTY
Wooden Base	17130	1
Pole to cross arm assembly	-	1
Handles (Pair)	17115	1
Light Springs	16913	2
Flat Head Screws	17480	4
Double Dog Clip	16399	2
5/32" Hex Key	13778	1

1. Position wooden base on floor so the Contrology serial number plaque is facing upward. Attach the pole to the top of the wooden base by position the long vertical tube with the flange over the top of the 4 holes in the wooden base. Make sure the top tube is side to side as shown in figure A. Install the 4 flat head Allen bolts Part No. 17480 into the holes and tighten with the 5/32" hex key.
2. Attach the springs to the eye bolts and handles to the springs using the included double dog clips.
3. Your Contrology Ped-O-Pul is ready to use.
4. CAUTION: You must stand on the wooden base when using this product. This product can tip over and fall if not used properly.

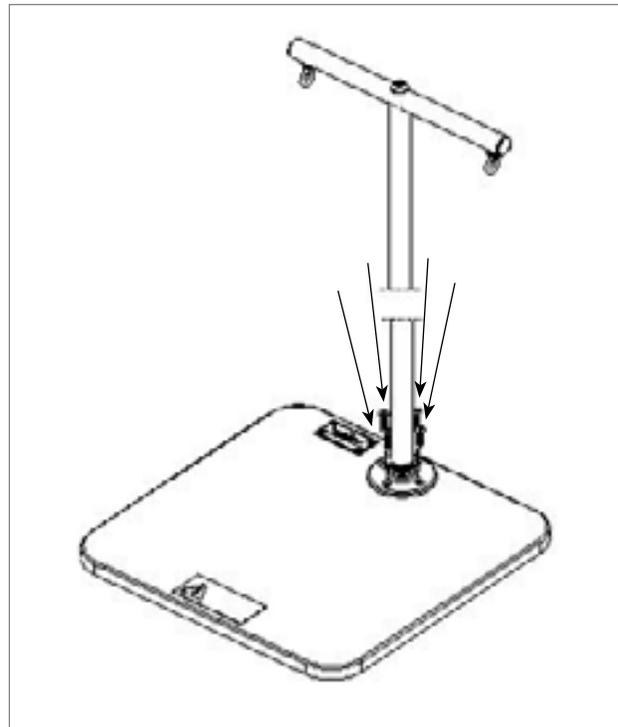


Fig. A

SAFETY NOTE - The functionality of Contrology Ped-o-Puls require them to be free-standing. The designs mandate the user to either stand or sit on the Pedo-Pul, or for a second person to hold the apparatus upright during use, to prevent the Ped-o-Puls from falling over.

[Click here](#) for **Balanced Body Patent Data**.

[Clic aquí](#) para obtener datos de patentes de **Balanced Body**.

[Cliquez ici](#) pour consulter les données de brevet du corps équilibré.

[Fare clic qui](#) per i dati sui brevetti di **Balanced Body**.

[Klicken Sie hier](#) für **Balanced Body Patent Data**.

[Klicka här](#) för **Balanced Body Patent Data**.

[单击此处](#)以获取平衡车身专利数据。