

Bravo Reformer™ Jumpboard

Please read through these instructions completely prior to installing the Bravo Jumpboard

PARTS INCLUDED

Description	Part No.	Qty
Bravo Jumpboard Pad	18794	1
Bravo Jumpboard Mounting Pipe	18747	2
Button Head Screw, 1/4" x 2-1/4"	15210	6
1/4" Washer	13791	6
5/32" Allen Wrench	13778	1

LAY OUT ALL THE PARTS

1. Make sure you have all the components listed in the parts list.

MOUNT JUMPBOARD POSTS

2. Lay the Jumpboard cushion side down. Place a post on the back of the Jumpboard so the end of the post hangs off the Jumpboard opposite of the handles. Make sure that the side of the post with the red sticker is against the Jumpboard. There should be a little ball facing up at the bottom of the post near the end of the tube. Use the provided Allen Hex Key to install (3) screws and (3) washers securing the post to the back of the Jumpboard. Repeat on second post. See Figure A.

INSTALL JUMPBOARD IN BRAVO

3. Put the footbar into the rearmost position.
4. Lower the Jumpboard into the openings on the Bravo's legs, as shown in FIGURE B. Allow the Jumpboard to drop until it bottoms out.

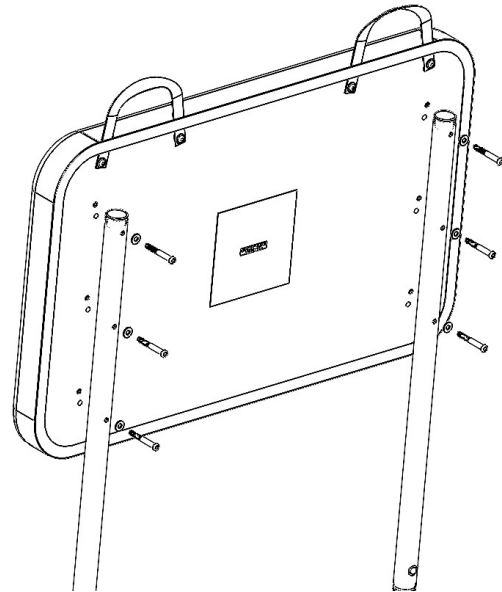


Figure A

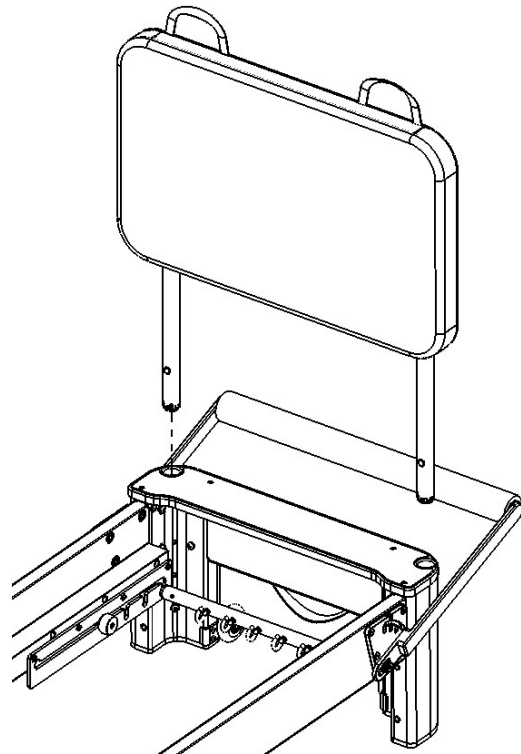


Figure B