

Installing the Gondola Pole Brackets on the CenterLine® Reformer



TOOLS NEEDED:

- » Drill with a Philips drive or a Philips screw driver
- » A piece of foam or towel

PARTS LIST (INCLUDED)

| ITEM | PART NO. | QTY |
|----------------------------------|----------|-----|
| Gondola Pole Hooks | 616-179 | 2 |
| 8-32 x 1/2" Phillips head screws | GEN7615 | 4 |

TO INSTALL

1. Unhook the springs and remove the springbar. See Fig. A

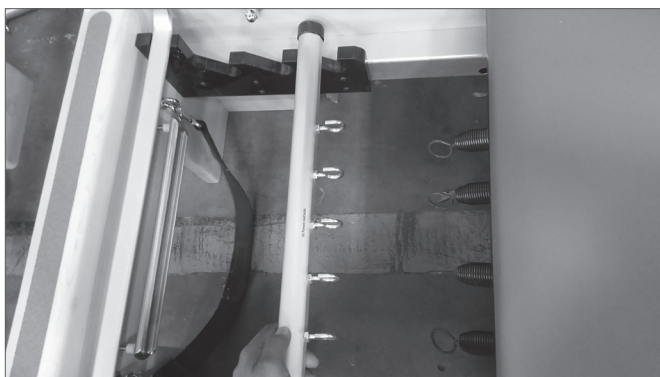


Figure A

2. Remove the carriage and place it outside of the Reformer. Flip the Reformer on its side NOTE: Place a piece of foam or towel on the side of the reformer so as to prevent the reformer sides from rubbing on the floor. See Fig B. You will be installing the hooks on the underside of the frame rail. Both rails attached to the frame come with holes predrilled for installation of the hooks.

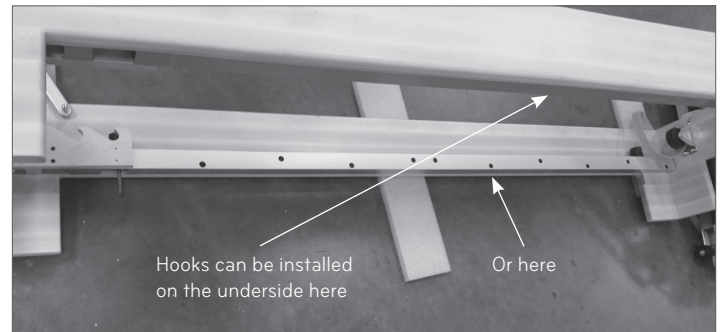


Figure B

3. Use either a drill with a Philips bit or a Philips screw driver to install the hook on the underside of the frame using two of the screws. Fig. C. Make sure the hooks are facing towards the outside of the frame.



Figure C

4. Repeat this to install the second hook on the same rail.
5. If installing a second set of hooks, repeat steps 3 and 4 on the other rail.
6. Place the frame back upright, and place the carriage back on the Reformer. Place the springbar back and hook the springs. Place pole(s) on installed hooks.

Questions? Call Balanced Body Technical Support at 1-800-745-2837 (US and Canada), or +1-916-388-2838 (all other countries).