


Specifications

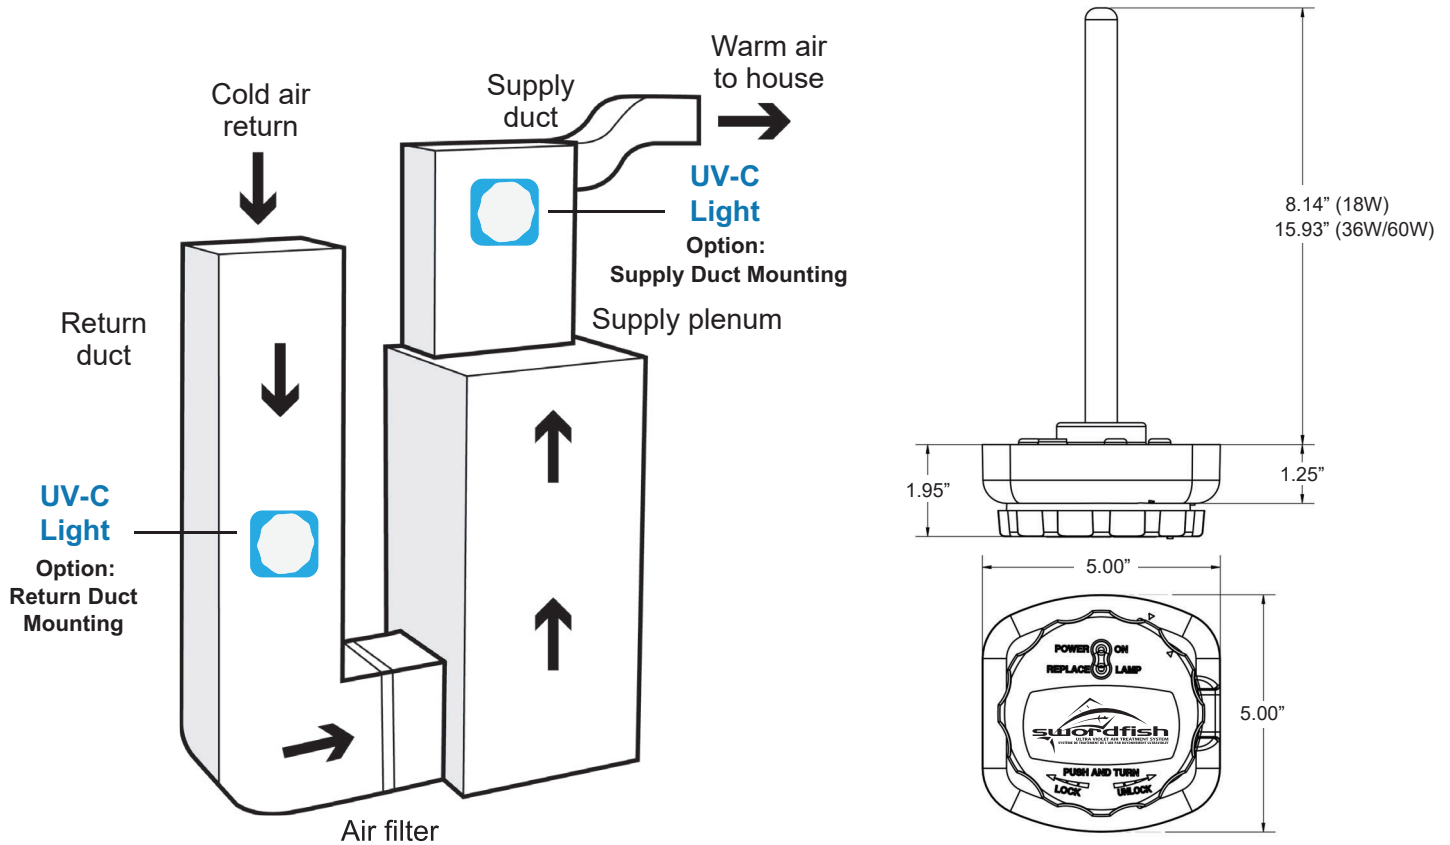

PRODUCT SPECIFICATION	UVC18WBMV	UVC36WBMV	UVC60WBMV
INPUT SUPPLY VOLTAGE (V)	120-240	120-240	120-240
INPUT SUPPLY FREQUENCY (Hz)	50-60	50-60	50-60
POWER (W)	18	36	60
PRIMARY AMPERES	0.18A (120V) / 0.10A (240V)	0.35A (120V) / 0.18A (240V)	0.50A (120V) / 0.25A (240V)
AMBIENT TEMPERATURE (°C)	0-40	0-40	0-40
CASE MAXIMUM TEMPERATURE (°C)	75	75	75
POWERHEAD DIMENSIONS	4.25" (D) x 2.0" (H)	4.25" (D) x 2.0" (H)	4.25" (D) x 2.0" (H)
LAMP CHANGER REMINDER	Yes	Yes	Yes
LAMP OUT INDICATOR	Yes	Yes	Yes
BALLAST SHUT DOWN PROTECTION	EOL / OC	EOL / OC	EOL / OC
APPROVALS	UL / cUL	UL / cUL	UL / cUL

Order Info:

UV-C WHOLE HOME PURIFICATION SYSTEM	
PART #	DESCRIPTION
UVC18WBMV C	Allanson Air Treatment System, 18W, 120-240V
UVC36WBMV C	Allanson Air Treatment System, 36W, 120-240V
UVC60WBMV C	Allanson Air Treatment System, 60W, 120-240V

REPLACEMENT LAMPS	
PART #	DESCRIPTION
UVC18WLR	UV Replacement Lamp 18W for UV-C Air Treatment System
UVC36WLR	UV Replacement Lamp 36W for UV-C Air Treatment System
UVC60WLR	UV Replacement Lamp 60W for UV-C Air Treatment System

*240V units will require a different power cord

Installation Instructions

It's simple and fast to install!
Il est simple et rapide pour installer !
¡Es simple y rápido instalar!

Included in this kit:

1 unit with bulb and power cord.


Tools Required: Power drill, metal cutting hole saw and screwdriver.



Inclus dans cet ensemble:

1 unité avec ampoule et cordon d'alimentation


Outils requis: Perceuse, emporte-pièce de 2" , tournevis



Incluido en este kit:

1 unidad con el bulbo y cable eléctrico.

Herramientas requeridas: Taladro eléctrico, sierra de corona para perforar metales y destornillador

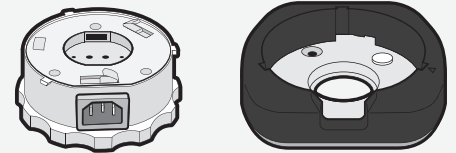


Cut hole and install mounting plate to duct work.

1

Perçer un trou de 2" de diamètre sur la conduite d'air et installer la plaque de montage.

Cortar el agujero e instalar la pletina para canalizar el trabajo.

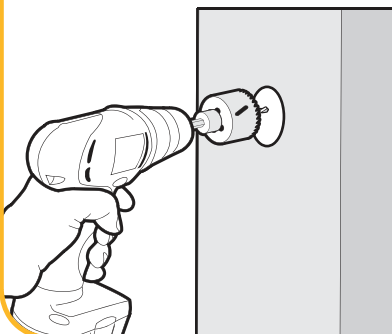


Attach the UV Lamp to the Lamp Holder.

2

Fixer la lampe au réceptacle.

Atar la lámpara ULTRAVIOLETA al sostenedor de la lámpara.

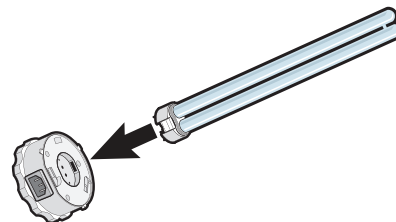

Lock into the the mounting plate and connect the power cord.

3

Insérer la lampe dans l'orifice de la plaque de montage et relier le cordon d'extension.

Trabarte en el pletina y conectar el cable eléctrico.

