



## CLEAN F9-AL TECHNICAL INFORMATION


### DIRECTIONS:

Spray AXI-THERM CLEAN F9A directly onto the cold surface to be cleaned until the deposits to be removed are completely wet. Do not dilute prior to application. Let the product react for 10 - 20 minutes before brushing and rinsing. For aluminum heat exchangers apply AXI-THERM CLEAN F9B after the application of CLEAN F9A and subsequent rinse with plenty of water. Firing the boiler afterwards will help to further clean the heat exchanger. Thoroughly rinse the whole surface with water. In case of persistent deposits, repeat the cleaning procedure. Do not mix with other chemicals. Do not use in potable water systems. Do not ingest. Do not dispose of waste through the environment. Keep out of reach of children. **For metal surfaces only.**

**BEFORE**



**AFTER**

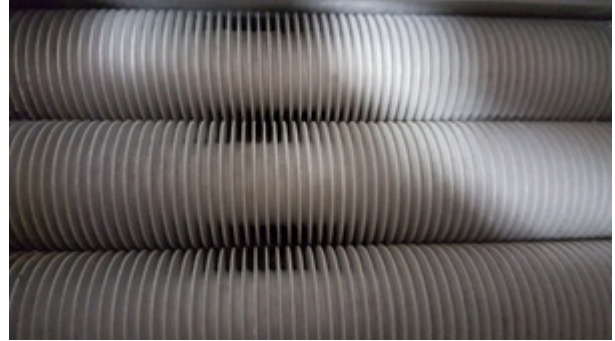

Project

Consultant

Unit Tag

Location

Contractor

Sales Agent