



Wax Free Toilet Seal

The quick, clean and easy way to install toilets.

Not only is it quick, clean and easy, but it is the only toilet seal that lets you *"feel the seal."* As you lower the toilet onto the flange you can feel the unique sealing rings of the Wax Free Toilet Seal compress and seal against the inside walls of the drain pipe. NO mess. NO guess. Just confidence in a reliable seal. After all, it's made by Fernco.

Introducing the newly redesigned FTS-4



Simplified part number selection: If you have a 4" drain pipe, use the FTS-4; If you have a 3" drain pipe, use the FTS-3.

- Improved fit in 4" cast iron and copper pipe means no more restriction with scale and build up in old drain lines.
- The new design of the FTS-4 provides a water and gas tight seal in 3 1/2" flanges and 4" drain pipe:
- The FTS-4 works with:
 - All 4" Drain Pipe
 - 4x4 Closet Flanges
 - 4x3 Closet Flanges Connected to 4" Pipe
 - 4" Wall Carriers



Wax Free Toilet Seal

The quick, clean and easy way to install a toilet.



Not only is it quick, clean and easy, but it is the only toilet seal that lets you *"feel the seal."* As you lower the toilet onto the flange you can feel the unique sealing rings of the Wax Free Toilet Seal compress and seal against the inside walls of the drain pipe. NO mess. NO guess. Just confidence in a reliable seal. After all, it's made by Fernco.

A strong, flexible adhesive creates a positive seal to the bottom of the toilet.

Size dimension accommodates floors raised above the toilet flange by up to 3/4".

Flexible ribs form a tight, positive seal to the inside of the drain pipe.

NO MORE GUESSING if there is a seal between the toilet and the drain pipe.




FTS TECHNICAL SPECS

- Seals on floors raised above the flange by up to 3/4"
- No need for flange risers or stacked wax rings
- Ideal for in-floor radiant heat systems
- Impervious to mold and mildew
- Centers itself and the toilet to the drain
- Toilet can be removed and reinstalled with the same Fernco Wax Free Toilet Seal still attached
- Made of flexible PVC conforming to ASTM A 1045




The FTS-3 Wax Free Toilet Seal

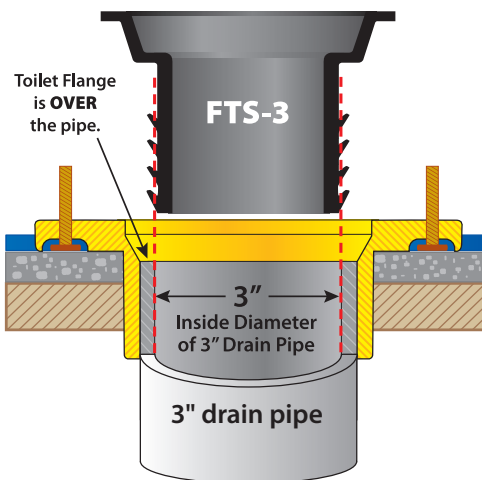

TOILET HORN MUST BE CLEAN BEFORE INSTALLATION

1. Remove old wax with a putty knife
2. Clean away any remaining wax
3. Use Rubbing Alcohol on a towel or rag to remove any remaining wax
4. Dry surface completely before installing the Wax Free Toilet Seal

The NEW FTS-4 Wax Free Toilet Seal

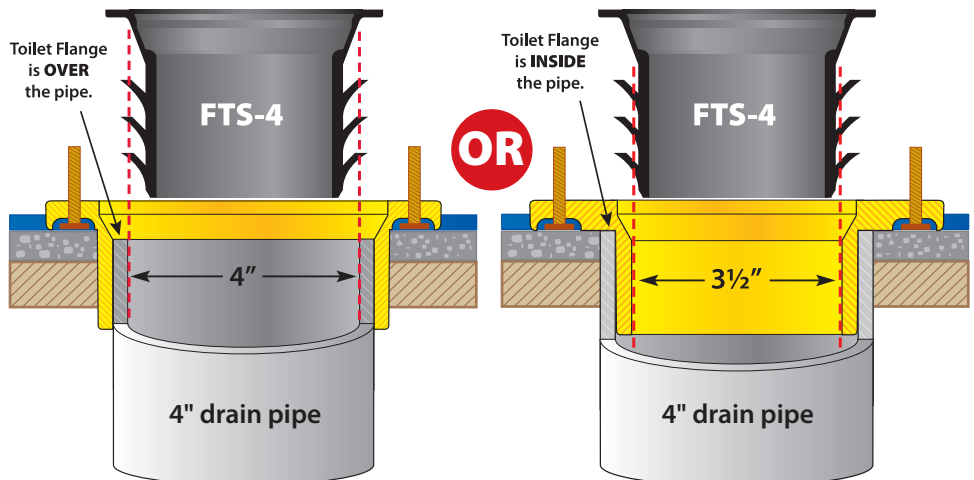

FTS-4 Is also Ideal for most 4" Closet Wall Carriers

