



# Clearflo

## Retrofit toe-tap conversion kit

### K-7142

#### Features

- Intended to replace existing overflow cover and stopper/drain, flange/toggle linkage
- Toe-tap component installs on most drain bodies with 1-1/2"-11 1/2 NPSM thread
- For KOHLER drains K-7160-AF, K-7160-TF, K-7161-AF, K-7193
- Metal construction

#### Recommended Products/Accessories

K-7193 Bath Drain



#### Codes/Standards

ASME A112.18.2/CSA B125.2

#### KOHLER® Faucet Lifetime Limited Warranty

See website for detailed warranty information.

#### Available Colors/Finishes

*Color tiles intended for reference only.*

| Color                                                                               | Code | Description                    |
|-------------------------------------------------------------------------------------|------|--------------------------------|
|  | CP   | Polished Chrome                |
|  | SN   | Vibrant® Polished Nickel       |
|  | AF   | Vibrant® French Gold           |
|  | BN   | Vibrant® Brushed Nickel        |
|  | BV   | Vibrant® Brushed Bronze        |
|  | BL   | Matte Black                    |
|  | 2MB  | Vibrant® Brushed Moderne Brass |
|  | TT   | Vibrant Titanium               |
|  | BGP  | Vibrant Brushed Graphite       |
|  | DR   | Deep Bronze                    |


1-800-4KOHLER (1-800-456-4537)

Kohler Co. reserves the right to make revisions without notice to product specifications.


For the most current Specification Sheet, go to [www.kohler.com](http://www.kohler.com) USA or [www.kohler.ca](http://www.kohler.ca) Canada

1-9-2026 23:04 - US/CA

THE BOLD LOOK  
OF **KOHLER**®

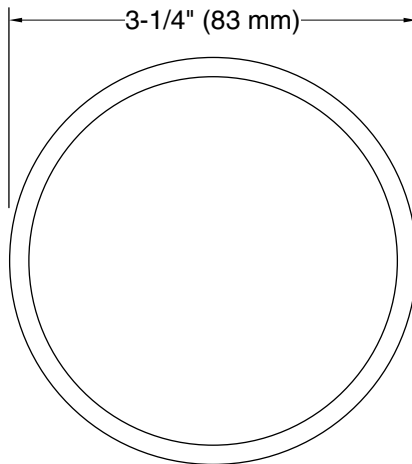

Overflow Cover

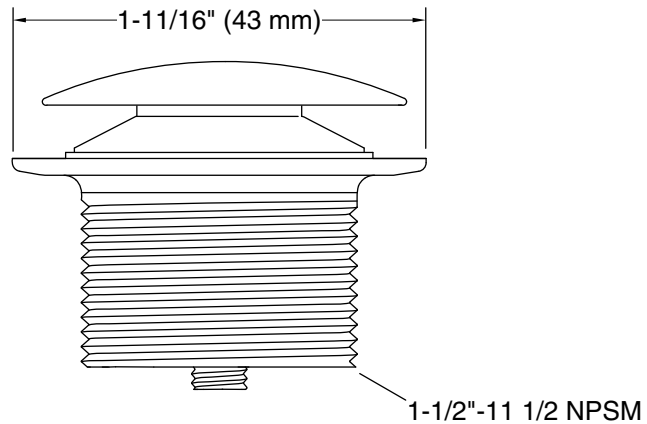

Toe-Tap

## Technical Information

All product dimensions are nominal.

Material: Metal

## Notes

Install this product according to the installation instructions.

**IMPORTANT!** This installation should be performed by a qualified plumber.

**IMPORTANT!** Provide access to the back of the bath. Removing the existing overflow cover may effect the seal. Inspect the back of the bath for leaks after completing this retrofit installation.