


TK-RB01 RECESS BOX



Locate the water heater in an open, unroofed area and maintain the following clearances:

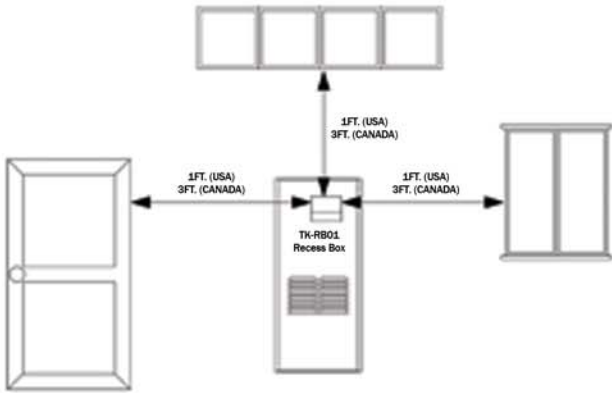

⚠ Attention

Please read all installation instructions completely before installing your water heater and this recess box

Minimum Clearances from Combustible or Non-combustible Construction	
Top of heater	0 inch
Back of heater	0 inch
Front of heater	24 inches
Side of heater	0 inch
Bottom of heater	0 inch

In addition to these clearances, please follow all installation instructions in the T-K3 Installation Manual. The TK-RB01 will fit between most wall studs.



Do not install this water heater under an overhang less than 3 ft from top of water heater when installed outside. The area under the overhang must be open on 3 sides.

