

TESTRITE[®]

The Safe, Fast, Dry DWV Testing System



Patent Pending

- Reduce test time by up to 75%
- Keeps Projects and Plumbers safe & dry
- Re-usable test device for 4" PVC, ABS and No-Hub Cast Iron DWV Systems
- Test tee remains in the system to serve as a cleanout
- Test with air or water pressure per CISPI standards
- No tools, hardware or sealants needed to install or remove DWV test device or cleanout plug
- Unique test device includes 3/4" fill/drain down valve

TESTRITE Test Wedge



TR4-TWV

Pipe System Types



PVC

ABS

CAST IRON

TESTRITE INSTALLATION INSTRUCTIONS



1 Remove Clean-Out Plug




2 Insert Test Wedge



3 Conduct Test



4 Remove Test Wedge

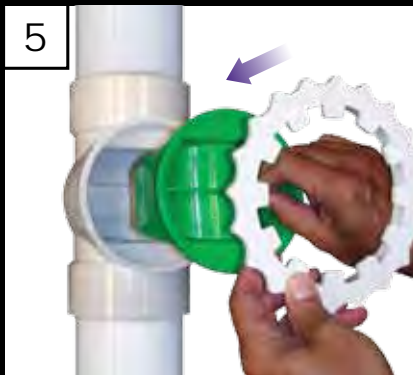

5 Insert Clean-Out Plug



6 Test Complete

INCLUDES TEE, CLEAN-OUT PLUG & SPANNER RING



TR4-ABS-H



TR4-PVC-H



TR4-PVC-NH

MODEL #	DESCRIPTION	CASE QTY
TR4-PVC-H	TESTRITE 4" Tee and clean out plug for PVC Piping	9
TR4-PVC-NH	TESTRITE 4" Tee and clean out plug for No-HUB Cast Iron Piping	9
TR4-ABS-H	TESTRITE 4" Tee and clean out plug for ABS Piping	9
TR4-TWV	TESTRITE 4" Test Wedge (Fits All 4" TESTRITE Tees)	1