

flora

By:  nature

MANUAL DE MONTAGEM | MANUAL DE MONTAJE | ASSEMBLY INSTRUCTIONS


010.002.050 - ROUPEIRO NOGUEIRA - 6P2G

Montagem

1 

2 


1 

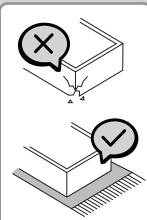

A		DOBRADIÇA CURVA	12
B		DOBRADIÇA SUPER CURVA	06
C		CAVILHA 6x30 CLAVITA 6x30 DOWEL 6x30	70
D		SUPORTE CABIDEIRO	02
E		PARAFUSO CC 3,5x12 TORNILLO 3,5x12 SCREW 3,5x12	194
F		PARAFUSO CC 3,5x25 TORNILLO 3,5x25 SCREW 3,5x25	08
G		PARAFUSO CC 3,5x40	64
N		FIXADOR TRASEIRO FIJADOR TRASERO BACK FASTENER	40


I		PUXADOR	04
J		PREGO	154
K		SAPATA PLÁSTICA	10
L		CORREDIÇA TELESCÓP.	02
R		CABIDEIRO OBLONGO 645MM	01
S		CANTONEIRA 4 FUROS	24
X		DISTANCIADOR GAVETA	08

Nº	DESCRIÇÃO	QTD	COMP	LARG
1	TAMPO E BASE	2	1984	440
2	LATERAL DIREITA	1	2180	440
3	LATERAL ESQUERDA	1	2180	440
4	PRATELEIRA	7	653	350
5	TRAVESSA RODAPÉ	2	404	100
6	RODAPÉ	2	1984	100
7	DIVISÓRIA DIREITA	1	1962	440
8	DIVISÃO ESQUERDA	1	1962	440
9	MOLDURA SUPERIOR	1	2008	100
10	LATERAL GAVETA	4	350	70
11	TRASEIRO GAVETA	2	544	70
12	BASE GAVETAS	1	653	385
13	FRENTE GAVETA	2	593	140
14	PORTA	2	1975	395
15	PORTA CENTRAL	2	1955	322
16	PORTA CANTO	2	1975	270
17	FUNDO GAVETA	2	566	354
18	TRASEIRO	3	1981	667

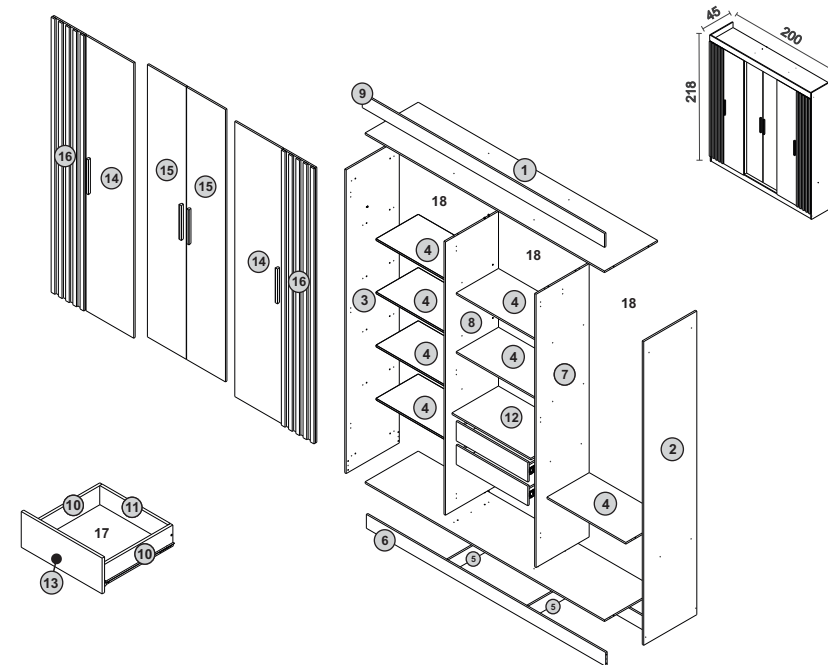


01

S		10x
D		40x
C		4x

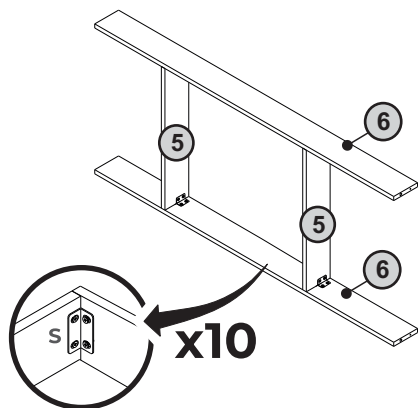


03

C		22x
G		22x

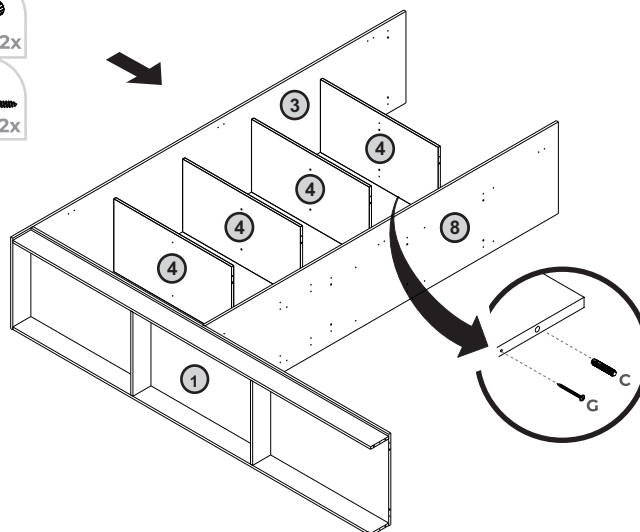


04

C		14x
G		14x

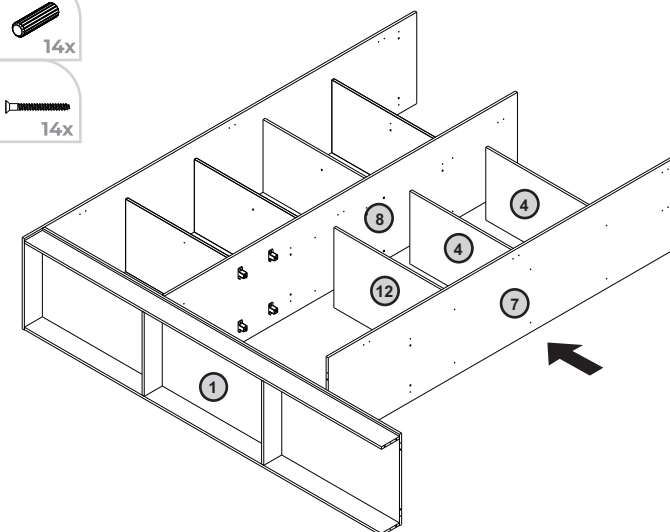


02

G		2x
---	--	----

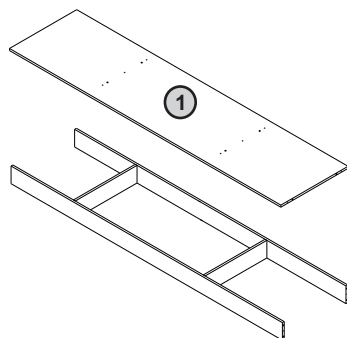


05

- E  40x
- S  10x
- C  10x
- G  10x
- K  10x
- J  10x

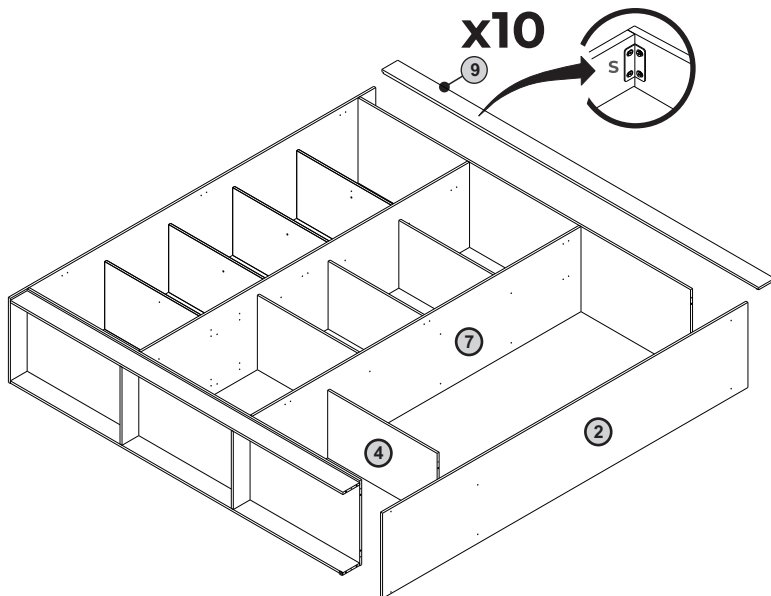


06

- A  12x
- B  6x
- E  36x

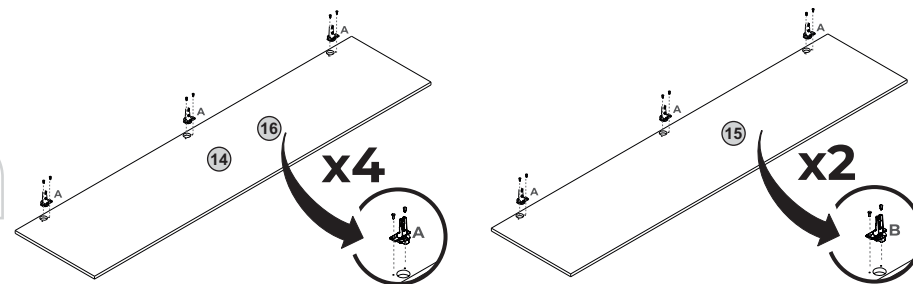


07

- C  8x
- G  4x
- E  24x
- M  4x
- J  20x
- L  2x

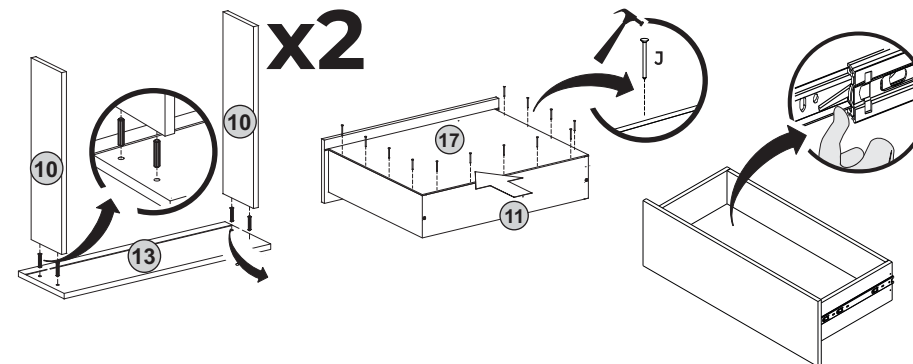


08

- I  4x
- F  8x

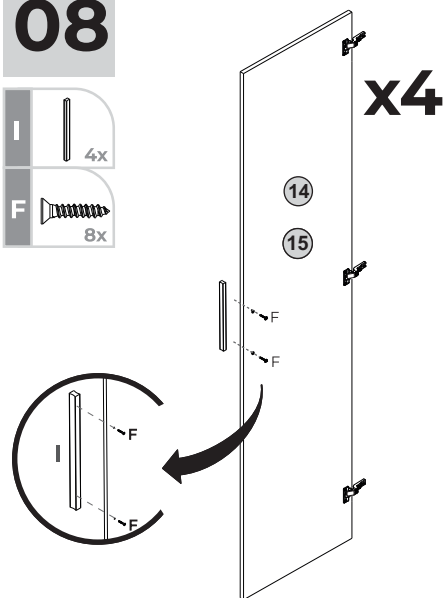

09

- E  52x
- B  18x
- X  8x

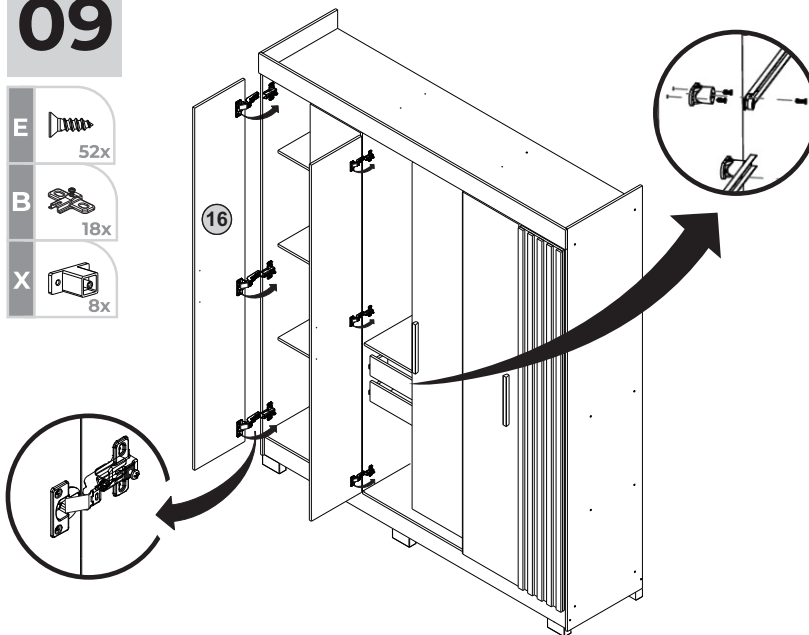

10

- J  134x
- N  40x

