
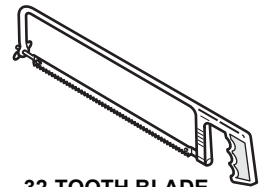
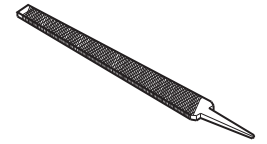



NOTE:

The Privacy Wall Mini End is made of Painted Steel and the Glass Selections Mini End is made of Clear Anodized Aluminum.

Base options include 5", 2.5" and NOBASE.
The NOBASE option requires field cutting.

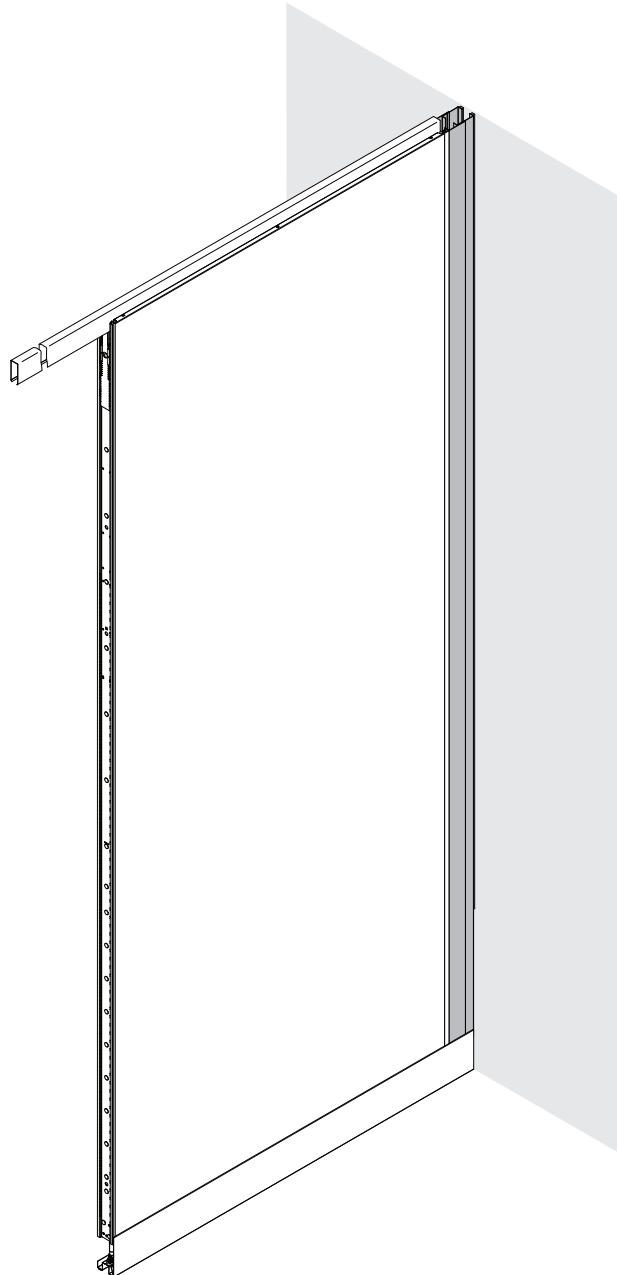

**32-TOOTH BLADE
HACKSAW**

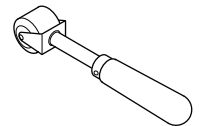


**ROLLER
(for applying
feature strips)**

1. Attach springs to outer channel as required. Slide the inner channel inside the outer channel (1a) and use (2) two velcro straps to keep the channels at the smallest size (1b).



2. Install the full feature strip at the top of the panel (2a) and work it downward, removing the velcro straps as you install (2b). Install base trim per assembly directions 939500485.

NOTE: If the mini end does not fit tightly against the wall, there are (2) two ways to adjust the mini end. You can bend the leaf spring to give it more spring pressure or you can move the leaf spring to a better position.

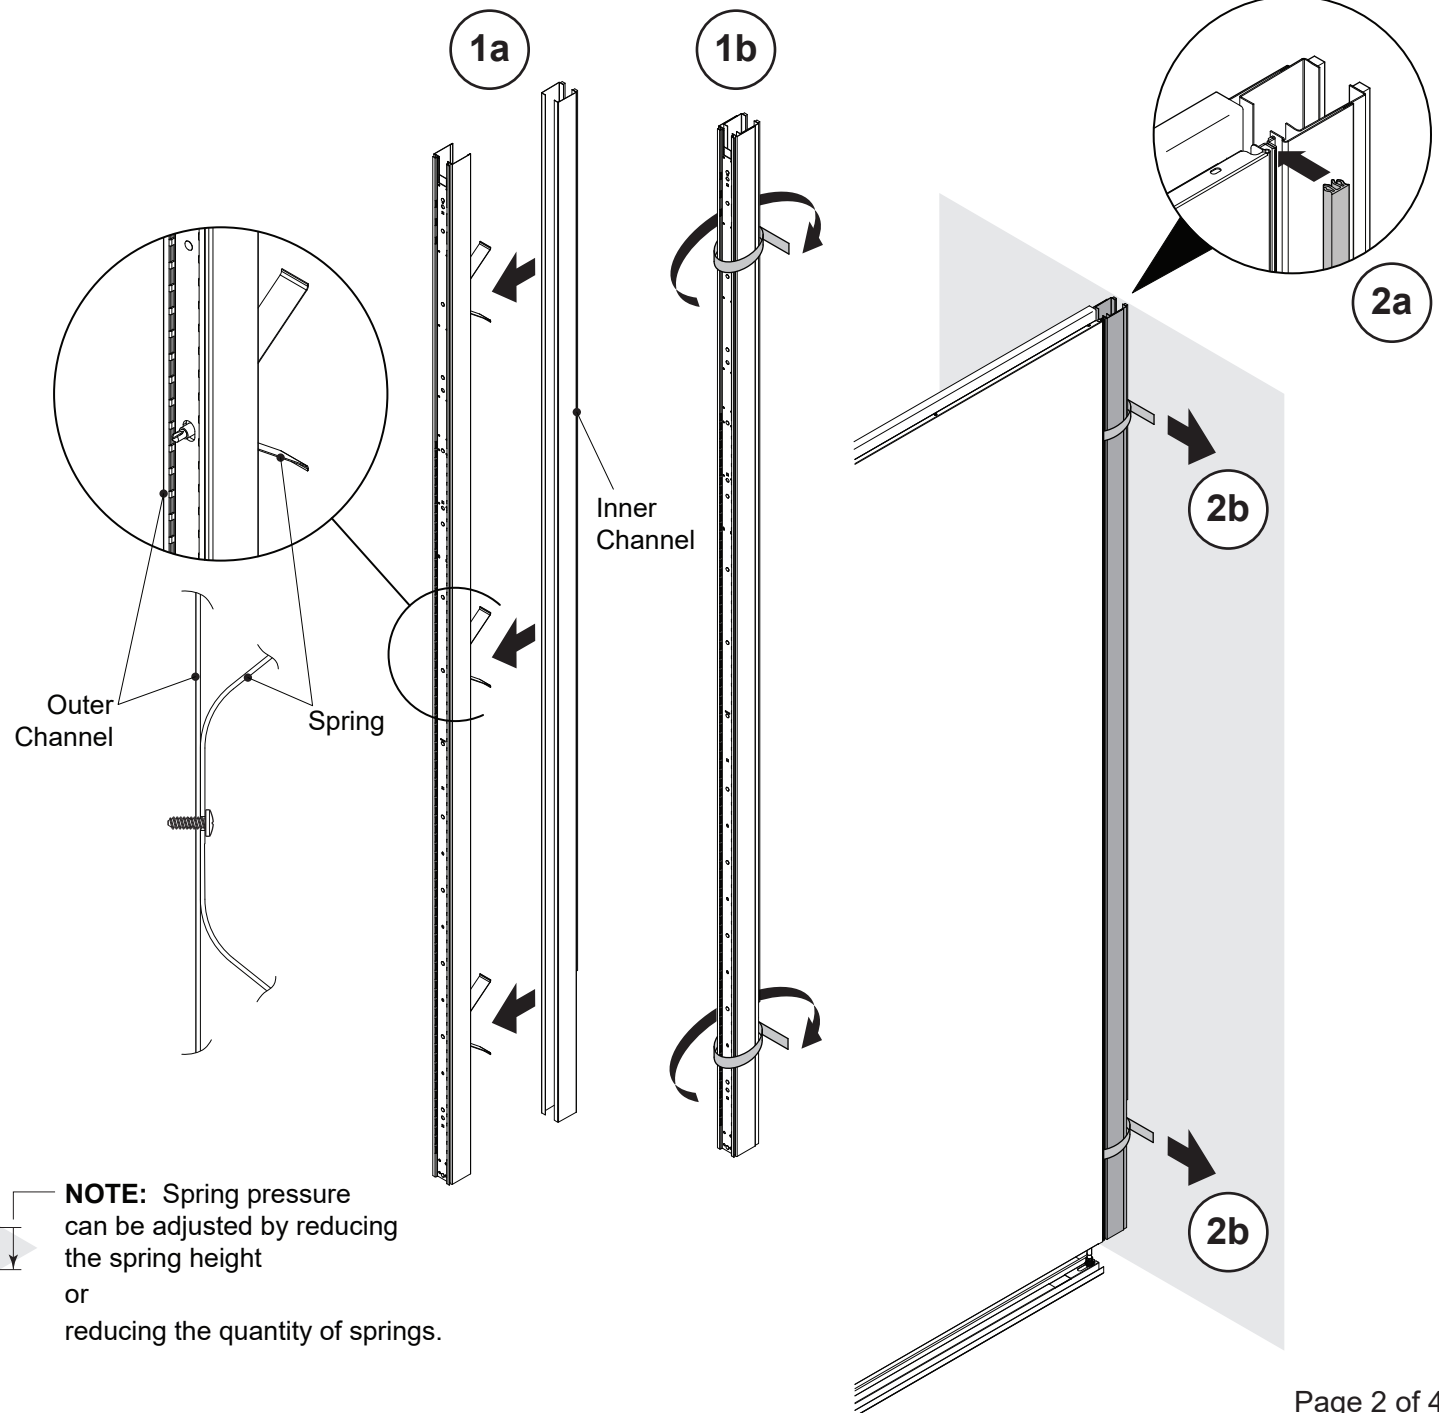

For NOBASE option:

1. Measure from top of installed panel or door frame to the floor.
2. Transfer measurement to the inner and outer channels of Mini End, cut to length and file off burrs. Measure from the notched ends of Mini End to cut away the bottom of each channel.
3. Assemble Mini End and install as per page 2.

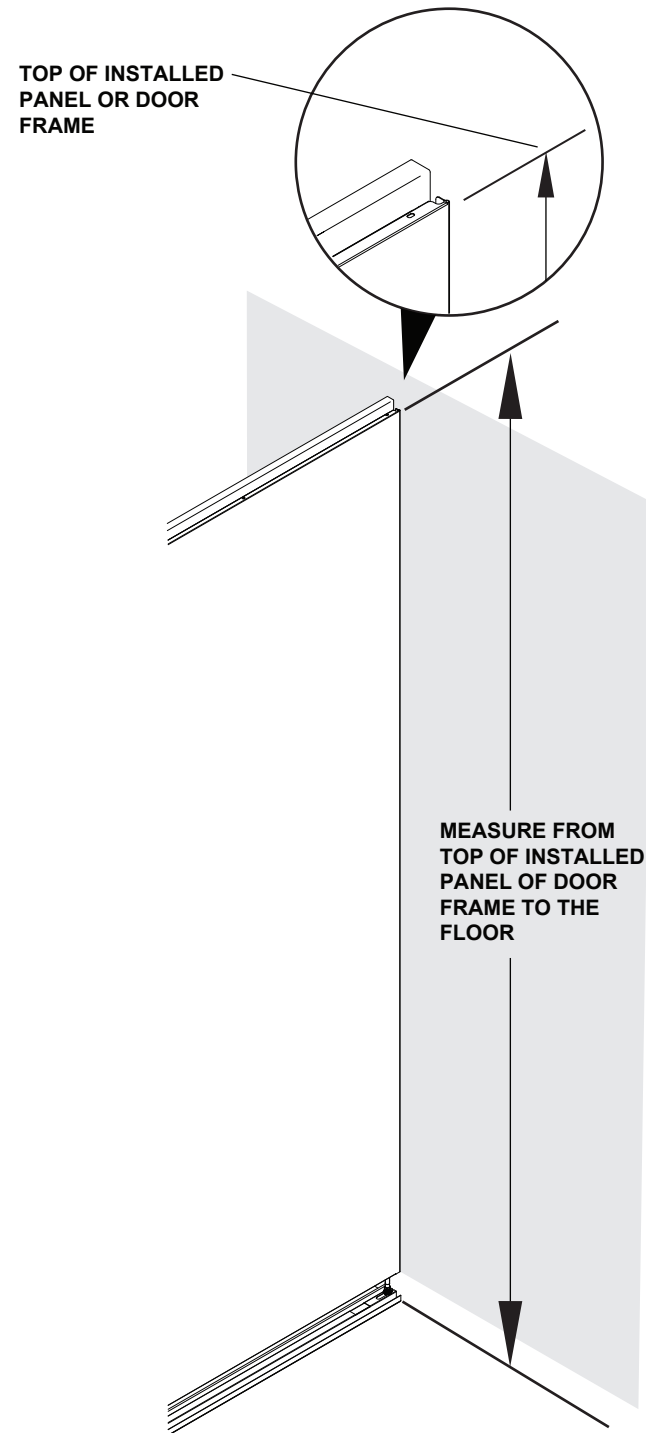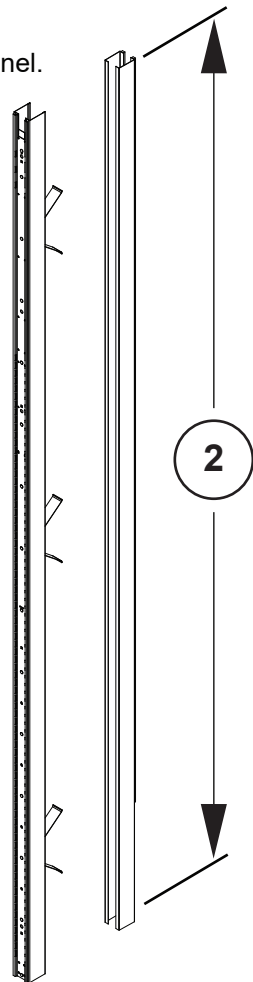

Power and data routing through Mini End

1. Medium and large Mini End options will allow power and data routing from either the floor or ceiling.
2. Make a cut through the outer Mini End as needed in the cutout area. File any sharp edges or burrs. Lay in power/data as needed in the open area that is made when the inner and outer channels are assembled.
3. Assemble Mini End and install as per page 2.
4. Make required connections to power/data.

