

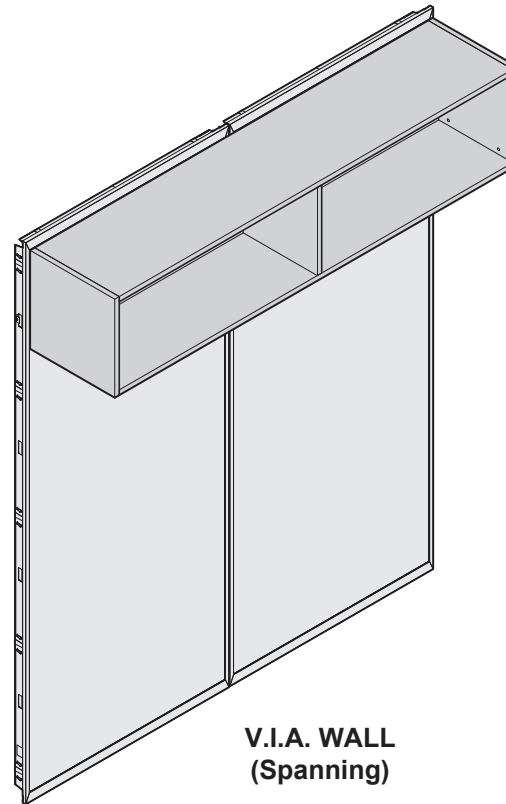
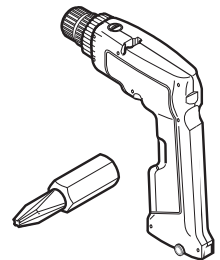


**V.I.A. WALL
(Non-Spanning)**

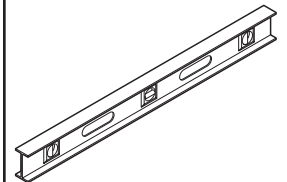


**V.I.A. WALL
(Spanning)**

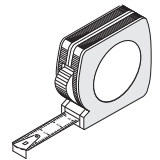

1. Using an x-acto knife, cut slots in the seal using the furniture slots as guides before installing brackets.

2. Mount brackets in panel slots (2a), then push down (2b) so they are securely seated.
NOTE: Make sure LH and RH brackets are in the proper orientation.





3. Ensure that safety catch is fully engaged by lifting up on the bracket after it is installed to verify that it is locked in place.

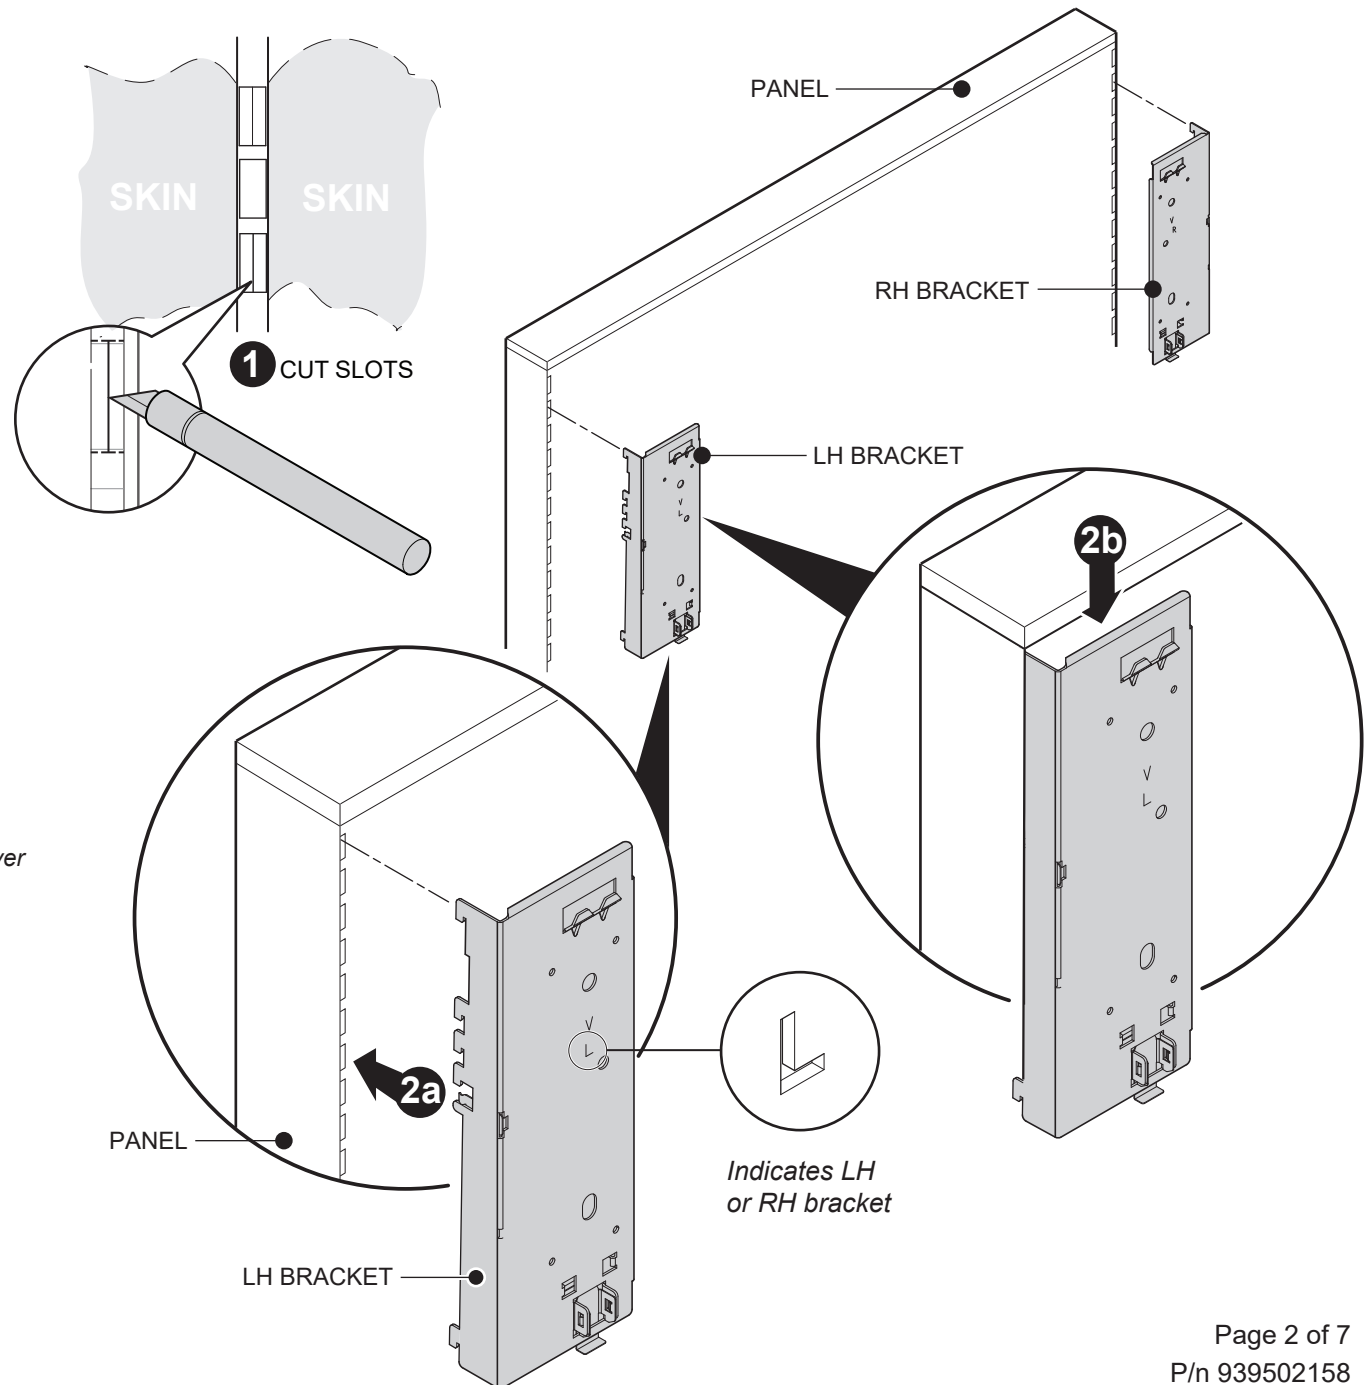

4. When spanning multiple skins:
Mount (2) spanning braces to brackets.





5. Mount (2) hanger brackets onto the rear panel of overhead storage cabinet, one each side.

6. Install (2) safety catches into opening as shown.

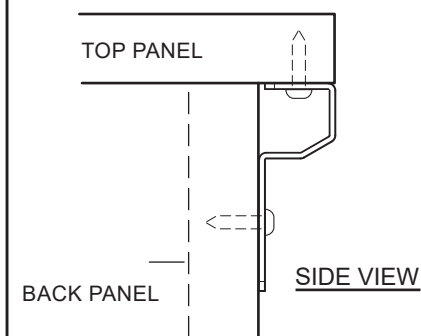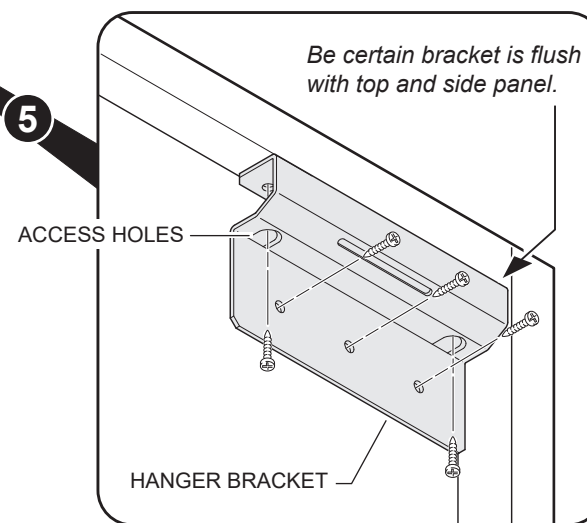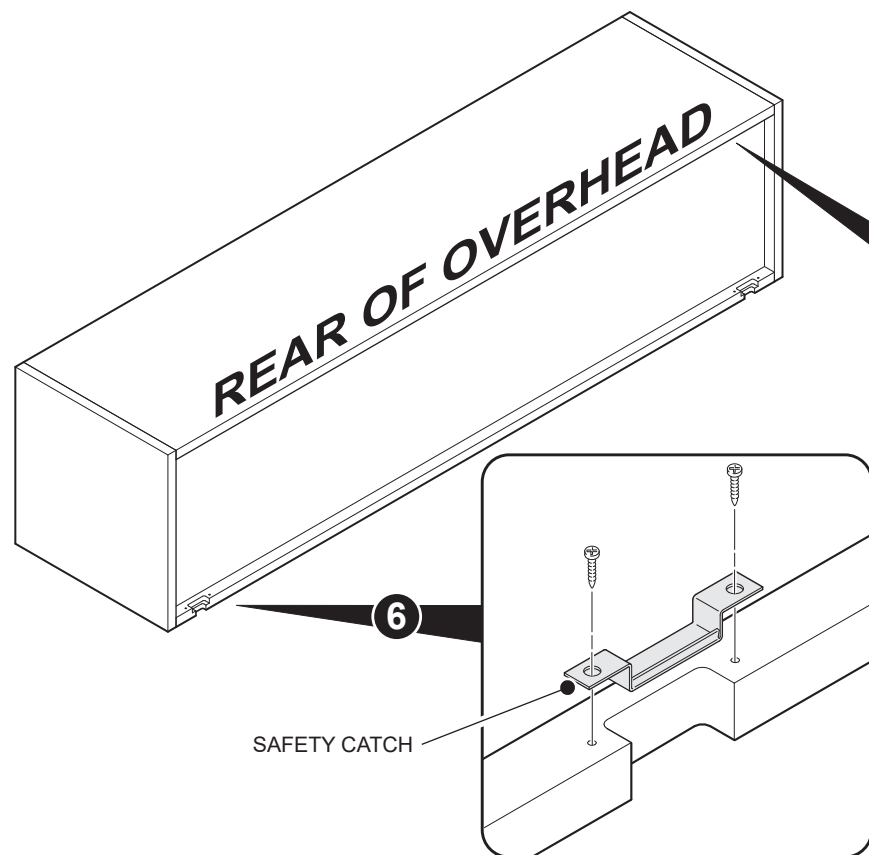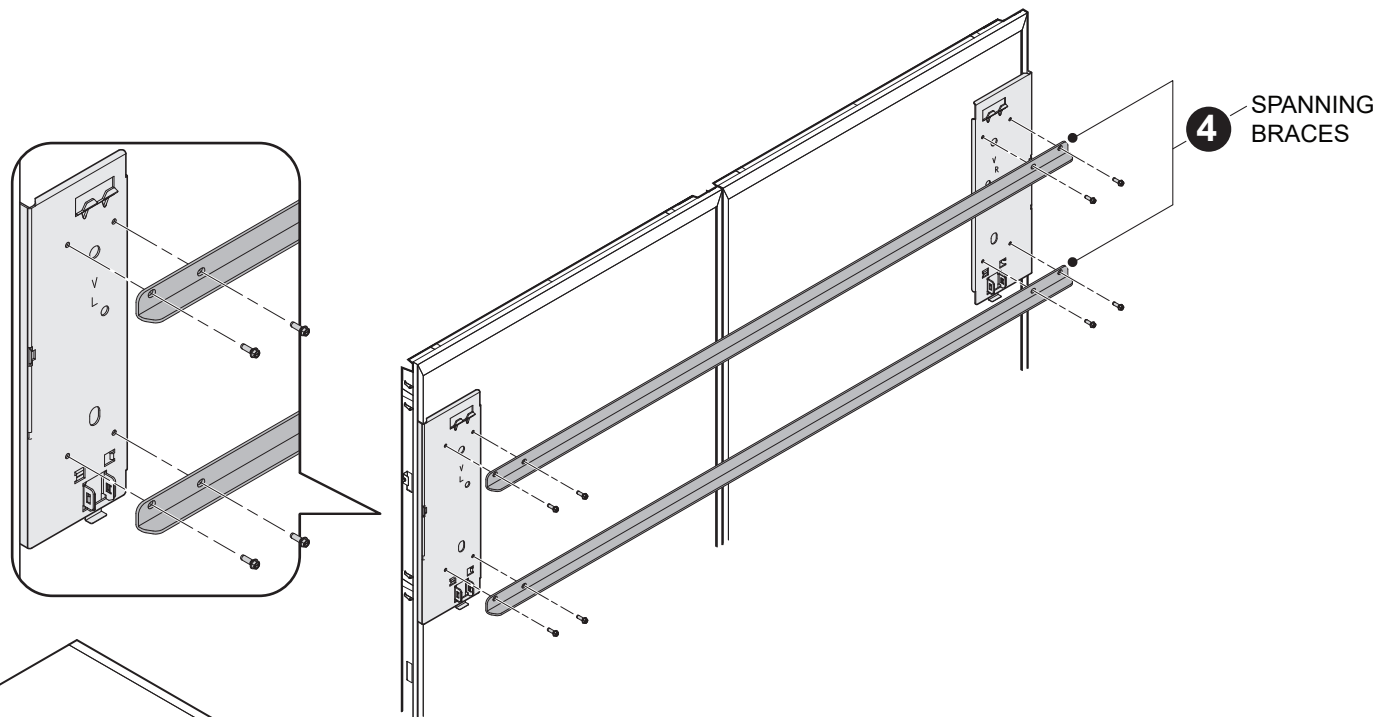




7. Install storage cabinet onto panel brackets.

- A) Hang top of cabinet onto brackets.
- B) Ease bottom of cabinet into place.
- C) Listen for safety catch noise (snap!)

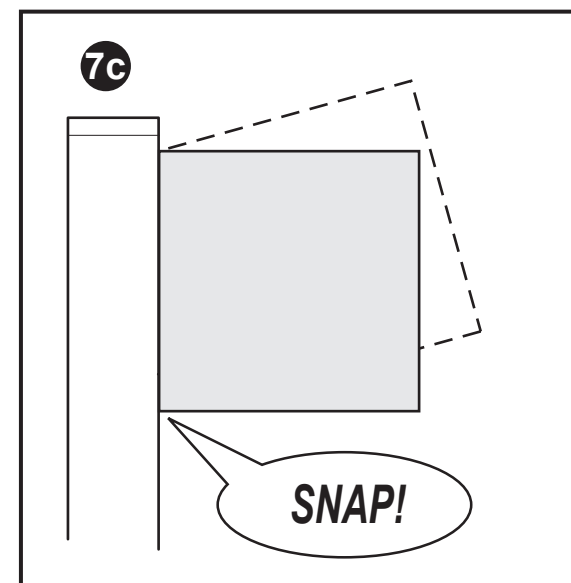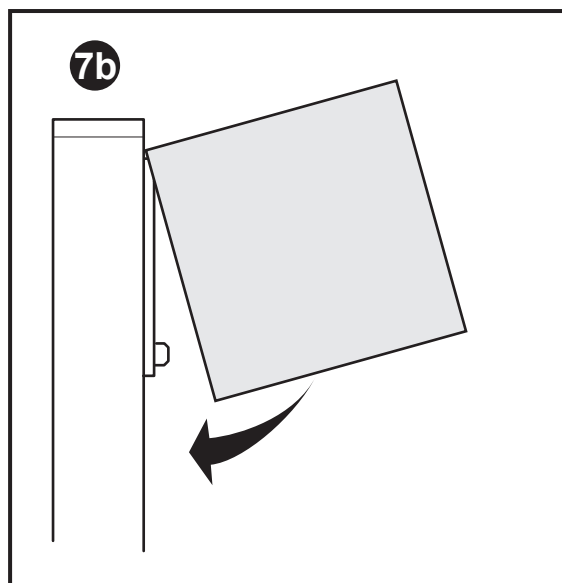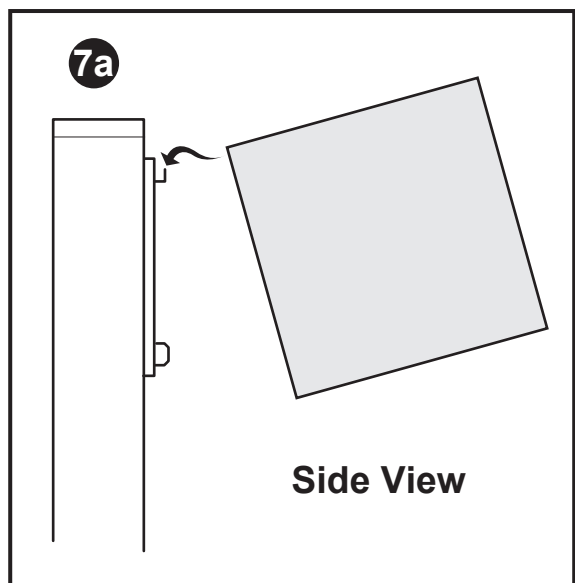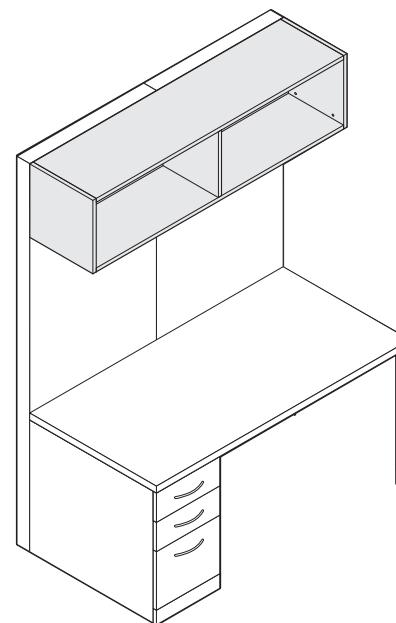


To Release Cabinet From Panel:

- A) *Push up on tabs.*
- B) *Move bottom of cabinet away from panel.*
- C) *Lift cabinet free of brackets.*

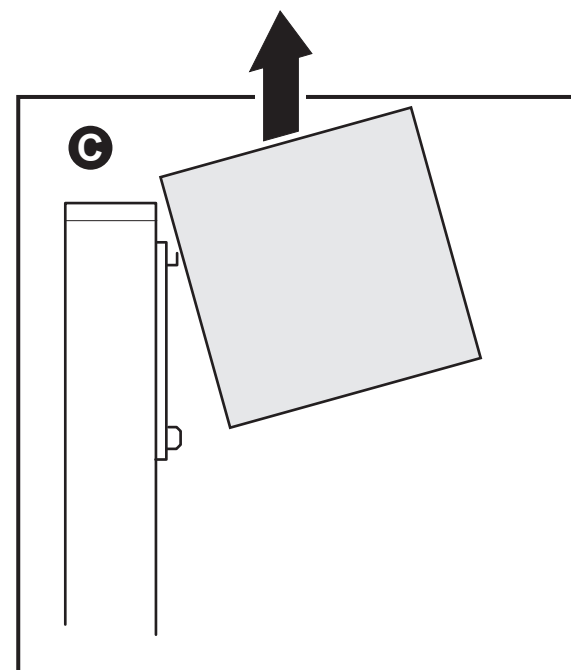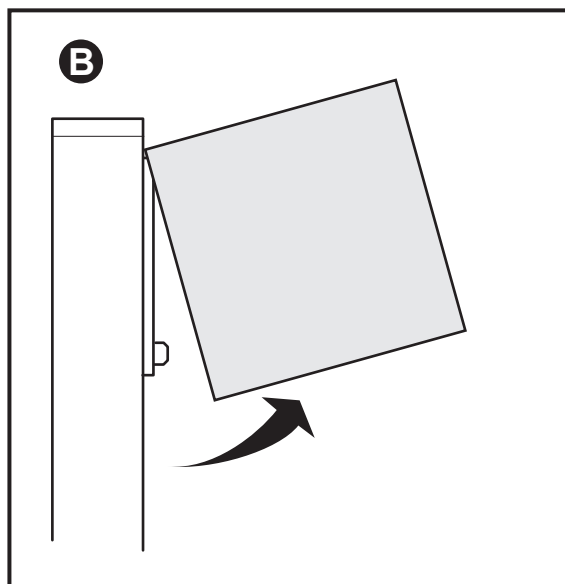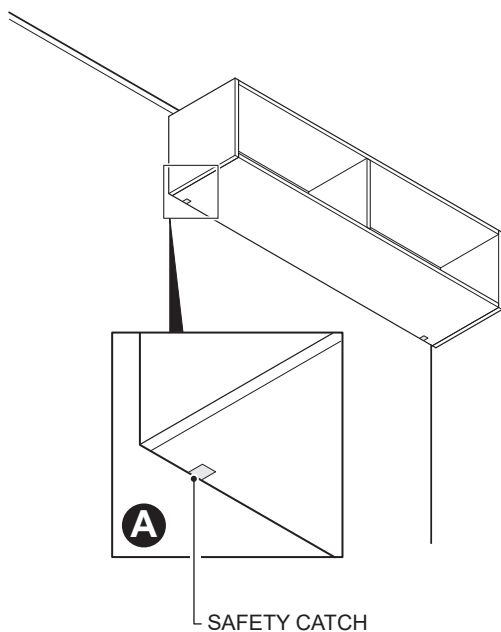


HINGE ADJUSTMENT

Adjust doors. A #2 screwdriver is recommended for adjusting hinge.

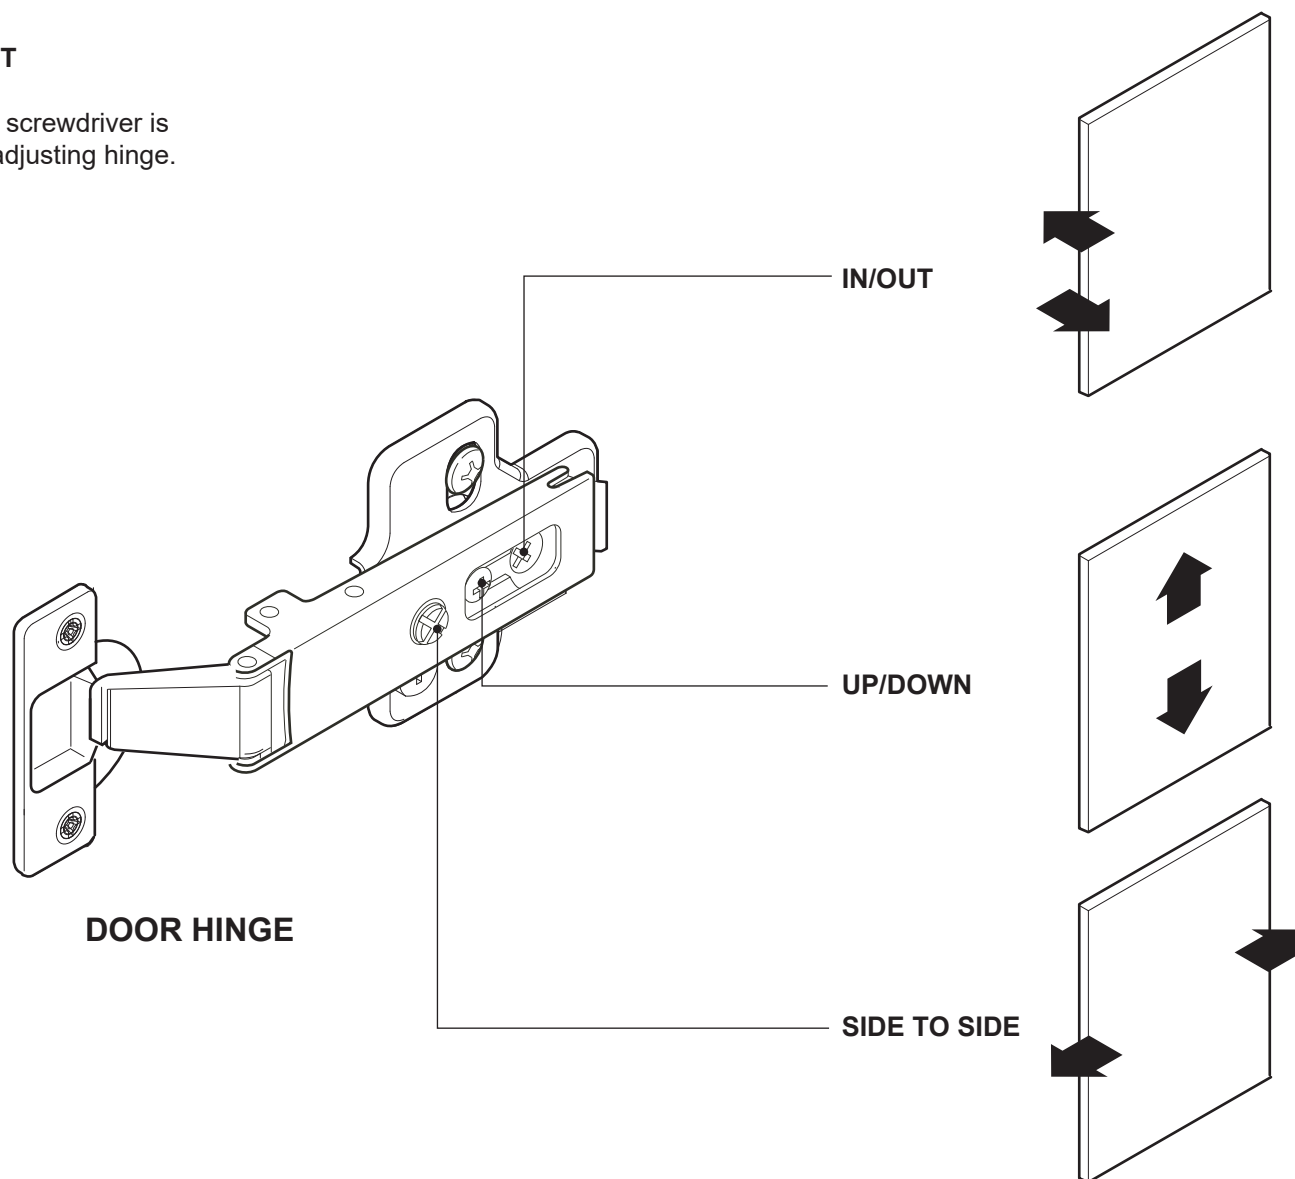


TOUCH LATCH ADJUSTMENT

1. Touch latch may be adjusted in or out by turning with a flat blade screwdriver or with fingertips.

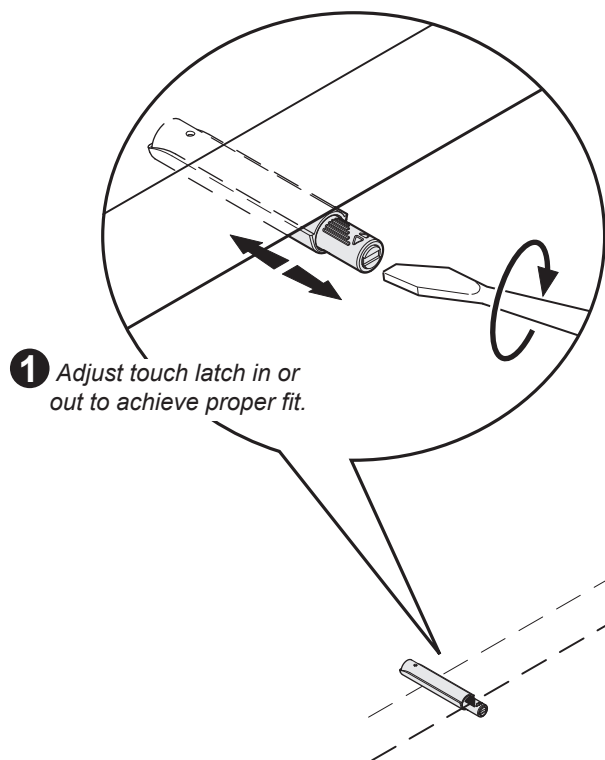

Adjust touch latch until gap between door and unit is straight and even and touch latch functions properly.

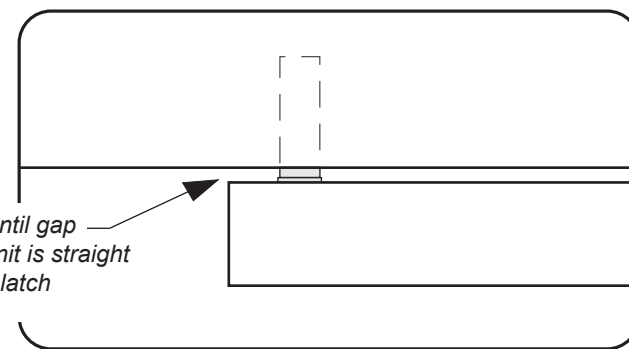

TOP VIEW

