


On-Module Begins on page 2

Basic (integral hooks)

Use on:


- Answer
- kick

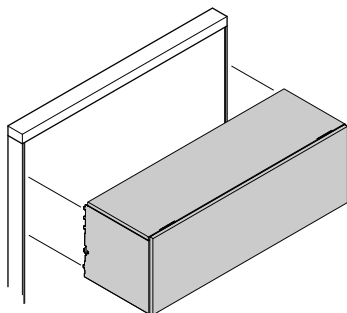

Universal (panel brackets)

Use on:

- Answer
- kick
- Series 9000
- Avenir
- Montage
- ap40
- V.I.A.
- Everwall

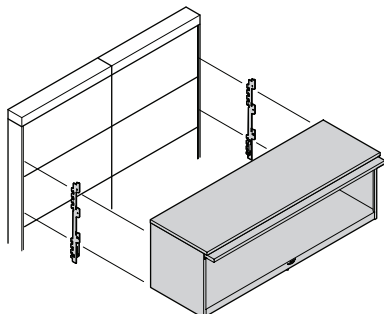


Off-Module Begins on page 5

Vertical (vertical slot support)

Use on:


- Answer
- kick
- Series 9000
- Avenir
- Montage
- V.I.A.
- Everwall

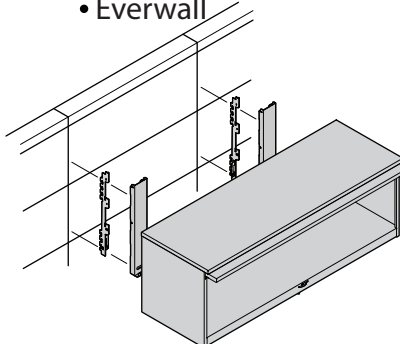

Horizontal (horizontal slot support)

Use on:



- Montage

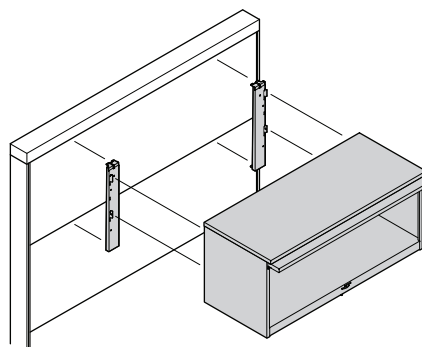







Up Mount Begins on page 13

Use on:

- Answer
- kick
- Series 9000
- Avenir
- Montage

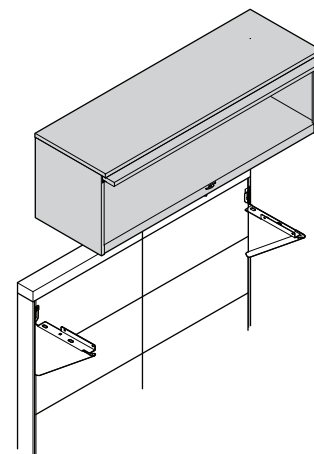


#2 Quad Drive Bit

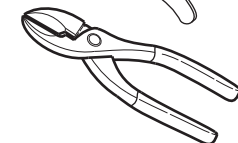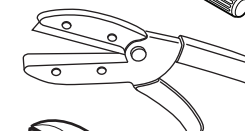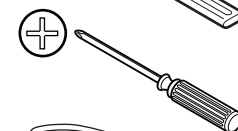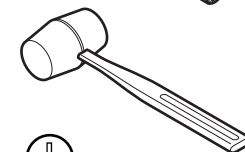

On-Module Bin with Integral Hooks


Use on:

- Pathways Technology Wall
- Answer
- kick

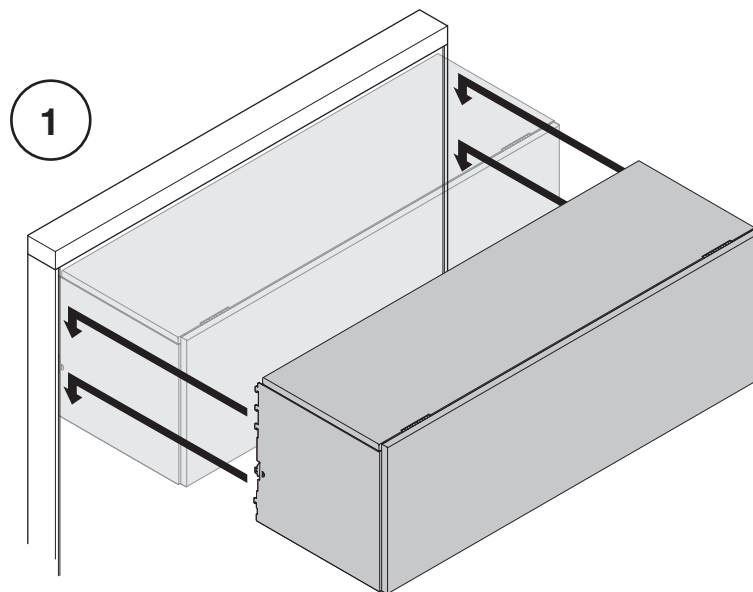

1. Insert bin hooks into panel.

2. Verify full engagement of safety catches by lifting up on the installed bin.

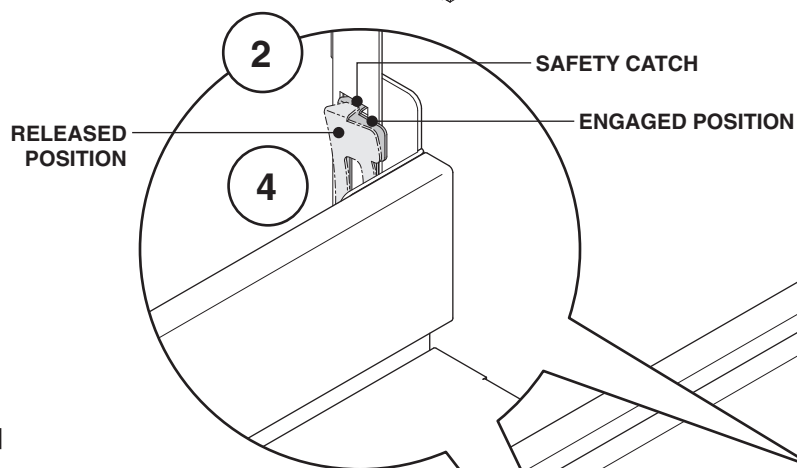


3. Stabilize adjoining bins with #8 x 3/8" screws and tie strap under front edge.

4. To remove bin, release both safety catches and lift bin upward and away from the panel.



CAUTION

To prevent personal injury and ensure proper panel stability, Refer to Application Guidelines for the specific panel system used.

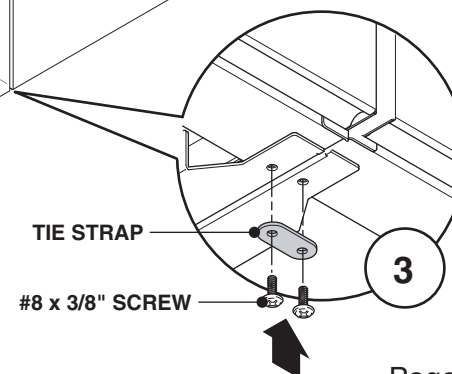

On-Module Bin with Panel Brackets

1. Install proper LH/RH panel brackets on to panel (1a) (see next page for panel bracket identification). Install the Montage brackets by inserting top tab then bottom tab (1b). Using an X'acto knife, cut slots in the seal using the furniture slots as guides before installing brackets on to V.I.A. (1c).

NOTE: Tap into position with a mallet for Series 9000.

2. Verify full engagement of bracket safety catches by lifting up on installed brackets.

3. Mount bin on to panel brackets by inserting all three panel bracket hooks in to the bin slots. Focus on the top hook first.



4. Verify full engagement of bin safety catches by lifting up on the installed bin.

5. Stabilize adjoining bins with #8 x 3/8" screws and tie strap under front edge.

6. To remove bin, release both safety catches and lift bin upward and away from the panel.

Use on:

- Pathways Technology Wall
- Answer
- kick
- Series 9000
- Avenir
- Montage
- ap40
- V.I.A.
- Everwall

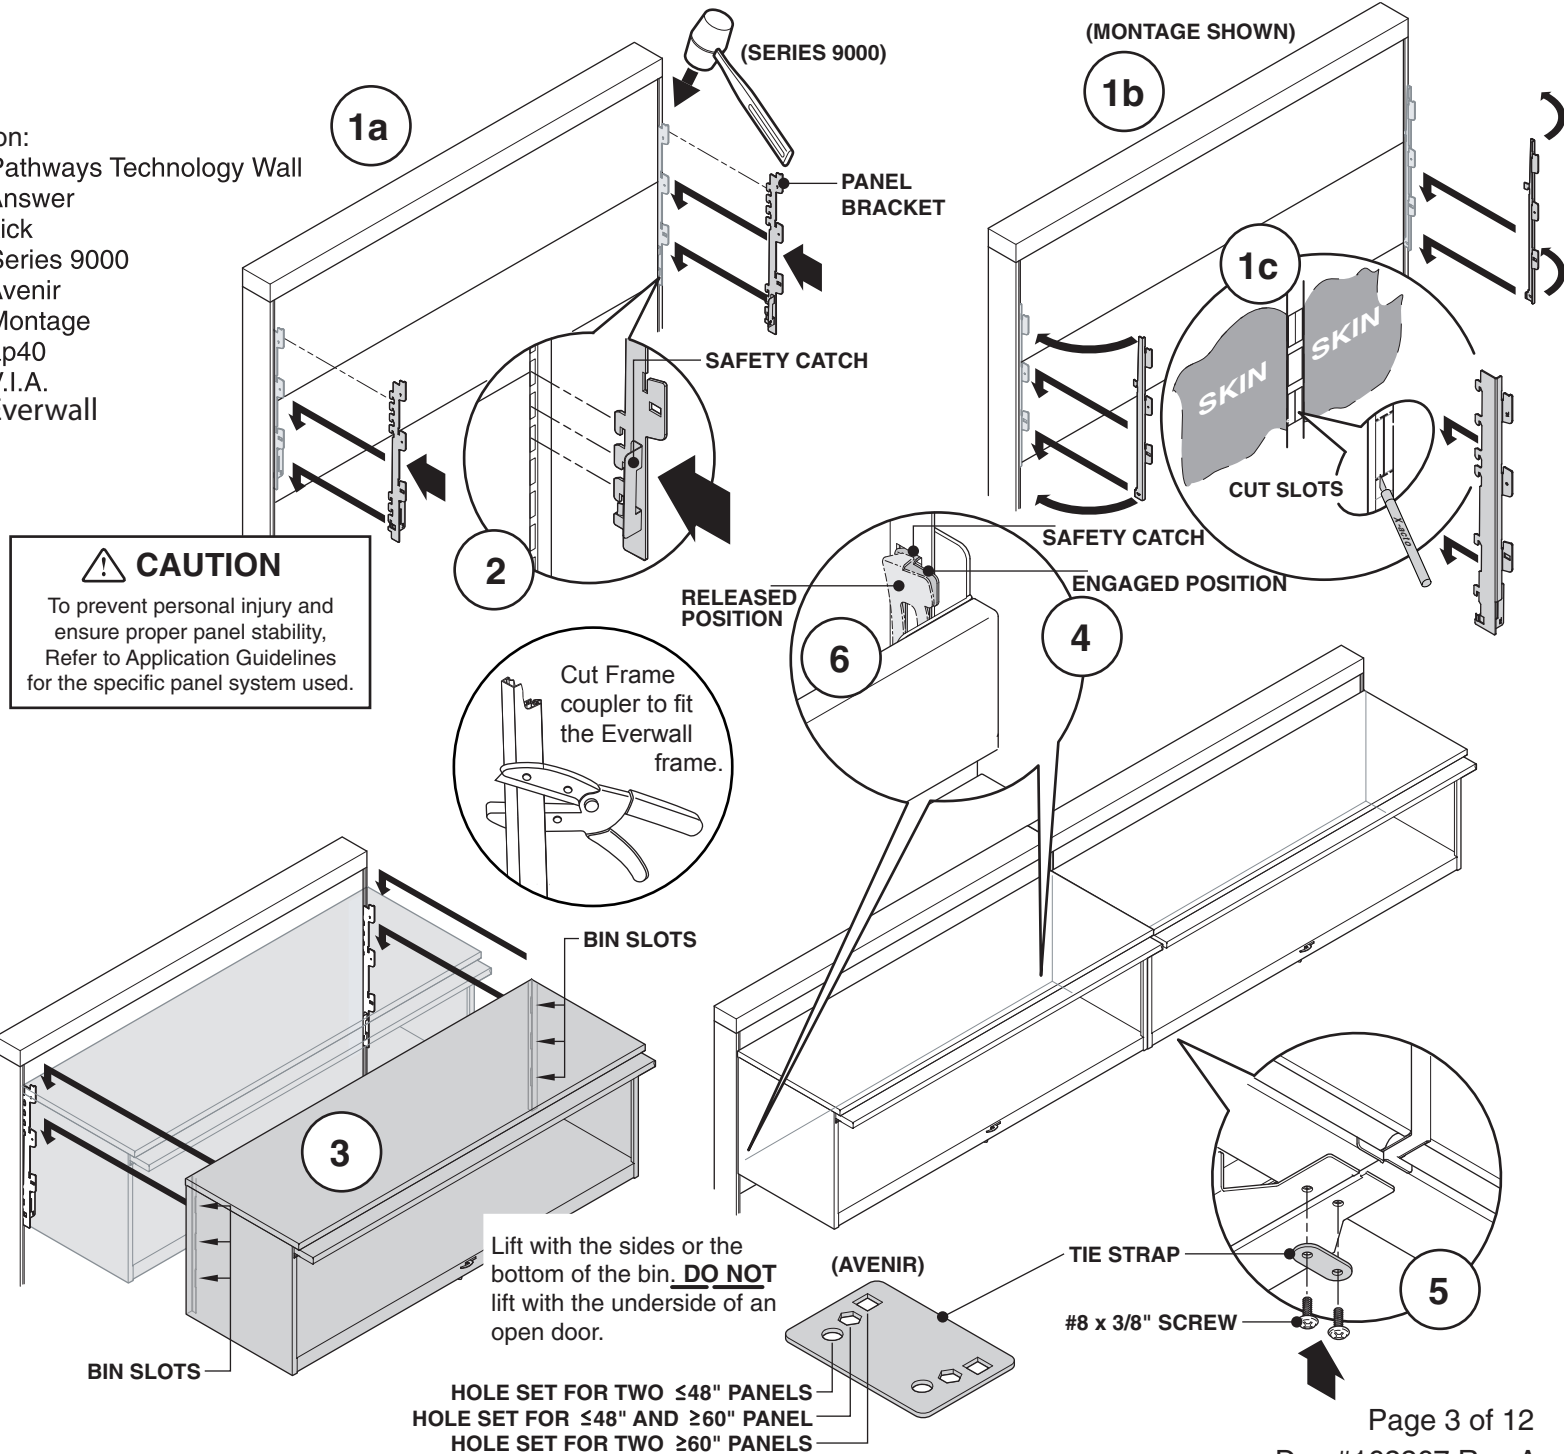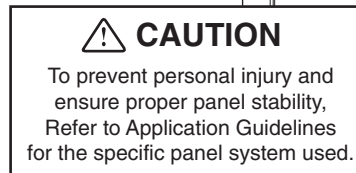

Panel Bracket Identification

T = Pathways
Technology Wall
A = Answer
K = kick

L = Left Hand
R = Right Hand

L49 = Left Hand
R50 = Right Hand







9 = Series 9000
& ap40

AV = Avenir

M = Montage


V = V.I.A.
VL = Left Hand
VR = Right Hand

EW = Everwall
RH = Right Hand
LH = Left Hand

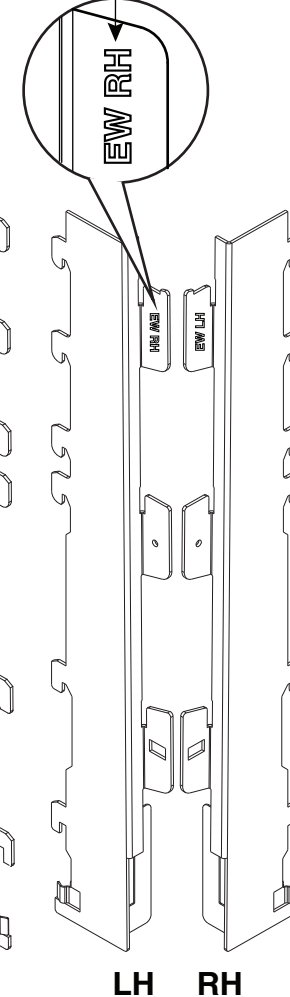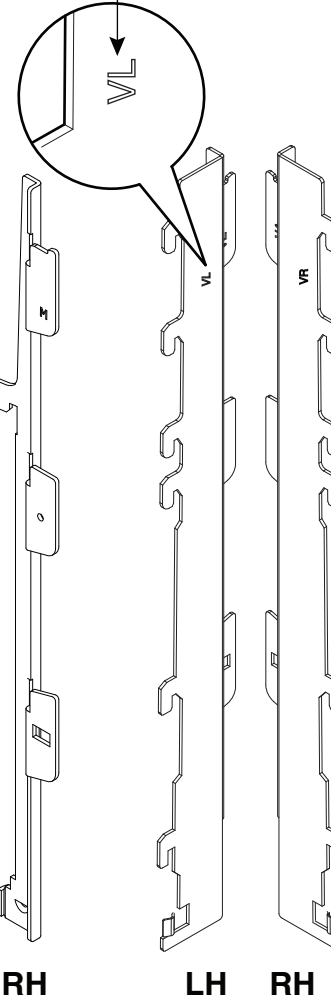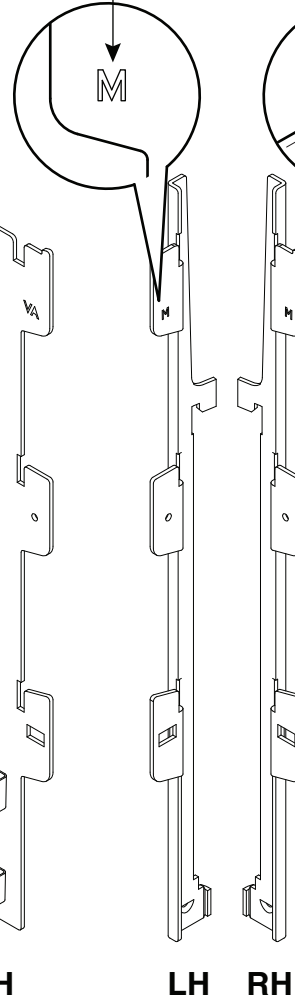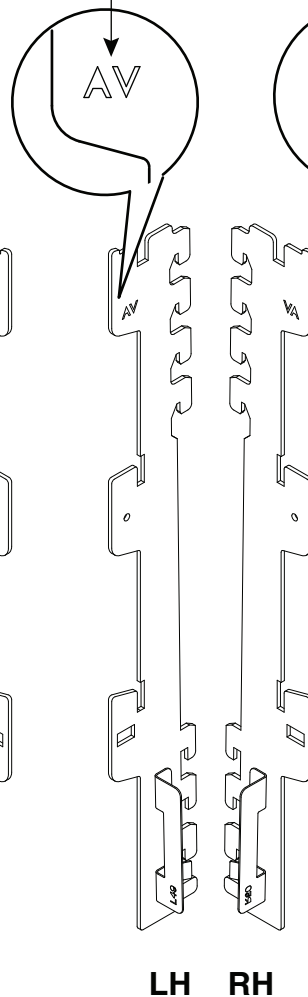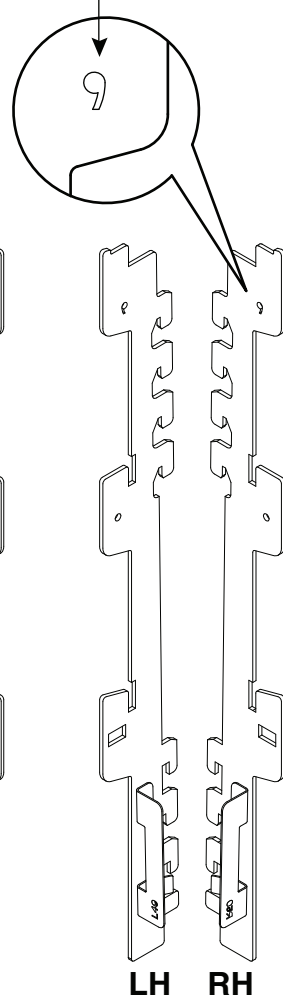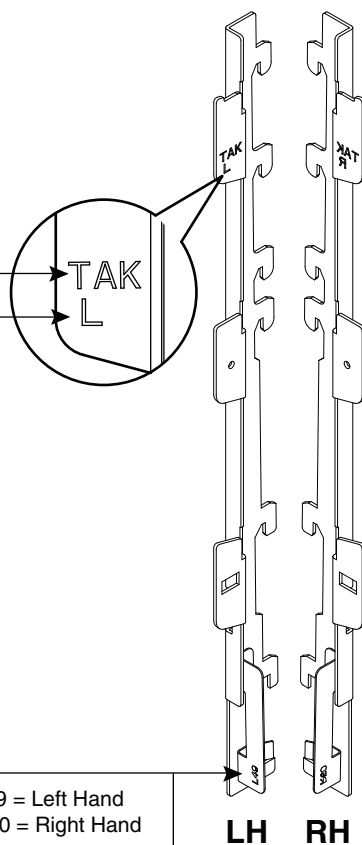

CAUTION

To prevent personal injury, bin overhang cannot exceed dimensions shown.

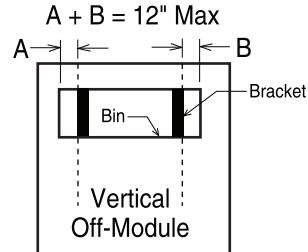

Vertical Off-Module Bin (vertical slot support)

Use on:

- Pathways Technology Wall
- Answer
- kick
- Series 9000
- Avenir
- Montage
- V.I.A.
- Everwall

1. Install proper LH/RH panel brackets on to panel (see page 4 for panel bracket identification).

NOTE: Tap into position with mallet for Series 9000.



2. Verify full engagement of bracket safety catches by lifting up on installed brackets.

3. Secure reinforcing bracket to top of off-module bracket with two (2) #8 x 3/8" screws.

4. Mount one (or two) off-module bracket(s) on to panel bracket(s) (4a) and secure with one (1) #8 x 3/8" screw per bracket (4b).


CAUTION

To prevent personal injury and ensure proper panel stability, Refer to Application Guidelines for the specific panel system used.

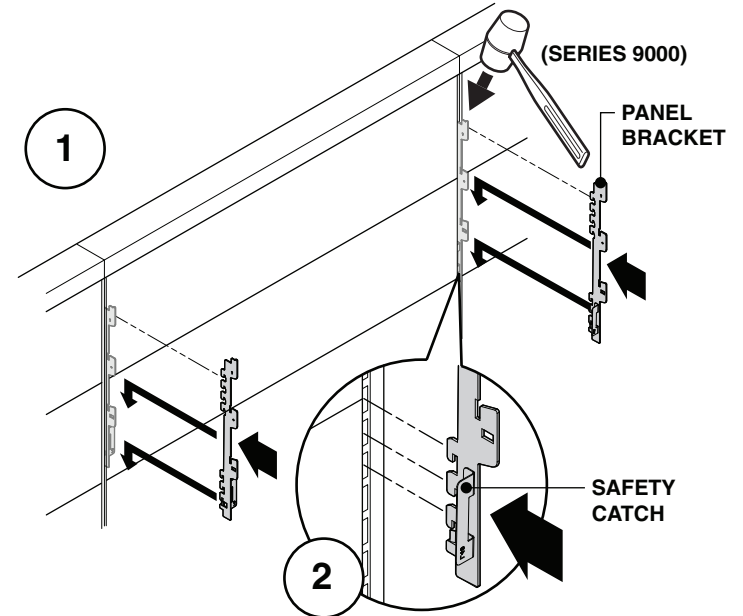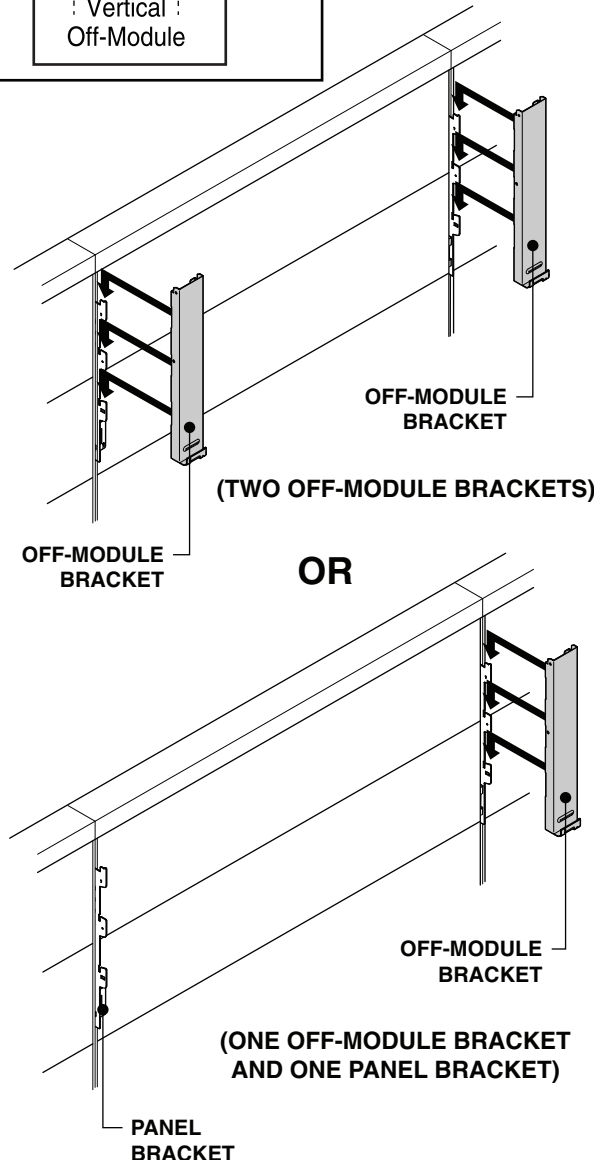


CAUTION

To prevent personal injury and ensure proper panel stability, Refer to Application Guidelines for the specific panel system used.

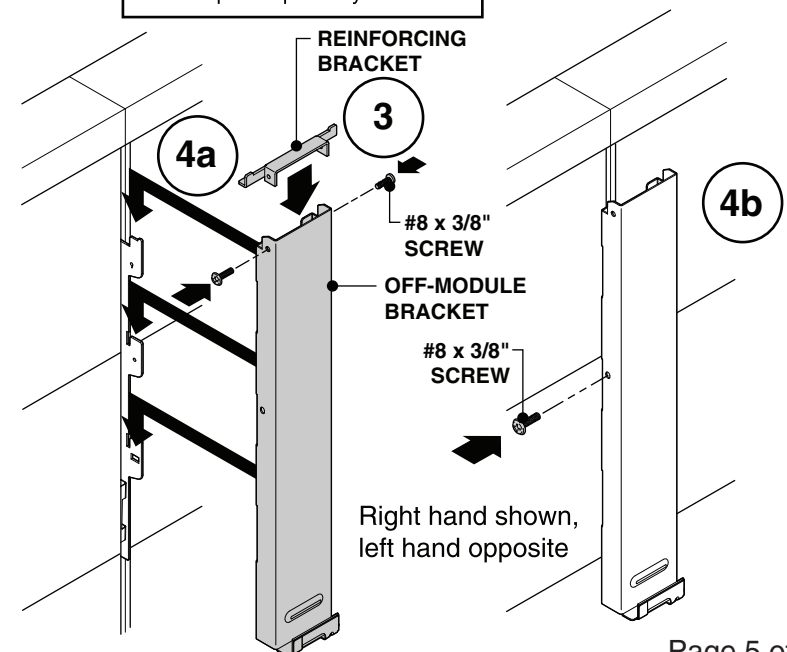

5. If present, with wire cutters, cut off the ends of the christmas tree clips that connect the door equalizer to the rear of the dust cover.

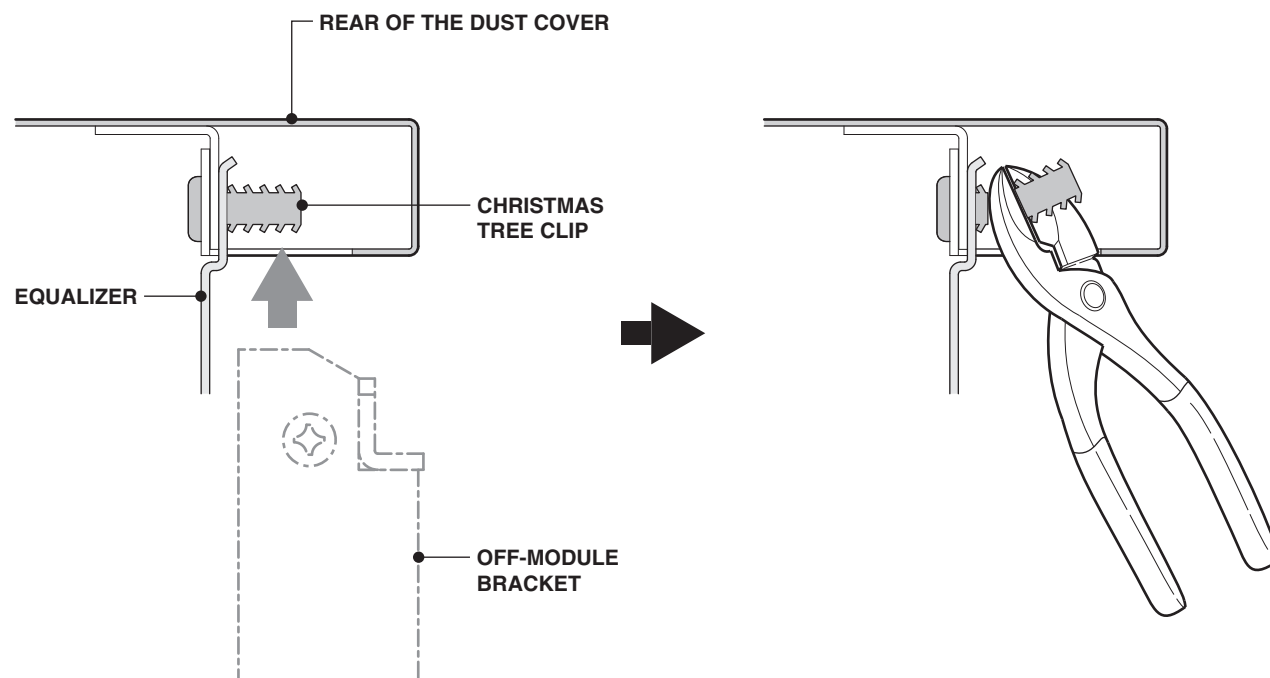


6. Mount bin on to panel bracket by inserting all three (3) panel hooks into the bin slots (6a), or by fully engaging the dust cover and back stop on the off-module bracket(s) (6b).

7. Verify full engagement of bracket safety catches by lifting up on the installed bin.

8. Stabilize adjoining bins with #8 x 3/8" screws and tie strap under front edge.

9. To remove bin, release both safety catches and lift bin upward and away from panel.

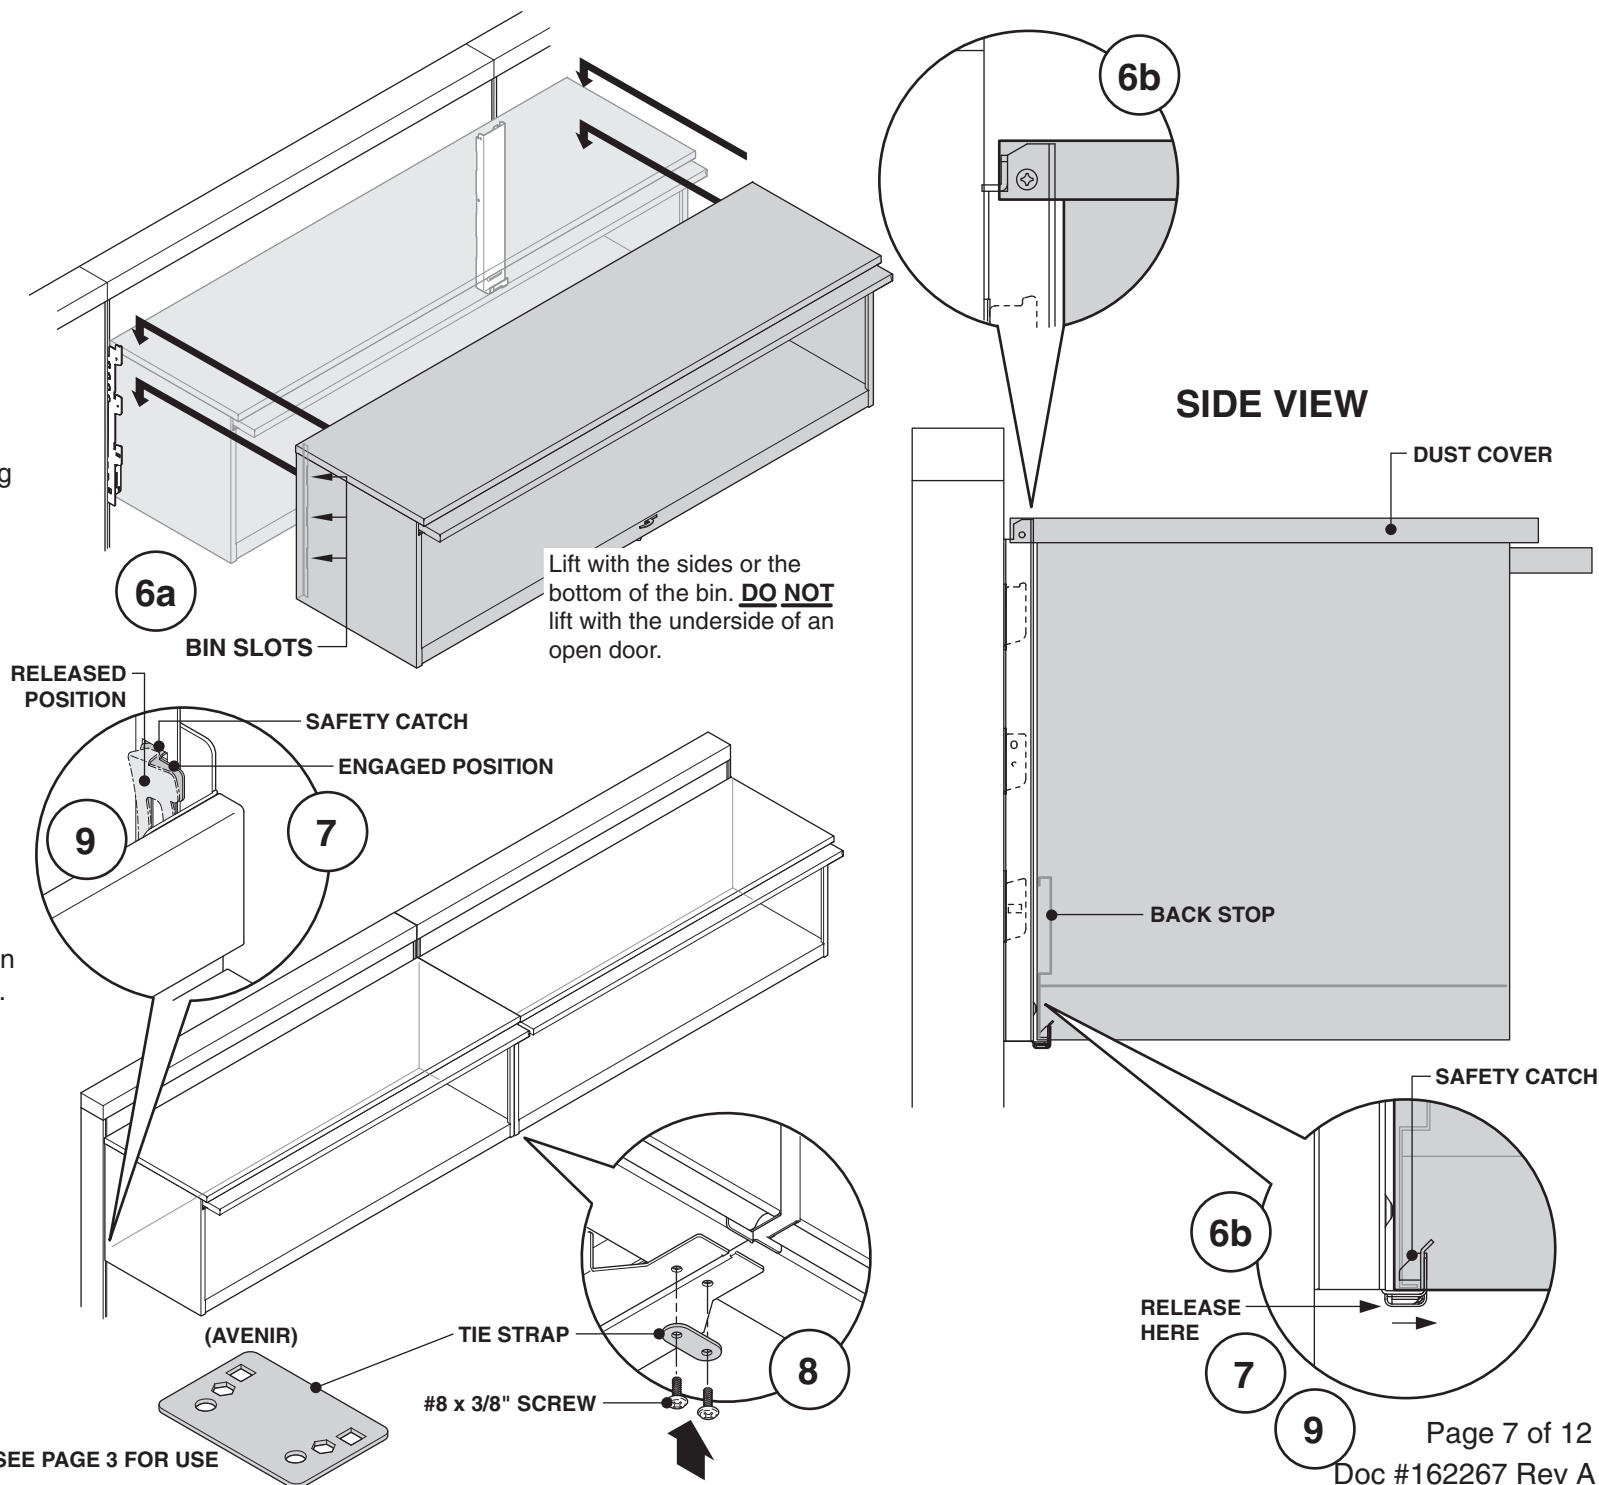

Horizontal Off-Module Bin (horizontal slot support)

Use on:

- Montage

1. Assemble the left and right hand panel mounting brackets.


2. Install the off-module panel mounting brackets into panel slots such that bin hook width matches bin width. Brackets can be installed at any point along the frame except on a spine wall connection.

3. Verify full engagement of safety catches by moving installed brackets in the opposite direction of installation.



CAUTION

To prevent personal injury and ensure proper panel stability, Refer to Application Guidelines for the specific panel system used.

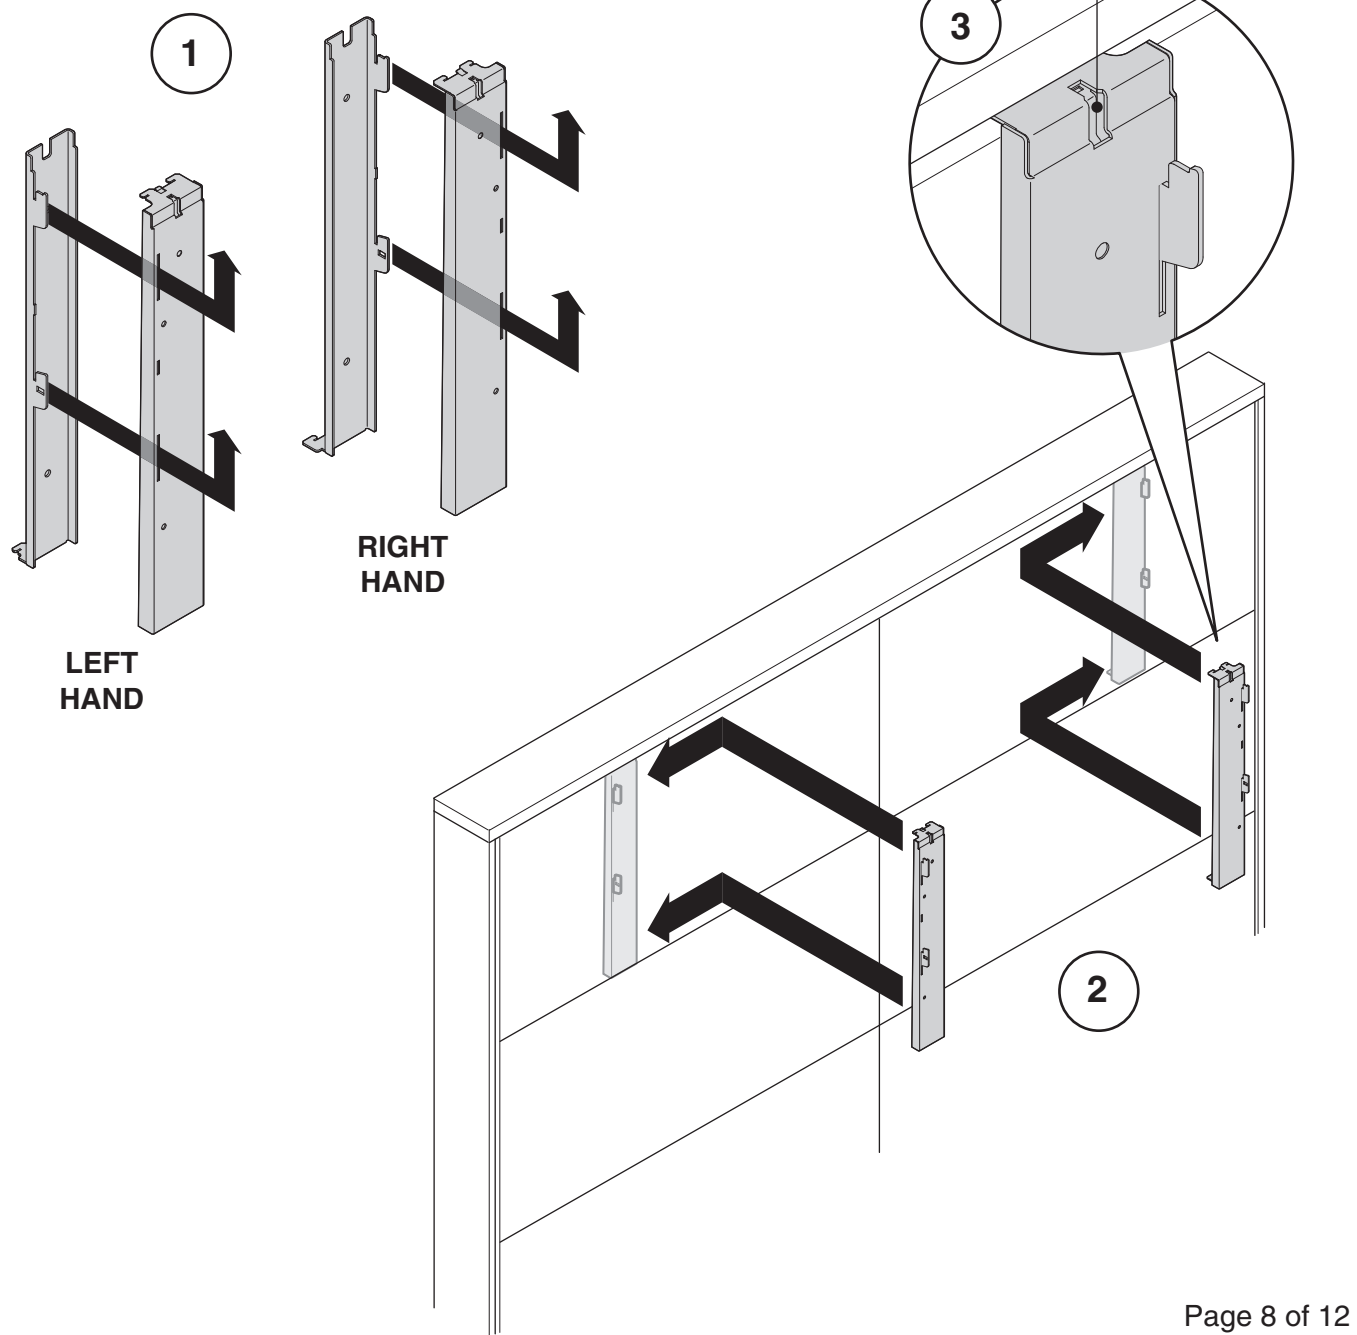


4. Mount bin on to panel brackets by inserting both panel bracket hooks into the bin slots. Focus on the top hook first.

5. Verify full engagement of bin safety catches by lifting up on the installed bin.

6. Stabilize adjoining bins with #8 x 3/8" screws and tie strap under front edge.

7. To remove bin, release both safety catches and lift bin upward and away from the panel.

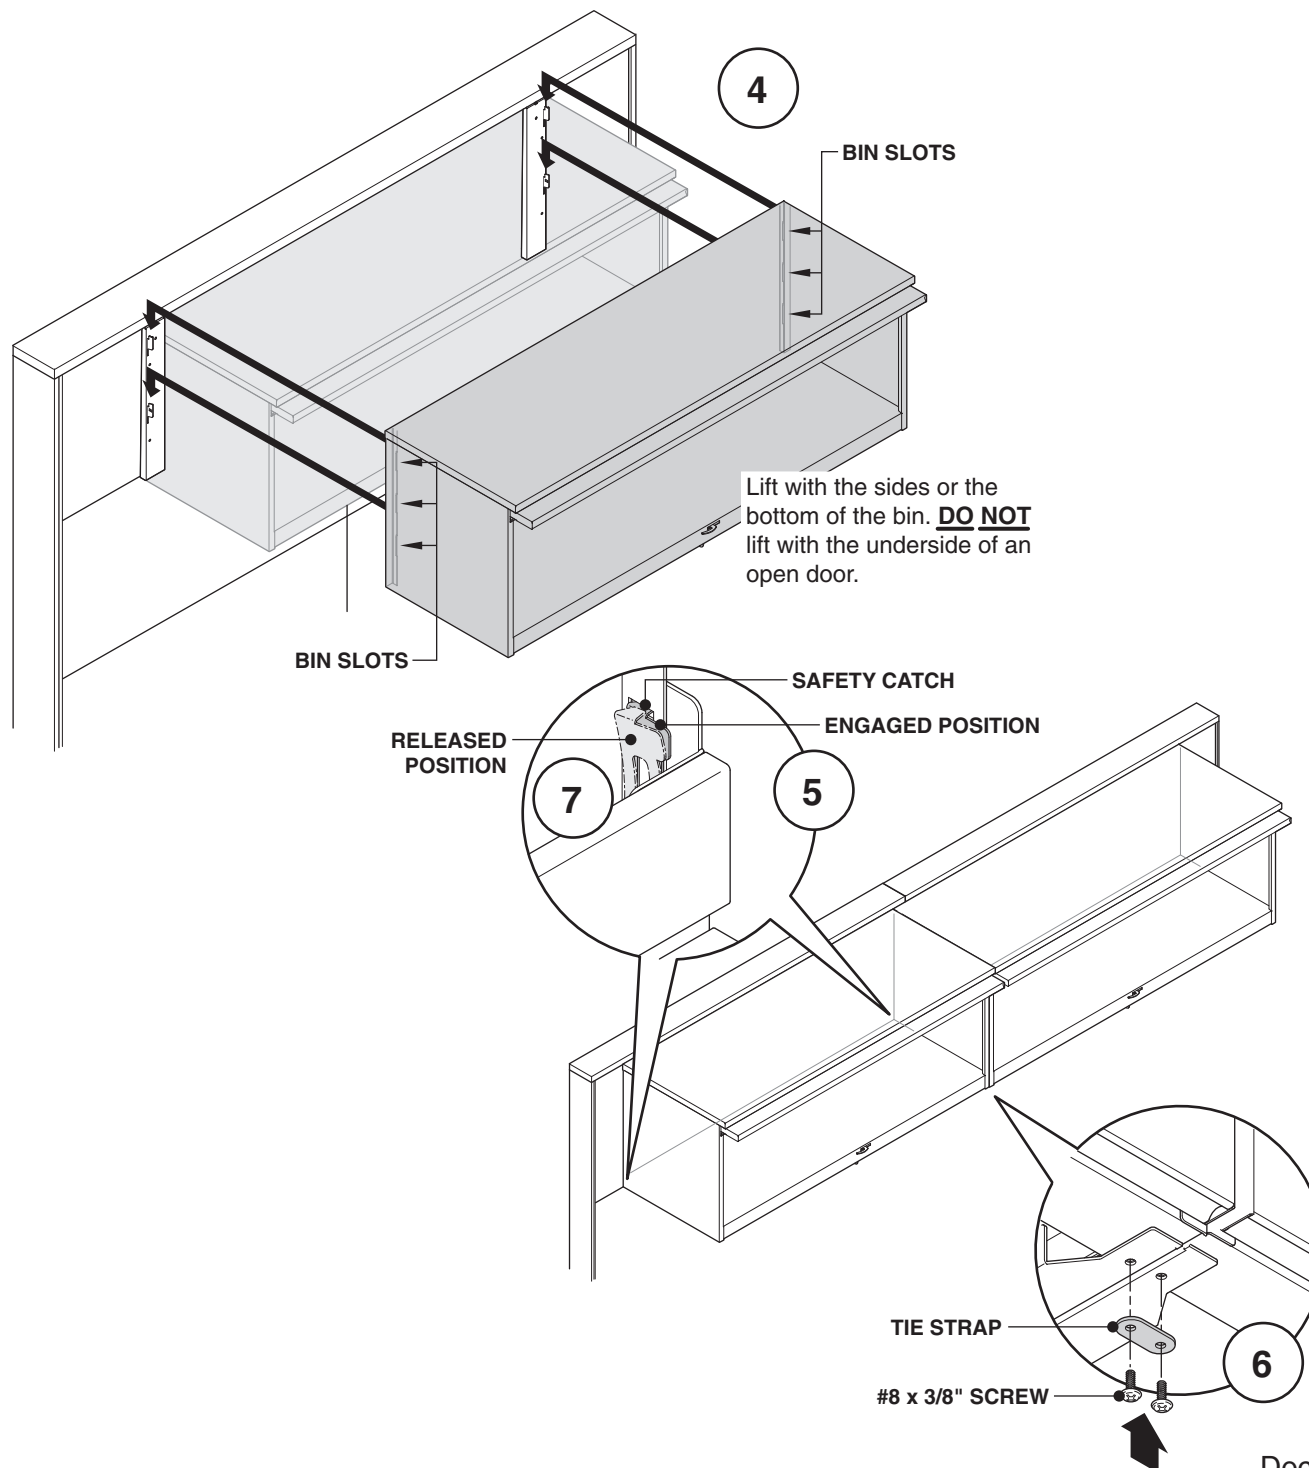

Up Mount Bin

Use on:

- Pathways Technology Wall
- Answer
- kick
- Series 9000
- Avenir
- Montage

1. Install proper LH/RH brackets onto panel (see next page for bracket identification/position).
NOTE: Tap into position with a mallet for Series 9000.


2. Verify full engagement of bracket safety catches by lifting up on installed brackets.

3. Attach back. With bin face down, engage back hooks at each end and slide back into place against dust cover.




CAUTION

To prevent personal injury and ensure proper panel stability, Refer to Application Guidelines for the specific panel system used.

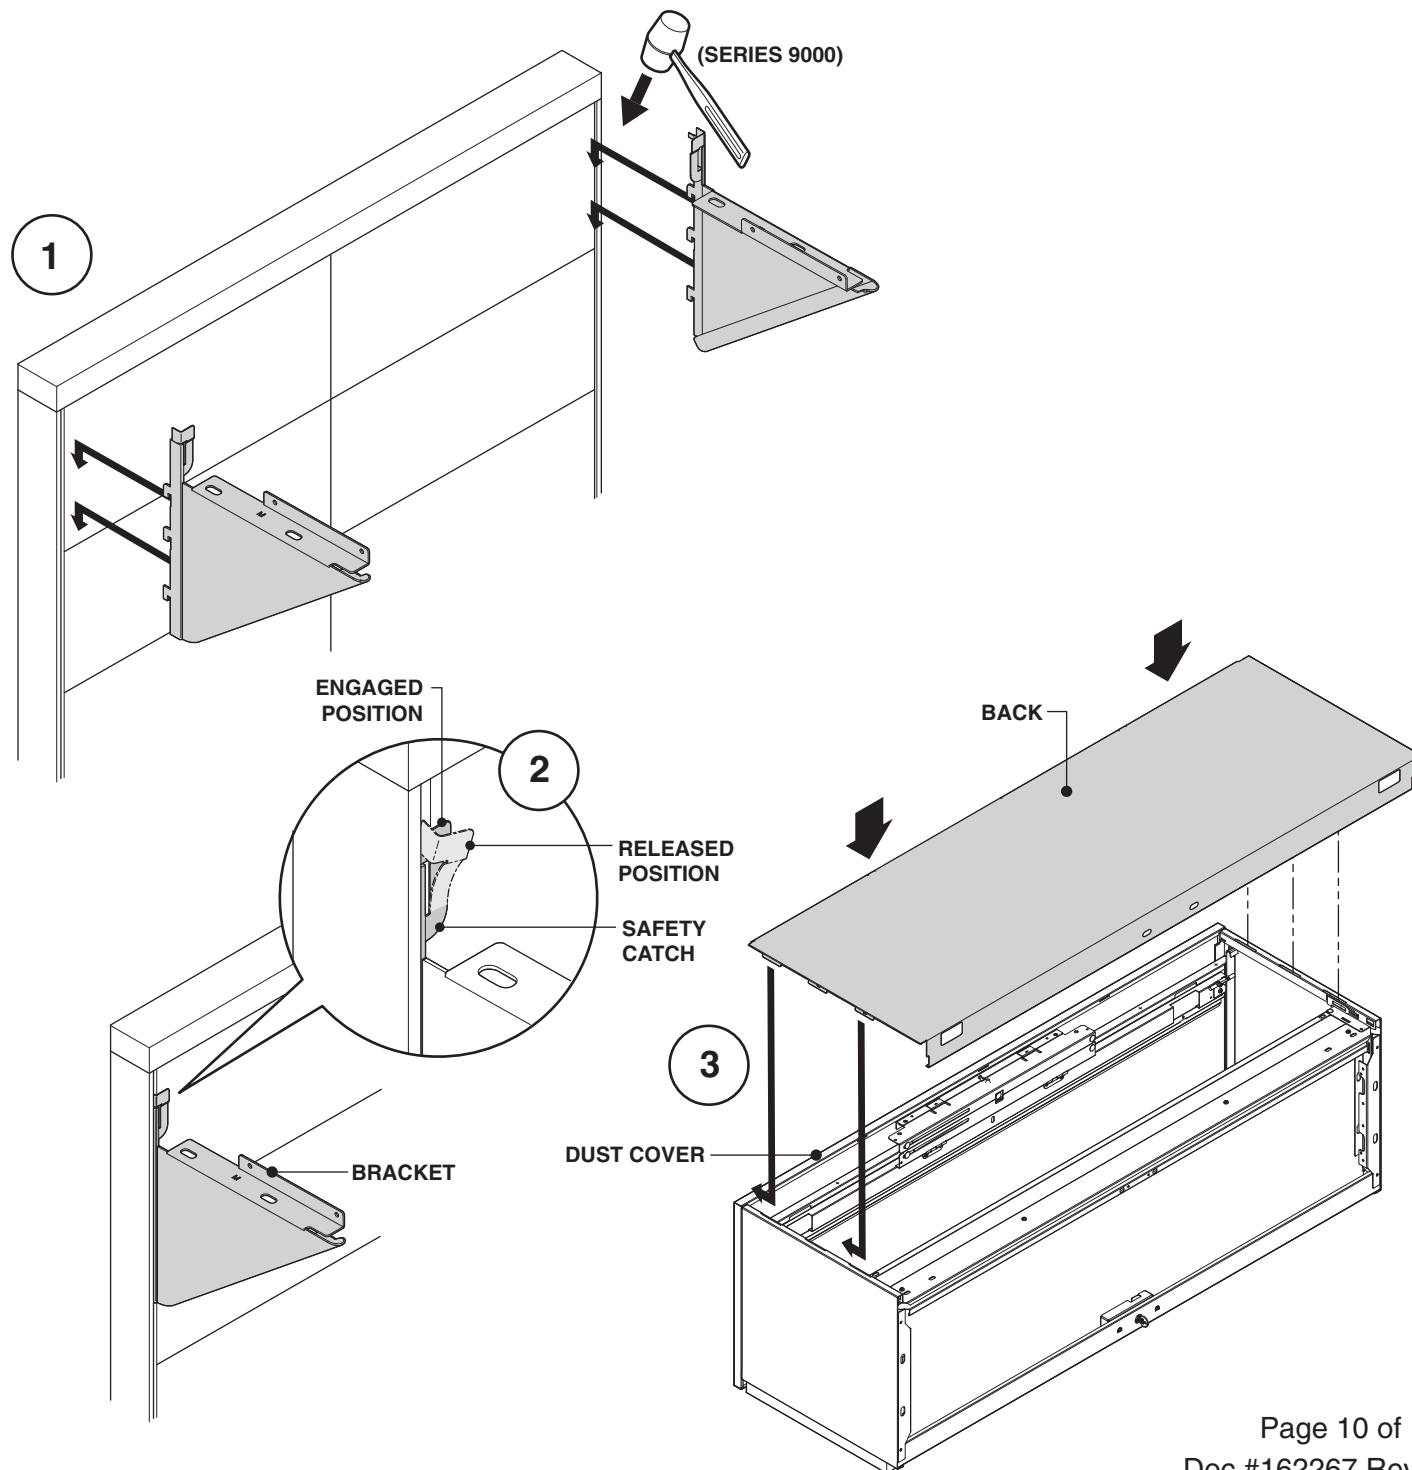


4. Secure back to dust cover with three (3) #8 x 3/8" screws.

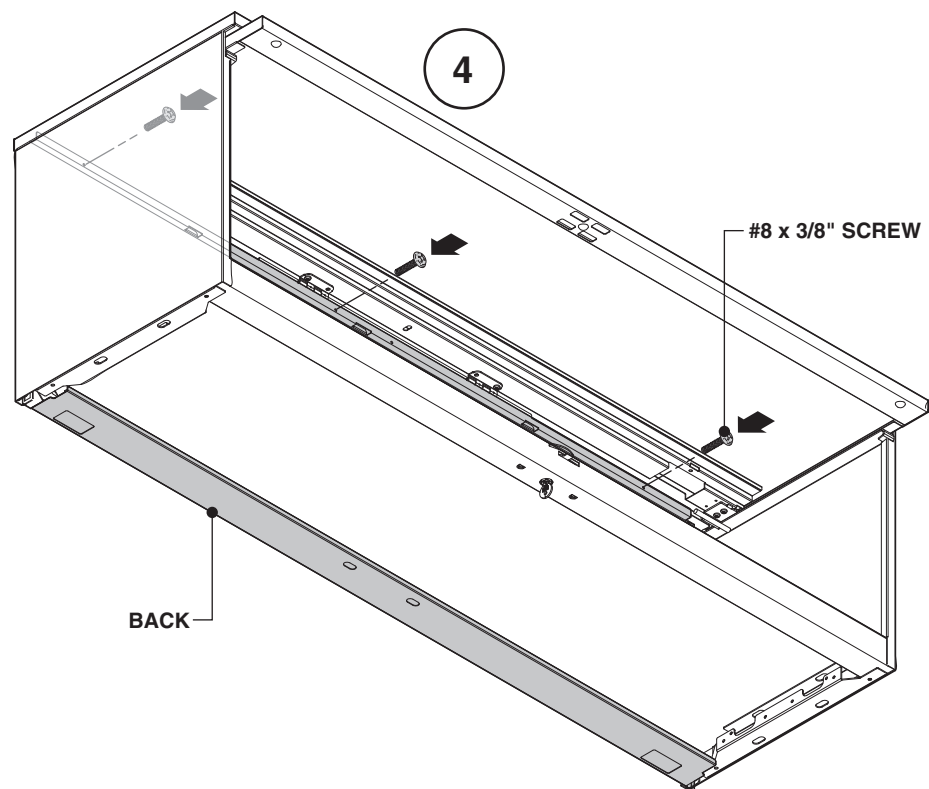


Up Mount Bin Bracket Identification/Position

Left Hand

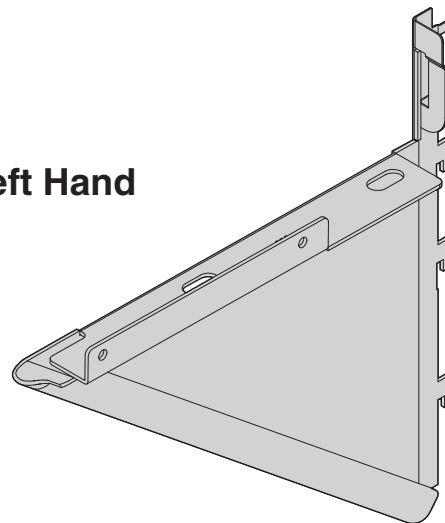

Right Hand

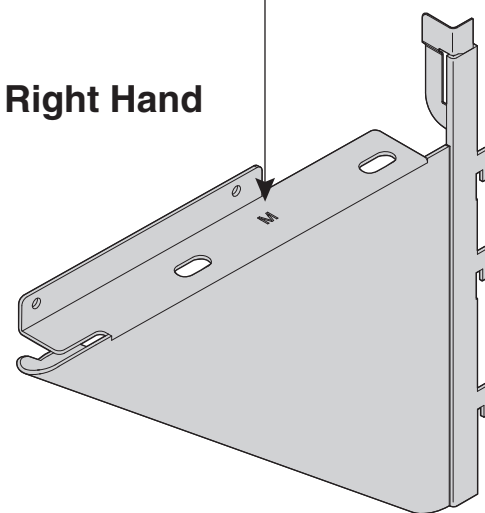

TAK = Pathways Technology
Wall, Answer and kick

M = Montage

AV = Avenir

9 = Series 9000

**SLOT LOCATION
FROM TOP OF PANEL
FOR FULL UP MOUNT
POSITION**

Pathways
Technology Wall - 4th
Answer - 3rd
kick - 3rd
Montage - 1st
Avenir - 3rd
Series 9000 - 5th



5a

Lift with the sides or the bottom of the bin. **DO NOT** lift with the underside of an open door.

5. Place bin on brackets (5a) and secure with four (4) #10 x 1/2" screws (5b).

6. Stabilize adjoining bins with #8 x 3/8" screw and tie straps under front edge.

7. To remove bin, remove four (4) screws (5b) and lift bin off brackets. Release safety clip to remove brackets.

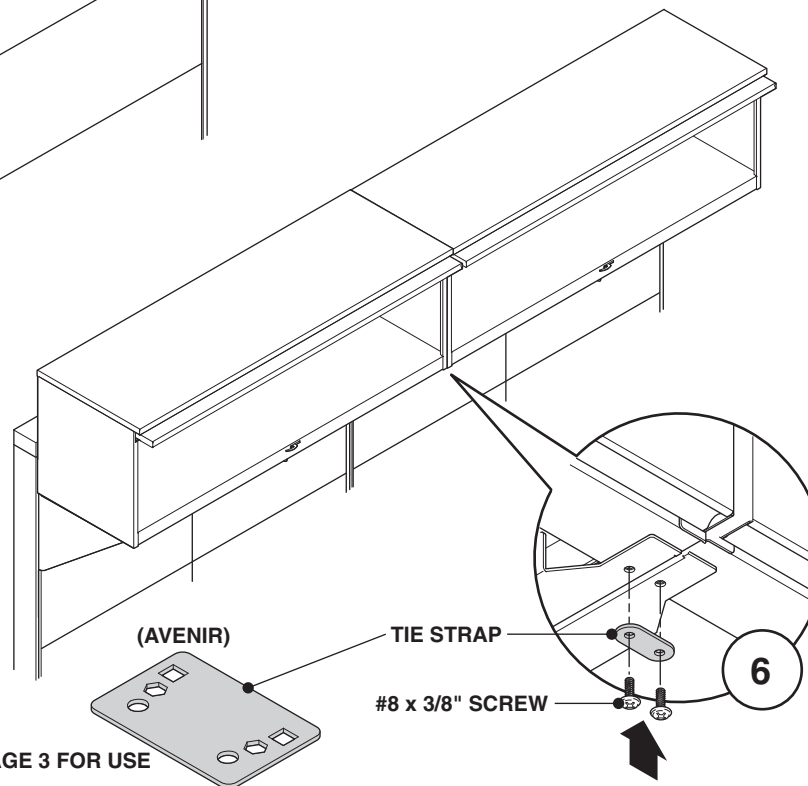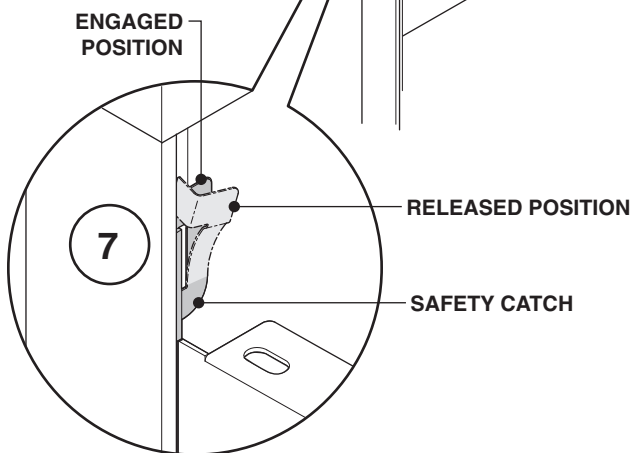

#10 x 1/2" SCREW

5b