

HEX DRIVE

PHILLI PS DRIVE

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)  
Or visit our website: [www.steelcase.com](http://www.steelcase.com)

© 2014 Steelcase Inc.  
Grand Rapids, MI 49501  
U.S.A.

Printed in U.S.A.

## Drainage Bag Installation

**NOTE:** You will need to cut holes in the fabric. We recommend a hole punch tool that is 3/8" diameter. (McMaster-Carr, Osborne, etc.)

**1.** Mark the two (2) hole locations as shown.

### FOR MINERAL ONLY:

**2.** Verify location by using a pin, find the center of the treaded inserts that are pre-installed in the frame under the fabric at the two (2) marks made in step 1.


**3.** Now that you know where the center of the threaded inserts are, push and rotate the hole punch tool in the center of the verified hole location to cut through the fabric down to the wood. **DO NOT DAMAGE WOOD!** Remove the cut piece of fabric.

**4.** Install drainage bag bracket with two (2) flat head screws (provided) with phillips screwdriver.

### OR MITRA ONLY:

**2.** There are no inserts behind the fabric. Push and rotate the hole punch tool in the center (same as step 3 above) and remove the cut piece of fabric. (This is done so the installer will not stretch the fabric when installing the screws.)

**3.** Install drainage bag bracket with two (2) flat head wood screws (provided) with phillips screwdriver into the wood side frame.

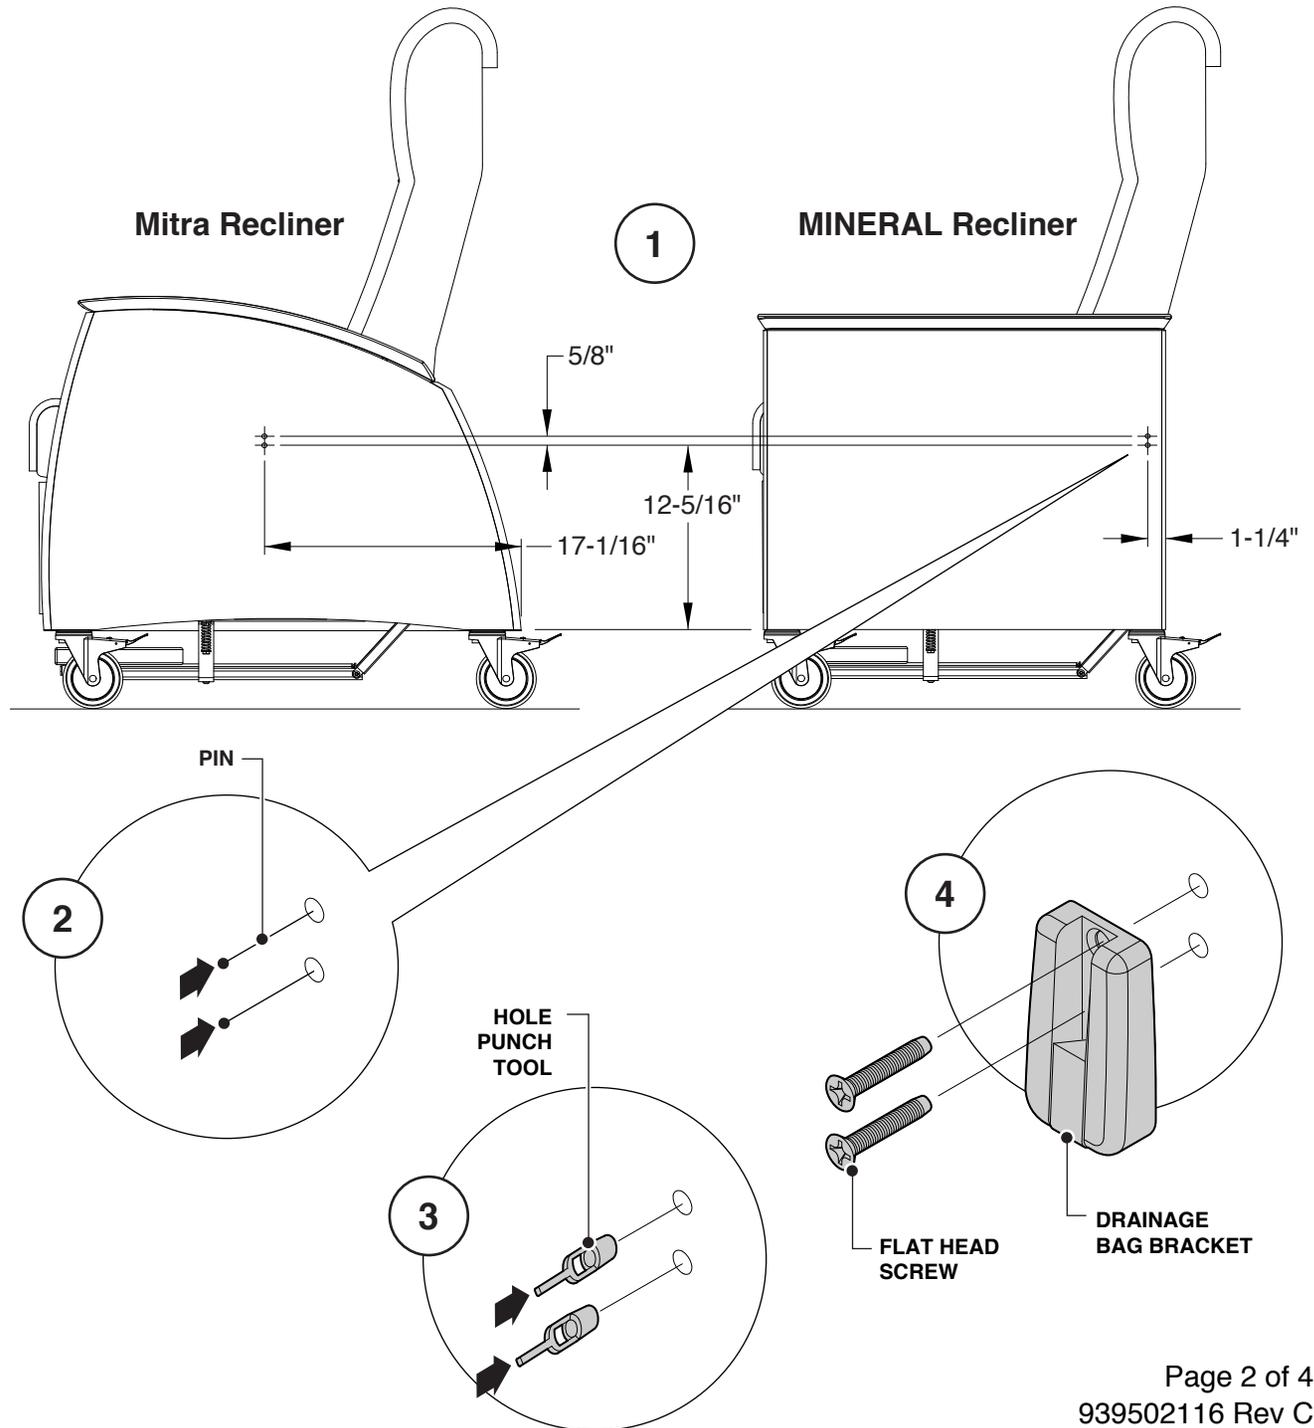

## IV Pole Installation

**NOTE:** You will need to cut the holes in the fabric. We recommend a hole punch tool that is 3/8" diameter. (McMaster-Carr, Osborne, etc.)

**1.** Mark the two (2) hole locations as shown.

### FOR MINERAL ONLY:

**2.** Verify location by using a pin, find the center of the treaded inserts that are pre-installed in the frame under the fabric at the two (2) marks made in step 1.


**3.** Now that you know where the center of the threaded inserts are, push and rotate the hole punch tool in the center of the verified hole location to cut through the fabric down to the steel. Remove the cut piece of fabric.

**4.** Install IV pole bracket with two (2) pan head screws (provided) with hex allen wrench.

### MITRA ONLY:

**2.** There are no inserts behind the fabric. Push and rotate the hole punch tool in the center (same as step 3 above) and remove the cut piece of fabric. (This is done so the installer will not stretch the fabric when installing the screws.)

**3.** Install IV pole bracket with two (2) flat head wood screws (provided) with phillips screwdriver into the wood side frame.

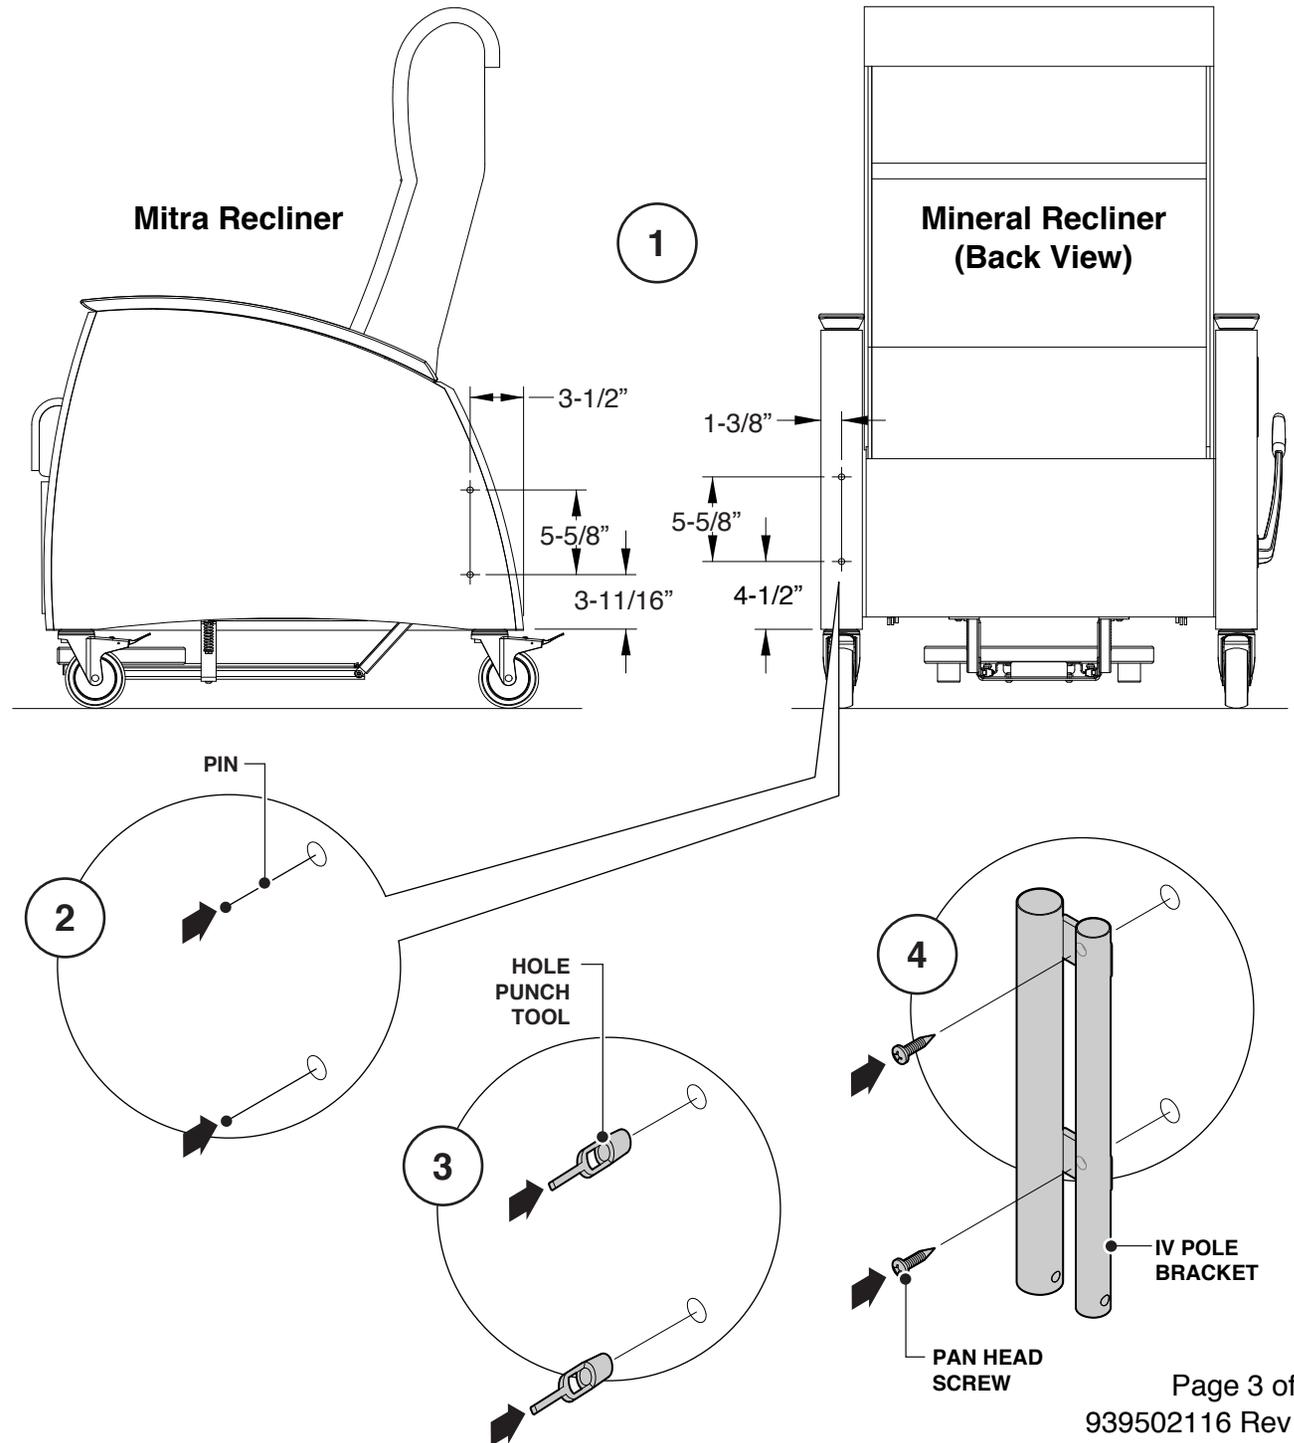

## Push Bar Installation

**NOTE:** You will need to cut the holes in the fabric. We recommend a hole punch tool that is 3/8" diameter. (McMaster-Carr, Osborne, etc.)

1. Mark the two (2) hole locations as shown.
2. Verify location by using a pin, find the center of the threaded inserts that are pre-installed in the frame under the fabric at the two (2) marks made in step 1.
3. Now that you know where the center of the threaded inserts are, push and rotate the hole punch tool in the center of the verified hole location to cut through the fabric down to the steel. Remove the cut piece of fabric.
4. Install the screws, lock washers, collars & washers with an allen wrench as shown.
5. Place the push bar over the collar/washer assembly and install the set screws as shown.

