

Tour™ Shelves

turnstone®


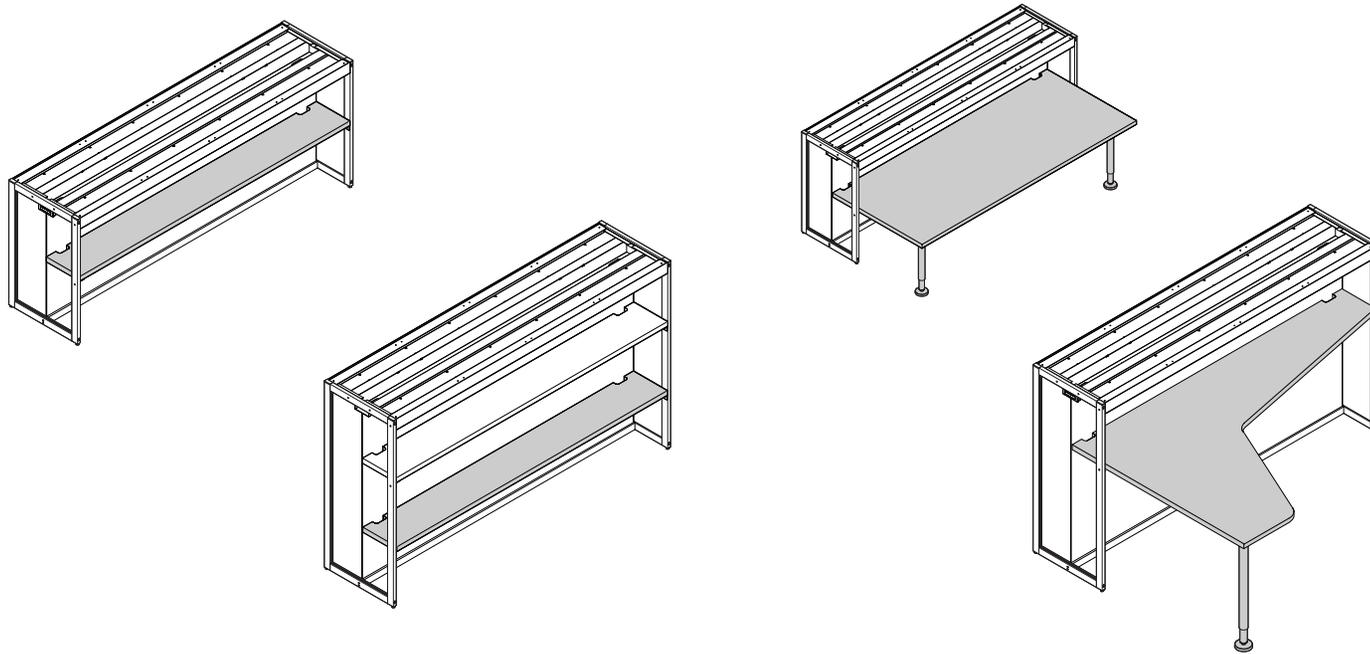


Table of Contents


Topic	Page
Attaching Mounting Brackets	2-3
Attaching a 9" Deep Shelf	4
Attaching a Shelf Greater than 9" Deep	4
Attaching a 45" x 70" Corner Counter Shelf	5
Installing Grommets	5

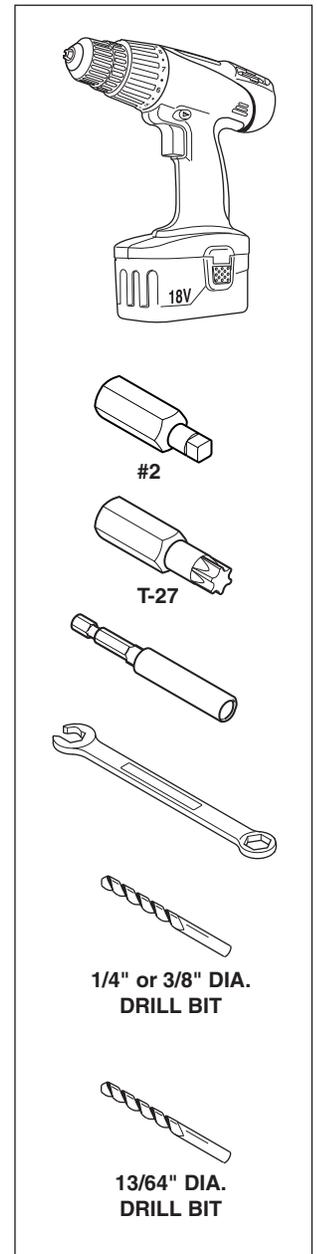


Attaching Mounting Brackets

turnstone


1. Attach mounting brackets to counter.
 - a) Bracket attached to center panel.
 - b) Bracket attached to end frame.
 - c) Back-to-back center panel.

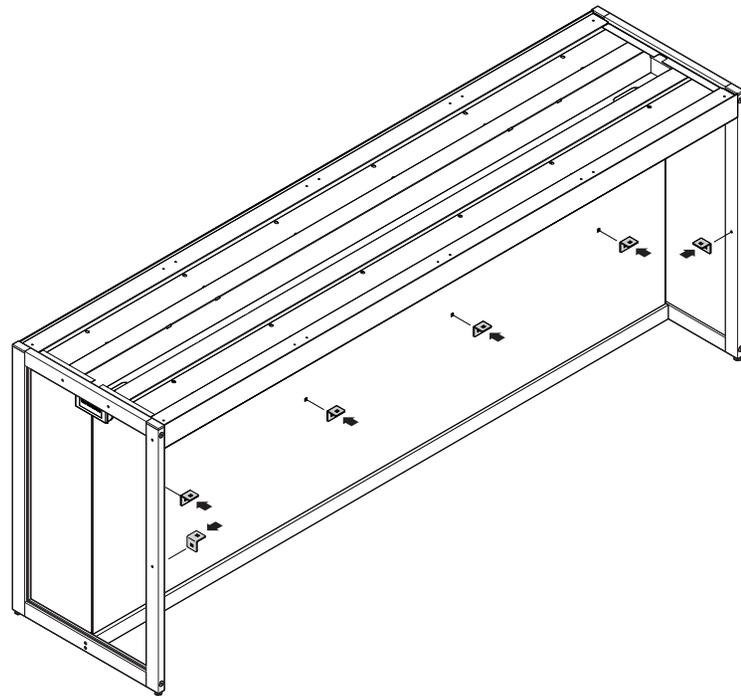


Bracket attached to center panel

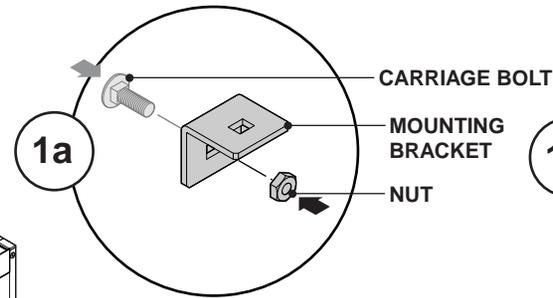

Bracket attached to end frame

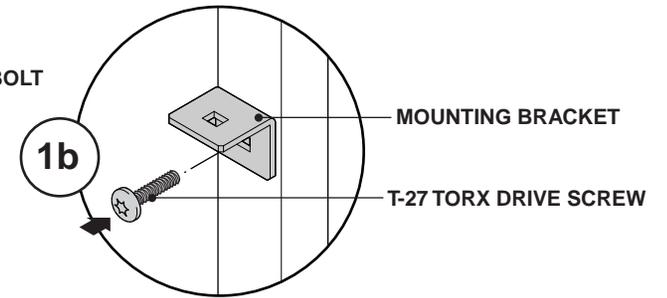

Back-to-back center panel

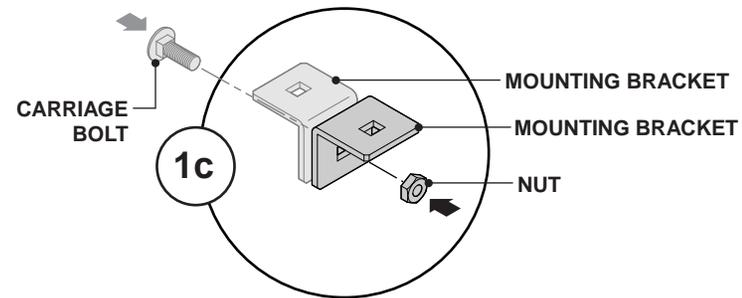



Attaching Brackets for a Second 9" Deep Shelf on the Same Side

(42" High Counter Only)



1. Position and mount four (4) brackets to the center panel. Locate one of the existing mounting brackets from the first shelf and measure directly downward 13-1/8" from the underside of the shelf and mark with a pencil (1a). Align top of mounting bracket with pencil mark and using a pencil mark hole in bracket (1b).

Drill a 1/4" dia. hole in laminate center panel or 3/8" dia. hole in steel center panel where mark is located (1c). Place mounting bracket over hole and attach using one (1) nut and one (1) carriage bolt (1d). Repeat this procedure for the other three (3) remaining mounting brackets.

2. Position and mount two (2) brackets to the end frames. Locate one of the existing mounting brackets from the first shelf and measure directly downward 13-1/8" from the underside of the shelf and mark with a pencil (1a). Align top of mounting bracket with pencil mark and using a pencil mark hole in bracket (1b). Drill a 13/64" dia. hole where mark is (1c). Place mounting bracket over hole and attach using one (1) screw (1d). Repeat this procedure for the other remaining mounting bracket.

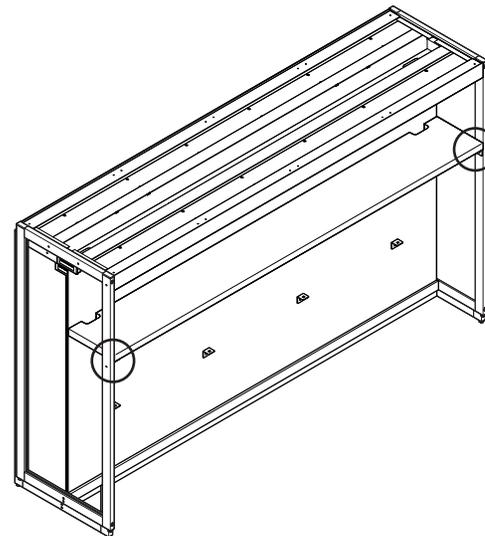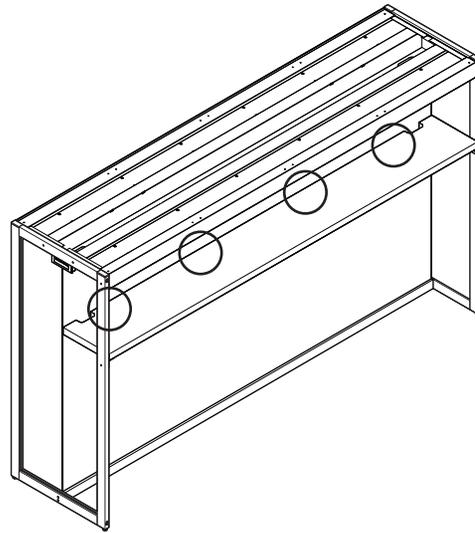


turnstone

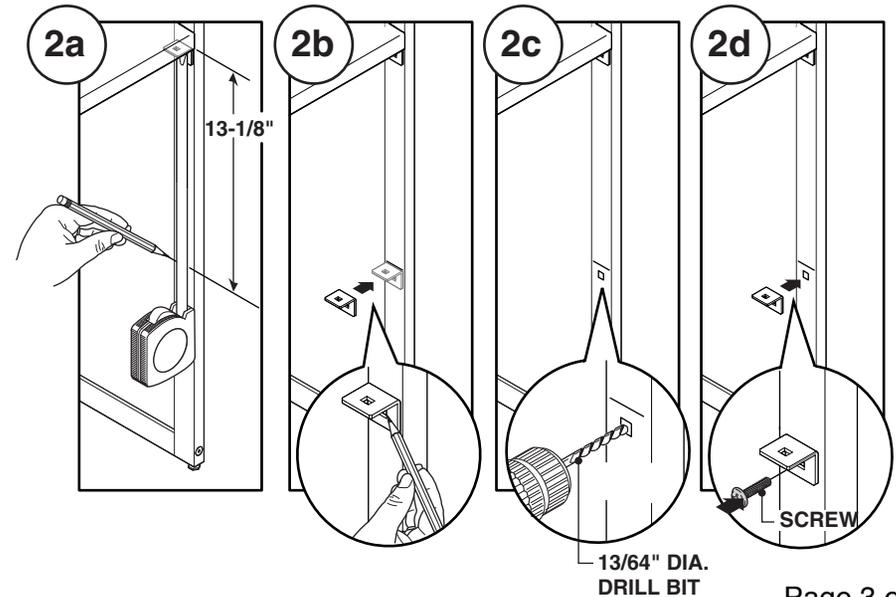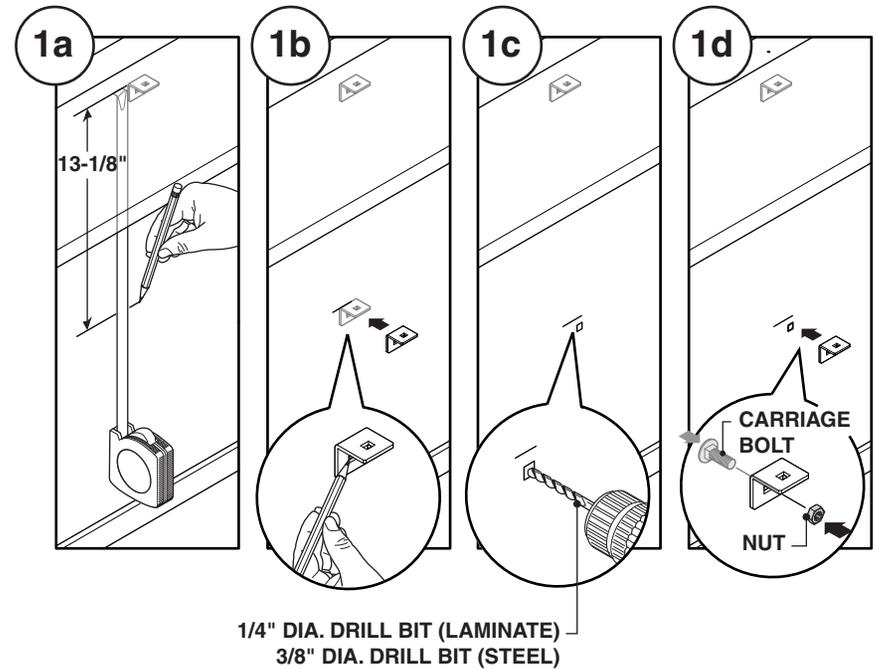


Attaching a 9" Deep Shelf

1. Position counter shelf onto mounting brackets (1a) and attach mounting bracket to counter shelf using six (6) screws (1b).

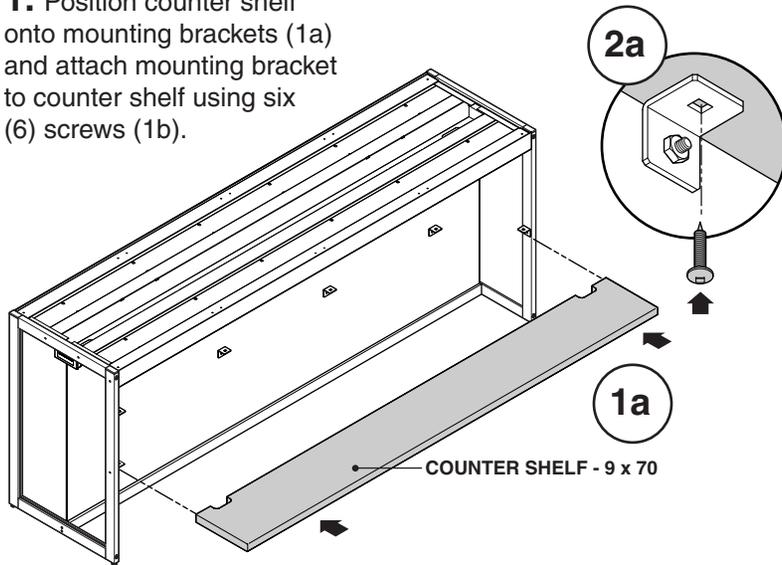


turnstone

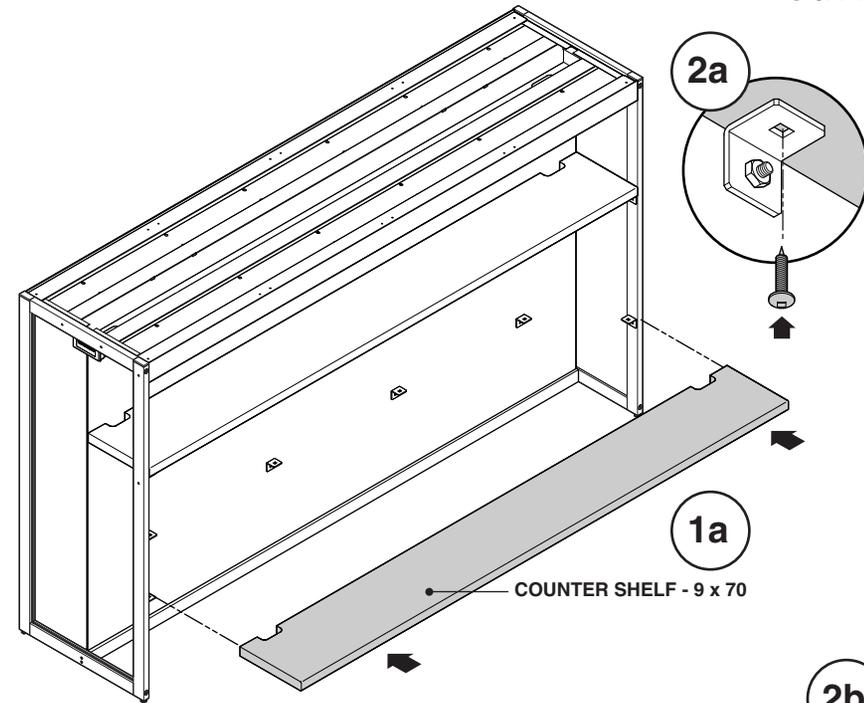


Attaching a Shelf Greater than 9" Deep

1. Flip counter shelf over and position the floor supports following the application rules in the specification guide (1a). Attach each floor support per the floor support assembly direction (1b).

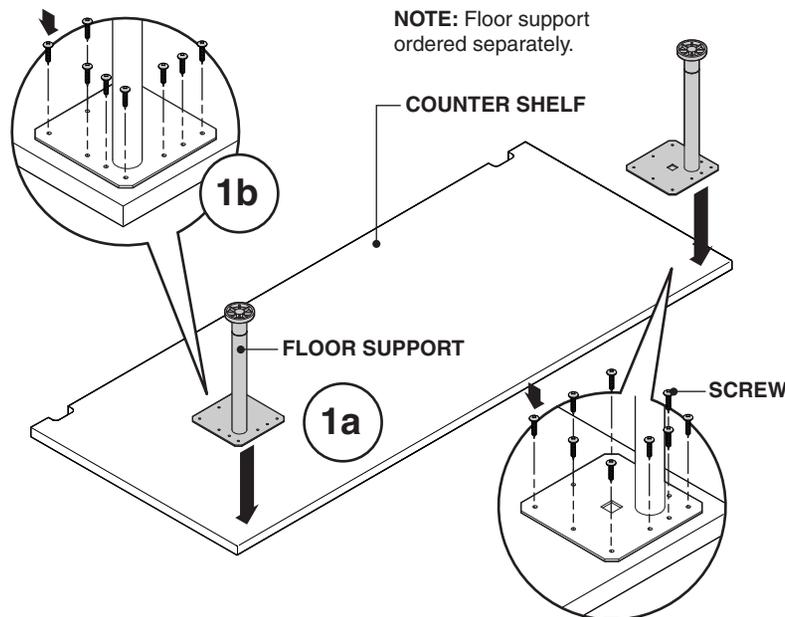

2. Flip counter shelf back over and position counter shelf onto mounting brackets (2a) and attach mounting brackets to counter shelf using six (6) screws (2b).

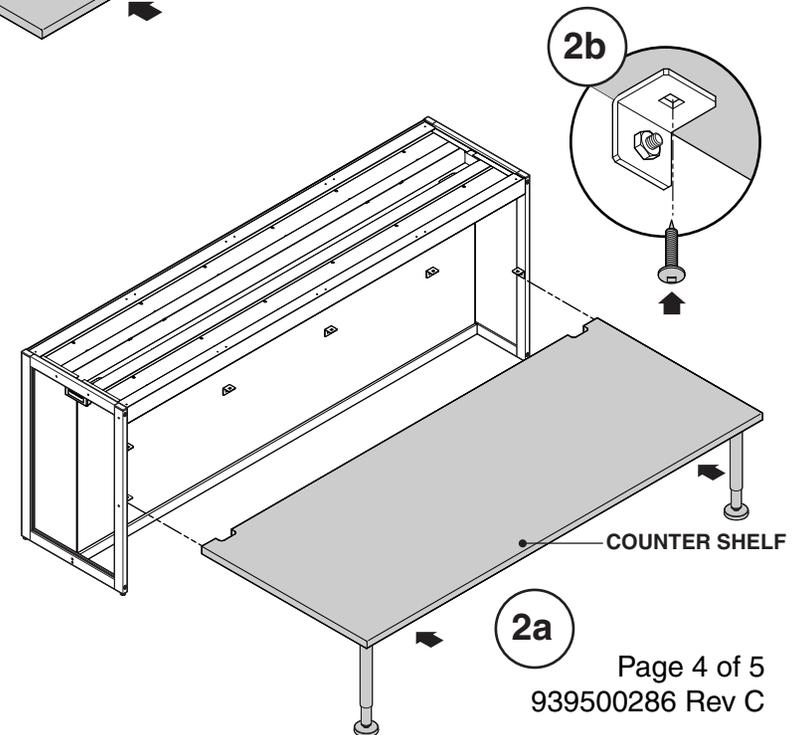


Attaching a 45" x 70" Corner Counter Shelf

1. Flip 45" x 70" corner counter shelf over and position one (1) floor support following the application rules in the specification guide (1a). Attach floor support per the floor support assembly direction (1b).

2. Flip 45" x 70" corner counter shelf back over.

3. Position 45" x 70" corner counter shelf onto mounting brackets (3a) and attach mounting brackets to 45" x 70" corner counter shelf using six (6) screws (3b).

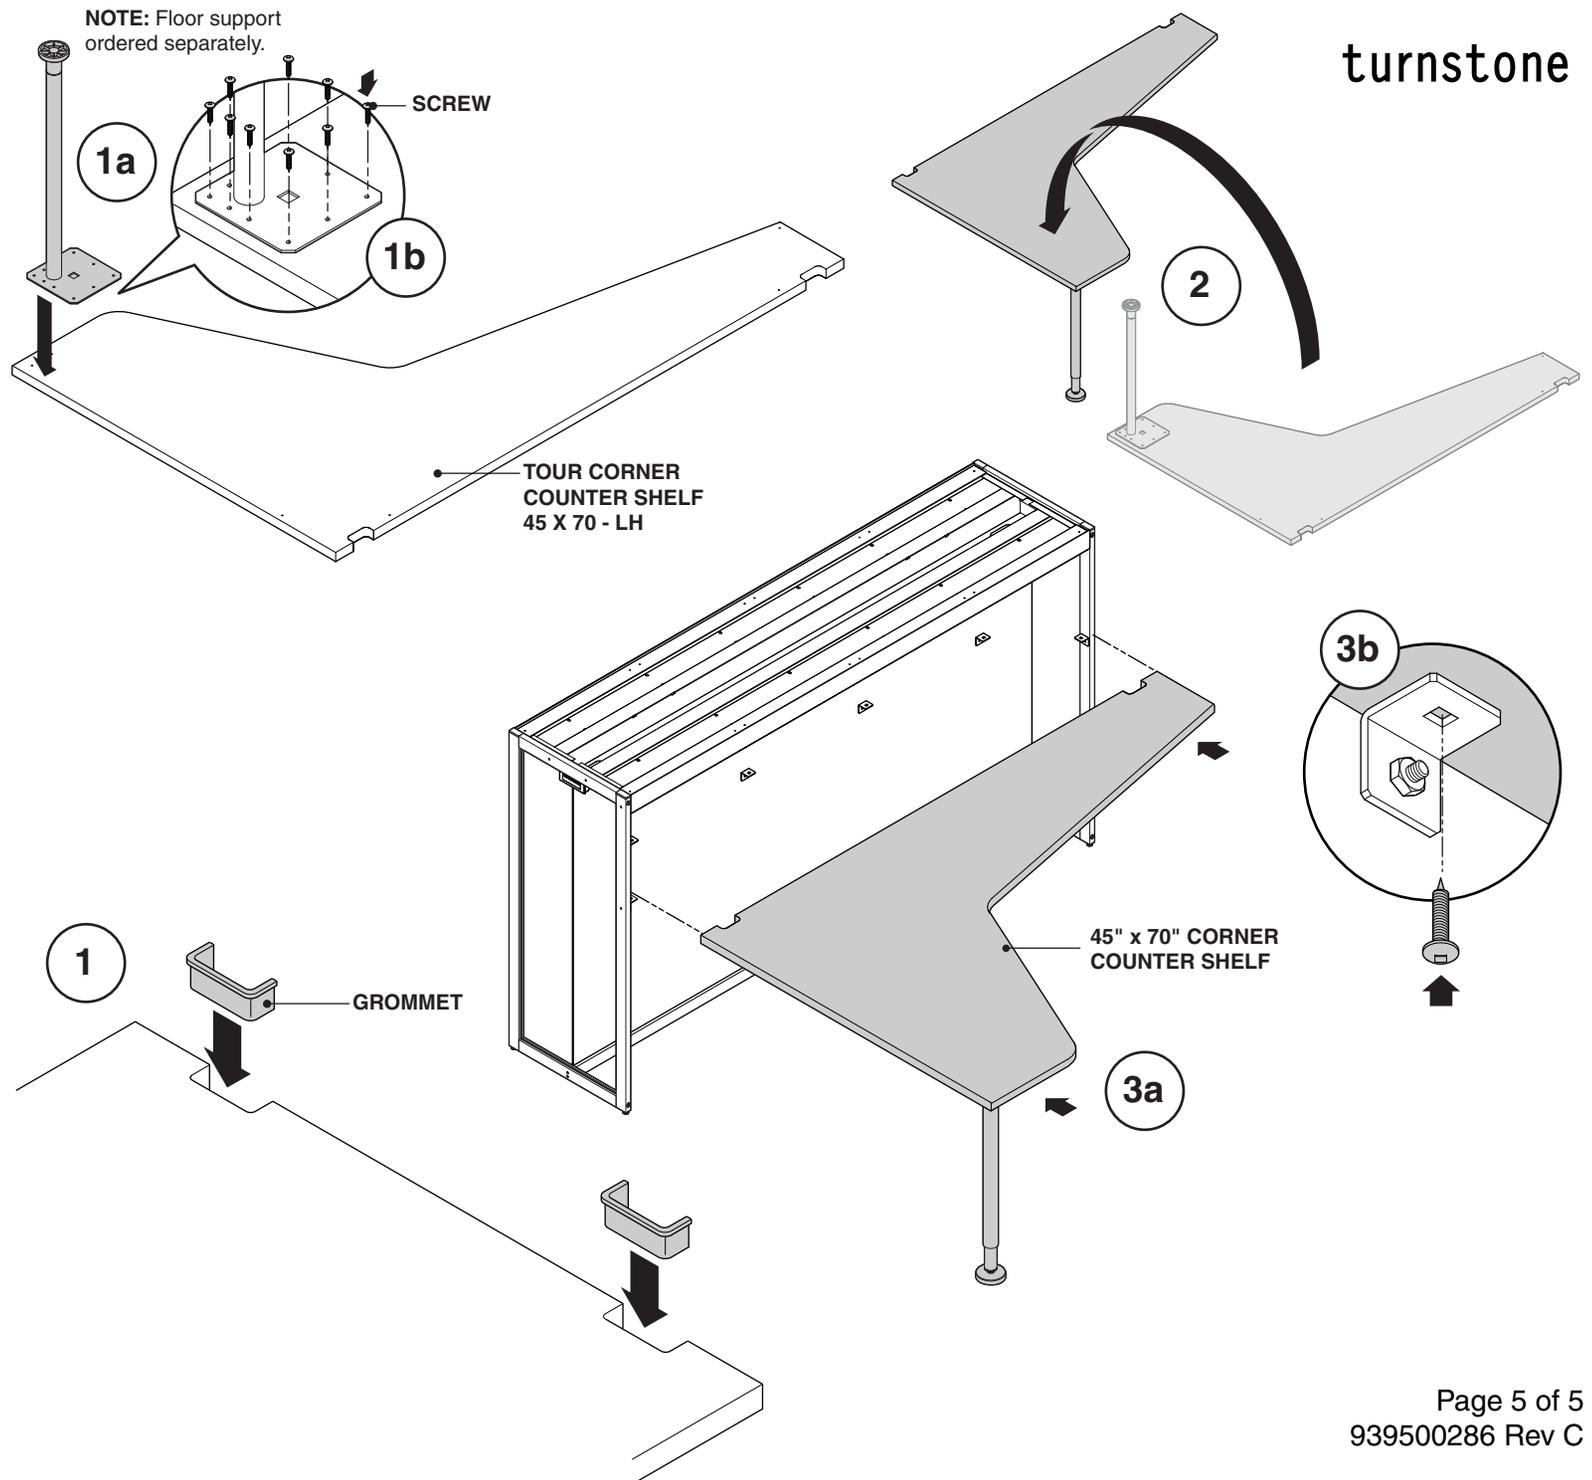

turnstone

Installing Grommets

1. Install grommets as shown. Push into position.