



Buoy™ Cushion

turnstone®


1. Remove liner from all pieces of tape on bottom of cushion.

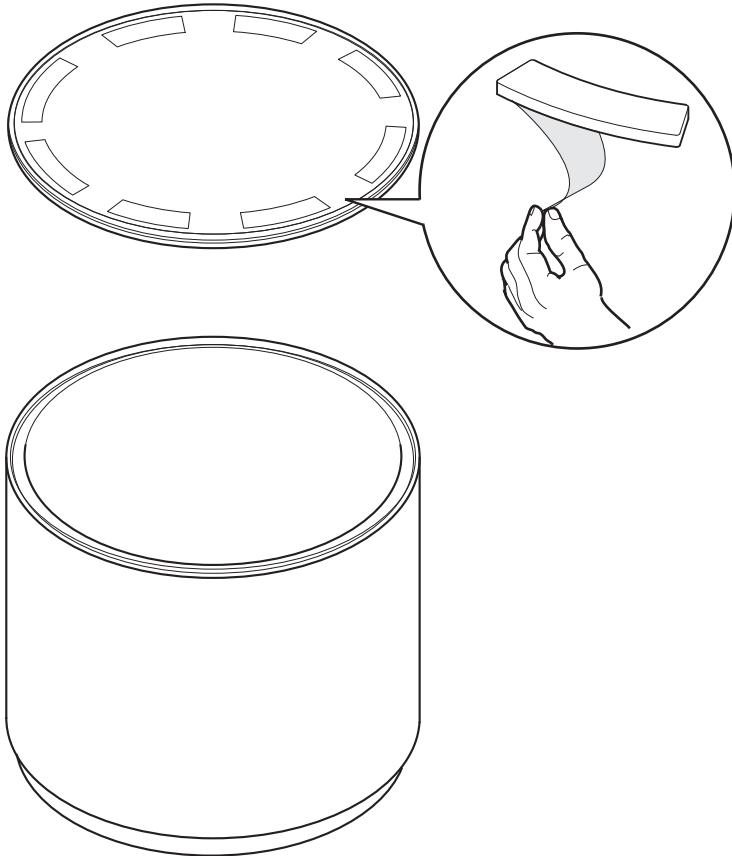

2. Position cushion on top of Buoy Stool. Ensure the cushion is fully inserted into the groove around the outside.

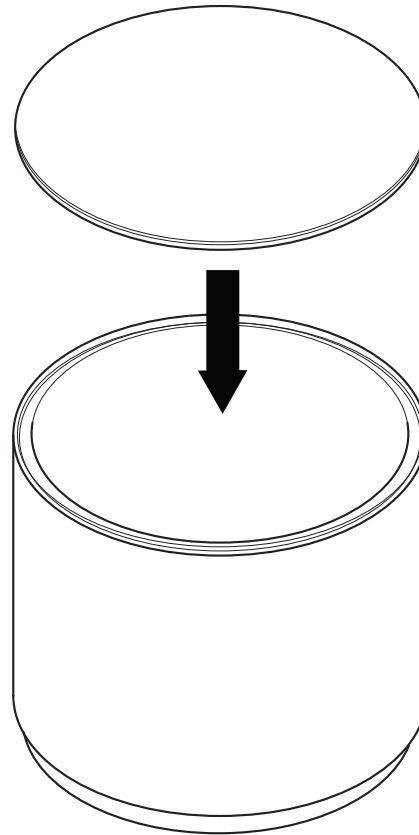

3. Apply pressure on top of cushion all the way around the outside to adhere tape to top of the Buoy Stool.

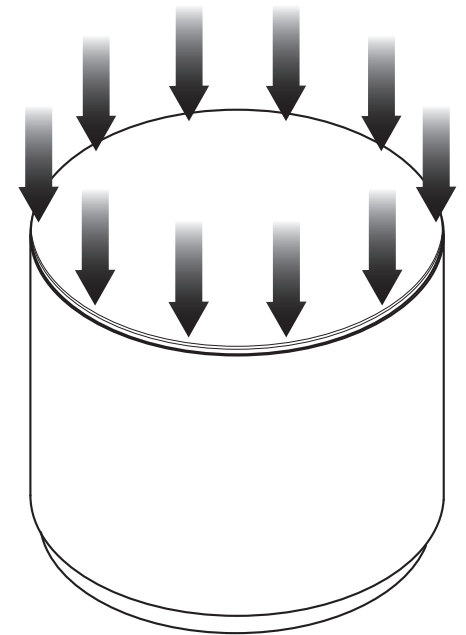

IMPORTANT NOTES:

1. DO NOT apply below 50° F.
2. DO NOT remove the cushion after applying. This will eliminate the effectiveness of the tape.