



TS 313A Jacket™ Chair

turnstone®

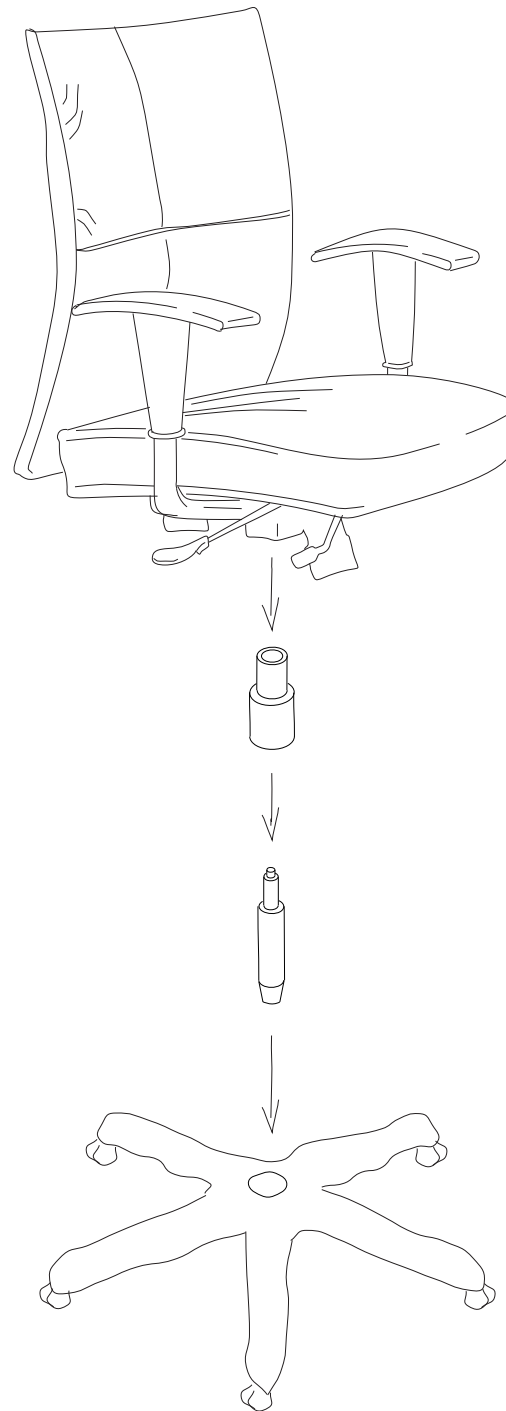


1. Insert cylinder into base

With base resting on floor, insert cylinder as shown.

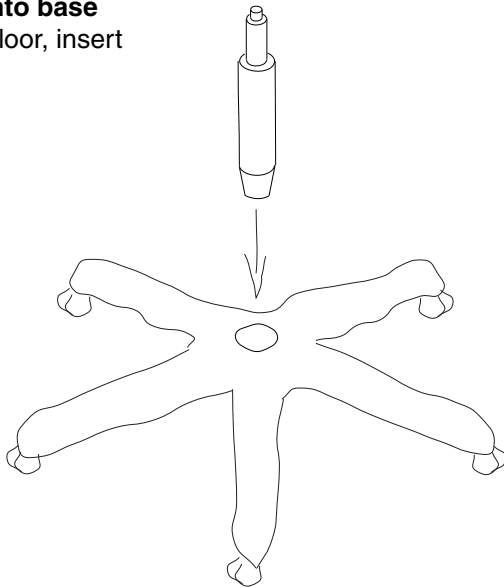


2. Assemble cylinder cover

Slide cylinder (A) up through cylinder (B) (see fig 1). Refer to fig. 2 for completed assembly.

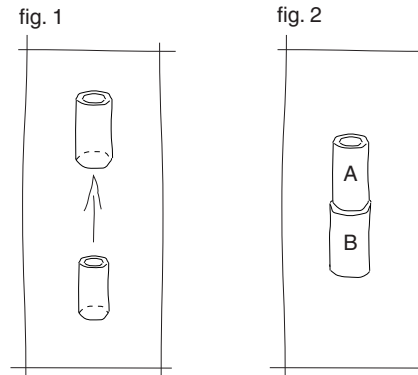

3. Place cover over the cylinder in base (fig. 3)

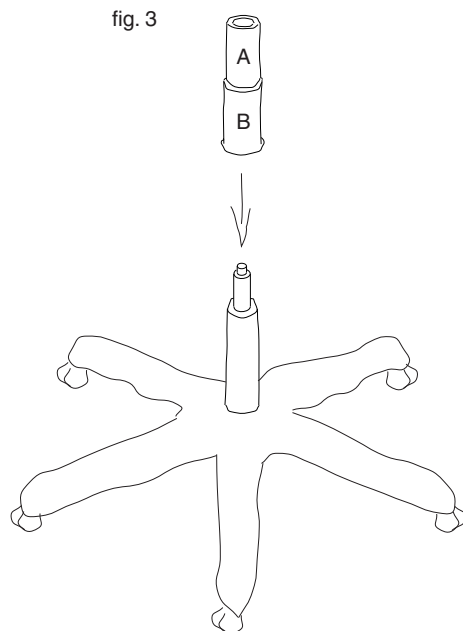

4. Attach seat to cylinder

Line up hole over cylinder, and place seat down. By grabbing the seat, firmly push the entire chair towards the floor to properly lock the tapers on the cylinder into the seat and the base.

