
Walden / Garland - Tackboard Installation for Service Modules

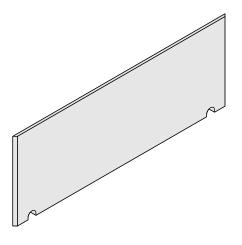




If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)

Or visit our website: www.steelcase.com

© 2003 Steelcase Inc. Grand Rapids, MI 49501 U.S.A.

Printed in U.S.A.

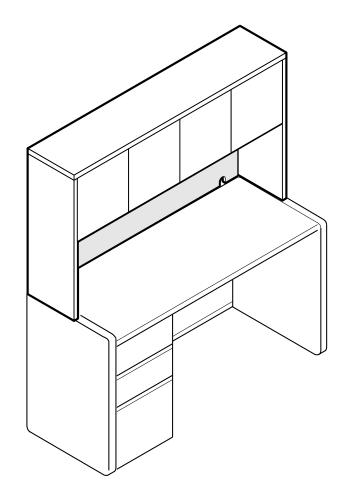

Steelcase

NOTE: Service module must be installed on base unit and wiring managers attached before installing a tackboard.

- **1.** Remove protective paper from velcro strips on the back of tackboard.
- **2.** Position the tackboard between the wire managers on back panels, with top of tackboard tight to binder bin and apply pressure at the position of pads.

