


- 1 Rotate the rail cleat into the c:scape rail, oriented forward, as shown.
- 2 Place the bracket assembly onto desk rail, over the cleat. Guide two (2) flat head screws through the bracket and turn screws until partially threaded into the cleat.

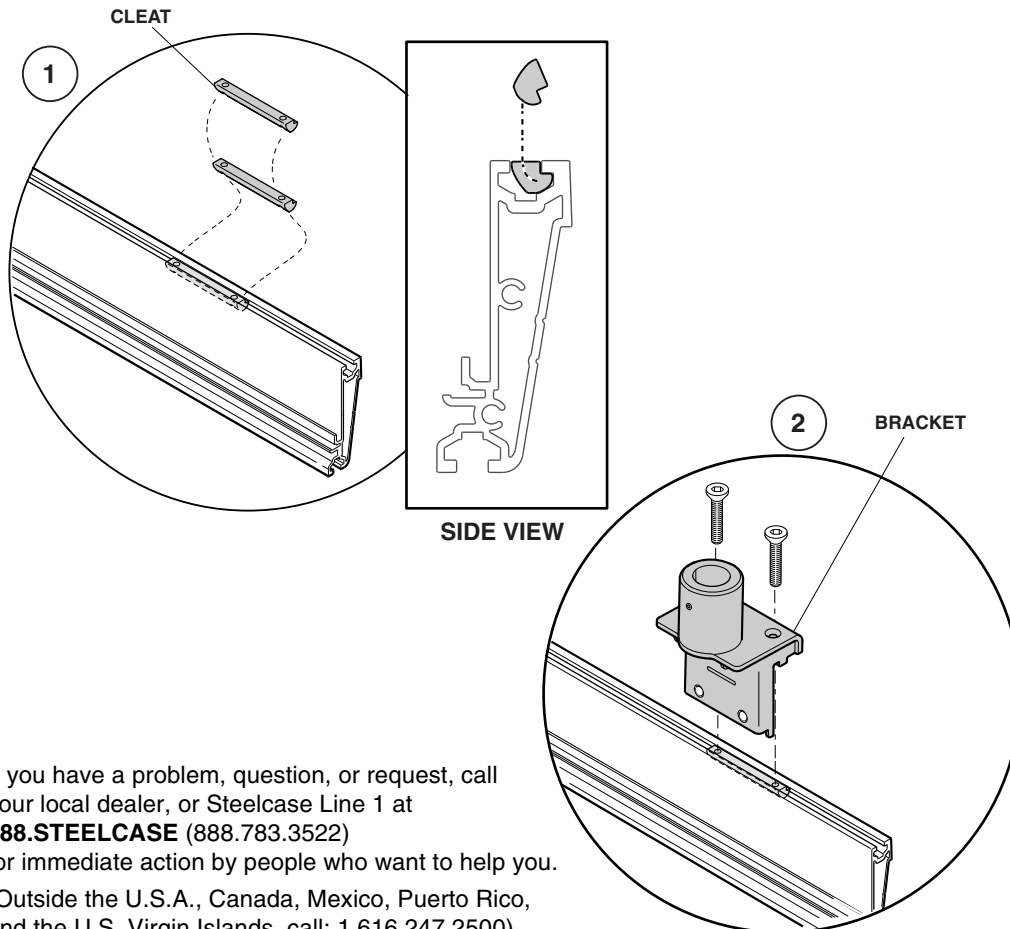

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you. (Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: www.steelcase.com

© 2015 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.

- 3 Guide the brace into place, beneath the worksurface. Install and fully tighten the two (2) screws. The two (2) flat head cleat screws may now be fully tightened.
- 4 Install CF series arm, as shown.

