



RECEPTACLE SPECIFICATIONS

RECTANGULAR POLE-MOUNTED RECEPTACLE

Capacity:

~ 1200 Pieces

Dimensions:

3 1/8" X 3 1/8" X 18 7/8"

Construction:

- Fire-safe aluminum
- 100% rust-resistant

Security:

Lockable

Plastic Liner:


Yes

Installation:

- Bolted (included)
- Steel-banded
(recommended and instructions included)

Special Features:

- Plastic Liner
- Easy installation and servicing
- Weather resistant
- Customization available (vinyl stickers)

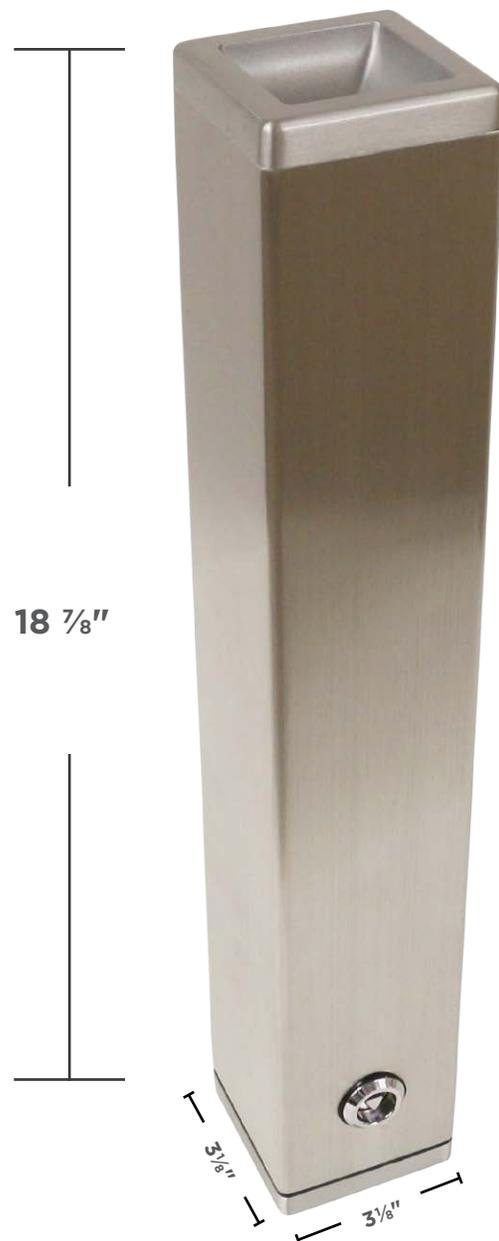



STEEL-BANDING INSTALLATION

MATERIALS NEEDED:

Purchasable: http://www.uline.com/BL_2905/Stainless-Steel-Strapping

ITEM #	DESCRIPTION	QUANTITY
S-14377	5/8" Stainless steel banding	Varies depending on number of receptacles and width of post
S-14378	5/8" Banding seals	Two seals per receptacle
H-1273	Tensioner to tighten bands around post	Varies on number of individuals installing

INSTALLATION INSTRUCTIONS:

1. Three vinyl stickers should be applied to each receptacle (these stickers are customizable)
2. Check each lamp pole or post against the installation map (varies per location)
3. Measure 40 inches from ground level. The bottom of the receptacle should be 40 inches from ground level when installed
4. Ensure that the receptacle is vertically level and the front faces the sidewalk
5. Measure the stainless steel band on the circumference of the pole
6. Pass the band through the top portion of the mounting bracket
7. Tighten the band
8. Repeat the steps above with the lower band
9. Check that the receptacle is tightly mounted by alternately placing light pressure against the sides of the receptacle
10. Cut off the excess banding



SERVICING INSTRUCTIONS

INSTRUCTIONS:

1. Receptacles must not reach a fill rate of more than 85% (safety precaution).
2. Receptacles must be closed securely after emptying.
3. Place a bag or bucket beneath the receptacle, raising the rear edge at least two inches behind the receptacle between the receptacle and the pole.
4. Hold the bag/bucket with one hand.
5. With the other hand unlock the receptacle door with the receptacle key. Please note that the servicer will be required to keep and safeguard the receptacle keys.
6. Tap the side of the receptacle gently to dislodge. Tap the side of the receptacle to release the liner containing waste.
7. Close and lock the receptacle.
8. Aggregate all collected gum waste and seal in trash bags.

