




PURLINMASTER[®]

INSTALLATION INSTRUCTIONS

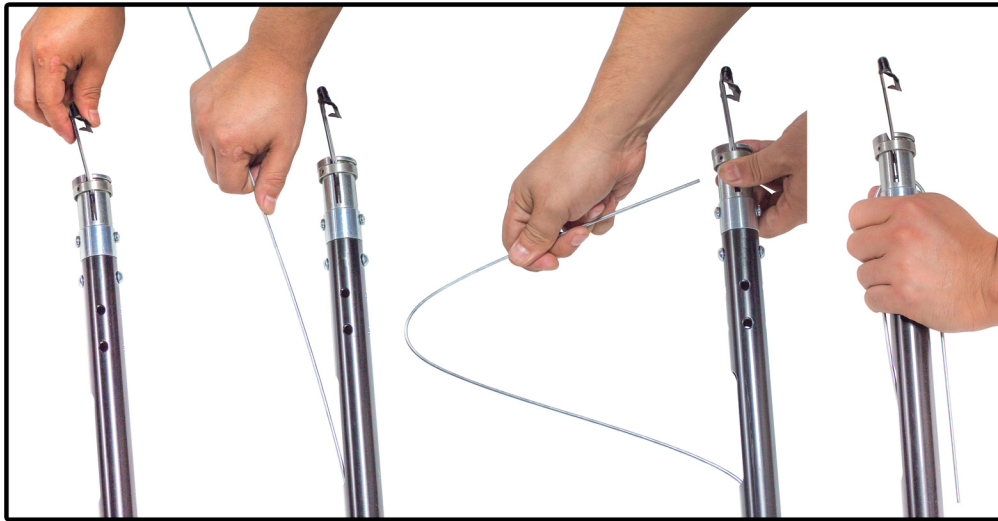

1. Insert joist clip into the LMP Purlin and thread the wire through the hole.



2. Stand in front of the joist.



3. Raise tool and fastener assembly above the flange



4. Push the joist clip against the flange, locking the teeth into the square hole. Pull straight down, engaging the joist clip to the flange.



5. To disengage the tool, walk forward to change the angle of the clip in the tool. Lift up after the clip has been set on the joist.



6. Lower the tool as shown above, trapping the wire in the ring.



7. While pulling down, rotate the pole tool using any standard power drill.

WARNING: Fasteners must be placed only as illustrated in the figures above. Use only in non-corrosive environments. Misuse or misapplication may cause failure resulting in property damage or bodily injury.

NOTE: Static load limits are for fasteners only. Structures to which the fastener is attached must be evaluated separately.

SAFETY INSTRUCTIONS: All safety regulations required by the job site must be observed. Special attention should be given to the following instructions:

- Observe all federal and local safety regulations.
- Wear a hard hat.
- Wear safety glasses with side shields.
- Wear gloves to avoid splinters and cuts.
- When working above ground level, be sure the structure will support your weight.
- Be aware of personnel working above and below.